
Meridian 1

Software Conversion Procedures

Document Number: 553-2001-320
Document Release: Standard 23.00
Date: January 2002

Copyright © 1989–2002 Nortel Networks
All Rights Reserved

Printed in Canada

Information is subject to change without notice. Nortel Networks reserves the right to make changes in design or components as progress in engineering and manufacturing may warrant. This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC rules, and the radio interference regulations of Industry Canada. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

SL-1 and Meridian 1 are trademarks of Nortel Networks. Intel and Pentium are trademarks of Intel Corporation. cPCI is a trademark of PCI Industrial Computer Manufacturers Group.

Revision history

January 2002

Standard 23.00. This document is up-issued to support Meridian 1 Release 25.40, and includes Call Processor Pentium (CP PII) and Fibre Network Fabric (FNF) for Option 81C.

April 2000

Standard 22.00. This is a global document and is up-issued for X11 Release 25.0x.

June 1999

Standard, release 21.0x. This document is reissued to include information on automatic inline conversion from Release 19.0x or later to Release 24.0x

March 1999

Standard, release 20.0x. This document is reissued to include information on the NT5D03 Call Processor card.

April 1998

Standard, Release 19.0x. Reissued for technical content.

October 1997

Standard, release 18.0x. This document is reissued for technical content and to include information on the NT5D10 Call Processor and NT5D61 Input Output Disk Unit with CD-ROM (IODU/C) cards.

August 1996

Standard, release 17.0x. This document is reissued for technical content.

August 1996

Standard, release 16.0x. This document is reissued to include information on the NT9D19 Call Processor Card for Options 51C and 61C and X11 Release 22.0x. Changes to technical content are noted by revision bars in the margins.

December 1995

Standard, release 15.0x. This document is reissued to include information on the NT9D19 Call Processor Card and upgrade procedure. Changes to technical content are noted by revision bars in the margins.

July 1995

Standard, release 14.0x. This document is reissued to support Option 81C and X11 Release 21.0x. Updates are noted with revision bars in the margins.

December 1994

Standard, release 13.0x. This document is reissued for technical content.

December 1994

Standard, release 12.0x. This document is reissued to include information on the Small systems Multi-Disk Unit (SMDU). Changes to technical content are noted by revision bars in the margins.

April 1, 1994

Standard, release 11.0x. This document is issued to include changes for Option 61C, and to include information from Product Bulletin 93054 (May 1993). Revisions are noted with change bars in the margin.

October 31, 1993

Standard, release 10.0x. This document is updated to include information for Voice Mailbox Administration and the 12-Mbyte memory card. Changes are noted with revision bars in the margins.

August 1, 1993

Standard, release 9.0x. This document is updated to include information for X11 Release 19.0x. Changes are noted with revision bars in the margins.

April 1, 1993

Standard, release 8.0x. This document is reissued to include updates for X11 Release 18.0x, and Option 81 information. A new parallel reload procedure has been added for Option 81 systems. This version includes information from Product Bulletin 93007 (January 1993).

December 31, 1992

Standard, release 6.0x. This document was reissued to include updates for X11 Release 18.0x. This release includes information from Product Bulletins 90046 (September 1991) and 91060 (November 1991).

Release 7.0x was omitted.

December 1, 1991

Standard, release 5.0x. This document was reissued for updates and changes for X11 Release 17.0x.

July 31, 1991

This document is reissued for reorganization and updates to the conversion procedures.

December 20, 1990

Standard, release 4.0x. This document was reissued for updates and changes for X11 Release 16. 0x.

August 28, 1990

Standard, release 2.0x. This document was reissued for updates and changes for X11 Release 15.

Release 3.0x. was omitted.

December 20, 1989

Standard, Release 1.0x.

Contents

About this document	9
Conversion notes	11
Preconversion procedure	25
IODU/C software conversion	31
IODU/C Software Installation Tool	81
cPCI® MMDU software conversion	107
Increasing NT9D19, NT5D10 CP and NT5D03 CP memory	151
Using the Distributor Keycode Application	169
Using the Keycode Retrieval Utility	189
Creating keycode diskettes	199
Increasing A0810496, and NT4N64 CP PII memory	201
Postconversion procedure	251
Upgrading to a new Call Processor card	259
CD-ROM Software Installation Tool	277

About this document

This document applies to Meridian 1 Internet Enabled systems.

This document is a global document. Contact your system supplier or your Nortel Networks representative to verify that the hardware and software described is supported in your area.

Who should use this document

This document is intended for individuals responsible for software conversion and memory upgrades.

How this document is organized

Use this document to convert Release 19.0x or later software to Release 25.xx on Options 51C, 61C, 81, 81C, and 81C Call Processor Pentium II® (CP PII). For software conversion procedures to Release 19.xx, refer to the 553-2001-320 Software Conversion Procedures NTP for software Release 24.

This document is for software conversion and memory upgrades only. The procedures in this document are not for any other purpose.

Specific machine types, as they are supported by software releases, are shown in Table 3 on page 22.



CAUTION
Loss of Data

Do not convert a system unless you are thoroughly familiar with it and with conversion procedures. You must read through the procedure before starting.

Note: Converting software on single CPU systems disrupts call processing and allows service only to those telephones connected to Power Failure Transfer Units (PFTUs). Established calls may not be affected.



CAUTION WITH ESDS DEVICES

To avoid damaging equipment from electrostatic discharge, wear a properly connected anti-static wrist strap when working on Meridian 1 equipment.

Follow Pre-conversion and Post-conversion procedures for every system conversion.

Throughout this document the term *Media* refers to tape, disk, or CD-ROM, whichever applies to your system.

The term *Source* refers to the software that you are currently running. *Target* refers to the new software that you are converting to.



**CAUTION
Loss of Data**

Read “Conversion notes” on page 11 before performing any operations.

It contains information crucial to the conversion process.

Conversion notes

Contents

The following are the topics in this section:

Conversion media.	13
Software packaging.	14
General conversion information.	14
DN Expansion.	15
Upgrading from disk drives to CD-ROM.	15
Integrated Services Digital Network (ISDN).	16
ISDN Calling Line ID (CLID) enhancements.	16
Converting ISDN systems.	17
D-channel monitor.	18
Incremental Software Management.	18
Patches.	18
Software patches	18
Loadware patches using DPSDL	19
Release 25.0x.	19
Software release supported by machine type.	22

Reference list

The following are the references in this section:

- *Capacity Engineering* (553-3001-149)
- *Features and Services* (553-3001-306)
- *ISDN Basic Rate Interface: Product Description* (553-3901-100)

Conversion procedures vary with the system type and Source release of software.

Table 1 on page 12 shows the software releases supported by Automatic Inline Conversion.

Table 1
Automatic Inline Conversion

From (minimum) Source release/issue	Directly to Target release
10.xx	14, 15
11.xx	12, 13, 14, 15
12.xx	13, 14, 15
13.xx	14, 15
14.xx	15
15.xx	16, 17, 18
16.xx	17, 18
17.xx	18, 19
18.xx	19
19.xx	20, 21, 22, 23, 24, 25
20.xx	20, 21, 22, 23, 24, 25
X81 Phase 7 A, B, or C	20, 21, 23, 24, 25
X81 Phase 8, A0, A1& A2	20, 21, 23, 24, 25
X81 Phase 8, B0, B1& B2	20, 21, 23, 24, 25
21.xx	22, 23, 24, 25
22.xx	23, 24, 25
23.xx	24, 25
24.xx	25

It may be more time- and cost-effective to simply load new software and reenter system data, rather than going through all the procedures that a conversion requires. To determine the best option and how to take advantage of Target software features and services, consult your Nortel Networks representative.



CAUTION
Loss of Data

Always load LD 43 from the Source (current) media. That is, the media containing the software currently running your system.

The media received contains the conversion program (LD 66) for converting your current data to the format required for the next release. Check the labels on the media for accuracy. The conversion label contains the following information:

X mmm Z nnn where

X = Machine type number (see Table 3 on page 22)

mmm = Source software release and minimum issue

Z = Conversion tape vintage

nnn = Target software release and minimum issue

Conversion media

For software Release 24 and later systems, the following media is required for new software installations:

- CD-ROM— A generic CD-ROM that contains all software generics.
- Security device — Provides a unique program for each system. The device does not contain feature or software release specific information.
- Install diskette — Activates the Software Installation Tool. The Software Installation Kit contains three Install diskettes to support each Call Processor card. Use the Install diskette that corresponds with your CP card type.
- Keycode diskette — Consists of “keycodes” that contain software feature data. The keycodes must validate against the security device.

- 2 MB customer database diskettes — A blank DOS formatted disk for archiving the customer database.
- Database transfer utility diskette — Supports the transfer of 4 MB databases to 2 MB.

The keycode contains the software Release information. For new features or Incremental Software Management (ISM) limits, a new keycode is required (a new CD-ROM, security device, or install diskette is not required).

Software packaging

Remember to check your system packages prior to conversion. Be sure Target software contains all the packages required to support system operation.

General conversion information

This document supports conversions for STE, NT, RT, XT, 21E, 51, 51C, 61, 61C, 71, 81, 81C, and 81C CP PII systems only.

Note: Conversion from X37 to the latest software release is not supported.

Be sure your system has enough memory to complete the conversion. If not, go to “Increasing NT9D19, NT5D10 CP and NT5D03 CP memory” on page 151 before you begin. Refer to *Capacity Engineering* (553-3001-149) for details concerning system capacity requirements.

To monitor the CPUs during parallel reload procedures, install a temporary Serial Data Interface (SDI) card, and connect a local TTY (or modem for remote TTY access). Refer to the parallel reload procedures for more information.

In systems equipped with superloops, calls will drop during initialization when Peripheral Software Download (PSDL) occurs. The Superloop Network (NT8D04) and Controller (NT8D01) cards download peripheral software prior to initialization completion. This may extend the duration of the system initialization when completing a conversion.

When a software upgrade is performed to add new feature packages, a sysload or parallel reload is required to enable the new software.

If a Force Download occurs during a parallel reload, initialization can take up to 15 minutes. Calls in process will be interrupted.

When QPC742D FDI Cards are used, install disks in both disk drives before powering up the system. This is not required with later vintages of the FDI card.

If you have Auxiliary Processors working with your system, be sure they are powered up after you complete your conversion.

**CAUTION****Loss of Data**

Do not attempt backward data dumping between software versions, upissues, or releases. It will corrupt your data.

DN Expansion

Software conversion is designed to convert data blocks with the smaller DN fields on the Source disk to data blocks with expanded DN fields, irrespective of the DN Expansion package on the Target disk/system.

CDR Expansion is not required to enable DN expansion. However, in order for Call Detail Records to accurately reflect system activity, CDR Expansion must be enabled as well as DN Expansion. If DN Expansion is equipped and CDR Expansion is not, system operation is not affected, but CDR records will be inaccurate.

Upgrading from disk drives to CD-ROM

Upgrading a drive unit to CD-ROM requires the existing 4 MB database to be converted to 2 MB. The database is converted to 2 MB is using one of the following methods:

- using the Database Transfer utility (for systems equipped with IOP/CMDU or separate IOP and CMDU cards only)

- sending the database to Nortel Networks for conversion
- using the “Copy Database from Redundant Disk” command in the Meridian 1 Software Installation Tool (for redundant systems equipped with IOP/CMDU or separate IOP and CMDU cards)

Integrated Services Digital Network (ISDN)

Any ISDN site upgrading to software Release 15 or higher must be configured with the QPC757 vintage C, D-channel Handler (DCHI) card.

When performing a parallel reload, ISDN Primary Rate Interface (PRI) calls are dropped during initialization of Target software.

Software Release 18 and later support the NT6D80 Multi-purpose Serial Data Link (MSDL) card for D-channel interfaces.

Software Release 18 and later do not support even numbered port assignments on the NT6D11 International ISDN D-channel card. The even port assignments must be updated to odd port assignments in LD 17 prior to converting. If not done, the D-channel will not be reestablished after service change. Only QPC757 D-channel mode is supported.

Options 51C, 61C, and 81 require clock controller QPC471 vintage H or later, or QPC775 vintage C or later.

Option 81C requires clock controller QPC471 vintage H or later, or QPC775 vintage E or later.

ISDN Calling Line ID (CLID) enhancements

The Calling Line ID Enhancements feature delivers enhanced functionality pertaining to the construction and generation of Calling Line ID, and allows more program flexibility for Meridian 1 sets pertaining to CLID.

Prior to software Release 22.0x, CLID supported a single Listed Directory Number (LDN), a single Home NXX, and single Home Location Code. The Calling Line ID was built from key 0 of a set, or the LDN.

The CLID enhancement parameters have been enhanced to include multiple NXXs, multiple Home Locations Codes (HLOCs), multiple Numbering Plan Areas (NPAs), multiple Local Steering Codes (LSCs), and multiple Listed Directory Numbers (LDNs). The calling Line ID enhancement now allows more flexible CLID generation than prior releases.

With the CLID Enhancement feature, the system now supports:

- A new table driven feature with up to 4000 entries.
- Any entry number can be programmed against any DN on a per DN basis.
- Existing LDN can be used on a per DN key, per set basis.
- The existing Individual Directory Number (IDN) key of an ACD set can be sent as the CLID.
- The active DN key determines the CLID that is sent for conference and transfer.
- Supports the flexibility of 2-3 or 5-7 digits DNs.

During conversion, two CLID entries (0 and 1) are created in the customer data block. The entries are configured with ISDN CLID information from the existing customer data block, such as HNPA, HNXX, HLOC, etc. Entry 0 is used for the keys/sets that have a DID number. Entry 1 is used for the keys/sets that do not have a DID number.

Refer to *Features and Services* (553-3001-306) for more information on the CLID Enhancement feature.

Converting ISDN systems

New software may contain changes to the ISDN D-channel parameters that are downloaded to the DCHI or MSDL card. The system software automatically downloads the new parameters upon SYSLOAD if a parallel reload is not performed.

Ensure that the Release ID in the D-channel parameters (LD 17) at the far end is changed to the lowest release in your site configuration.

When a DCHI port is configured as a TTY port, INI messages may be truncated when printed after sysload. System performance is not affected, but you should view your history file for the entire message.

D-channel monitor

When the D-channel monitor is software-enabled and deactivated with a maintenance telephone, a data dump and sysload reactivate the monitor. To avoid this situation, software-disable the D-channel monitor prior to datadump and sysload.

Incremental Software Management

Incremental Software Management (ISM) defines the maximum number of Terminal Numbers, Automatic Call Distribution (ACD) Directory Numbers, ACD positions (agents and supervisors), and AST sets allowed in a system. Before upgrading to software Release 15.55 or higher, read the ISM section in *Features and Services* (553-3001-306).

Software Release 19.0x and later include Meridian Packet Handlers (MPH) as part of ISM tracking.

Note: DSL, LTID, and MPH are part of ISDN Basic Rate Interface (BRI). Refer to *ISDN Basic Rate Interface: Product Description* (553-3901-100) for more details.



CAUTION **Loss of Data**

With Incremental Software Management (ISM) in software Release 15.55 and higher, if SYS message 4327, 4328, 4329, or 4330 appears at sysload. Reload **Source** system disks. Order ISM disks with sufficient system parameters configured.

Patches

Software patches

For Options 51C, 61C, 81, 81C, and 81C CP PII systems. Software patches are deleted when converting to a new software release, or when performing a software upissue. Software patches are not deleted when the same software release is reinstalled in the system.

If a software patch is included in your software, a plus sign (+) will appear next to the software issue number in LD 22.

Loadware patches using DPSDL

For Options 51C, 61C, 81, 81C, and 81C CP PII systems. Loadware patches are deleted when converting to a new software release, or when performing a software upissue. Loadware patches are also deleted when the same software release is reinstalled in the system.

If there are one or more loadware patches fully installed in your software, a plus sign (+) will print next to the PSWV version and the modified loadware issue number in LD 22.

Loadware patches are only fully installed once the psdl.rec successfully rebuilds and the system initializes (INI) and reboots.

Release 25.0x

Release 25 supports Automatic Inline Conversion from Release 19, 20, 21, 22, 23, 24, X81 Phase 7 and X81 Phase 8 in system Options 51C, 61C, 81, 81C, and 81C CP PII. Software installation and conversion is supported on CD-ROM using an IODU/C or MMDU drive.

Release 25 introduces Fiber Network Fabric. Fiber Network allows the expansion of Meridian 1 Option 81C and 81C CP PII systems from five to eight Network groups. The Intergroup cards and module in current Meridian 1 systems are replaced by a Dual Ring fiber optic network. This Fiber Network provides complete non-blocking communication between the network groups, which eliminates the incidence of busy signals for calls switched between groups.

With release 25, Option 51C, 61C, 81, and 81C systems can use any of the following processors available:

- 68060E NT5D03 CP card
- 68060 NT5D10 CP card
- 68040 NT9D19 CP card

With release 25, Option 81C CP PII systems can use any of the following processors:

- A0810496 CP PII card
- NT4N64 CP PII card

Important - Release 25 introduces new Flash and DRAM memory requirements. Call Processor cards that meet the “total” memory requirement, may not meet the individual Flash and DRAM memory requirement. Refer to Table 2 on page 21 for the Release 25 flash and DRAM memory requirements.

Table 2
Release 25 memory requirements

System type	Minimum memory requirement		
	Flash memory requirement	DRAM memory requirement	Total memory requirement
Option 51C/61C	32 Mbyte	48 Mbyte	80 Mbyte
Option 81/81C <ul style="list-style-type: none"> Option 81/81c systems operating on Call Processor 68060 or 68060E with five or fewer network groups (including Fiber Network Fabric systems) any Option 81/81C systems operating on Call Processor 68040 	32 Mbyte	64 Mbyte	96 Mbyte
Option 81/81C <ul style="list-style-type: none"> Option 81/81c systems operating on Call Processor 68060 or 68060E with six or more network groups 	32 Mbyte	80 Mbyte	112 Mbyte
Option 81C CP PII <ul style="list-style-type: none"> Option 81C CP PII systems with six or more network groups recommended using the NT4N64 processor. 			256 Mbyte
Note: CP PII systems are shipped in a 128 Mbyte (A0810496) or 256 Mbyte (NT4N64) configuration. This memory cannot be upgraded in the field.			

Software release supported by machine type

Table 3 on page 22 shows the software release associated with each system and its available release levels. The last two digits in the “software system number” column indicate the software generic; the first one or two digits indicate the system type. For example, the system number for system Option 81C is 1911.

Table 3
Software generic by machine type (Part 1 of 3)

System type	Software system number	Lowest supported release	Highest supported release
STE	1511	18	21
NT	1111	8	21
XT	1211	8	21
RT	1311	12	21
Option 21E	1511	18	21
Option 51	1111	15	21
Option 51C equipped with NT6D66 CP card	1711	20	23
Option 51C equipped with NT9D19 CP Card	2211	22	25
Option 51C equipped with NT5D10 CP card	2411	23	25
Option 51C equipped with NT5D03 CP card	2811	23.5X	25
Option 61	1111	15	21
Option 61C equipped with NT6D66 CP card	1811	19	24
Option 61C equipped with NT9D19 CP card	2311	22	25

Table 3
Software generic by machine type (Part 2 of 3)

System type	Software system number	Lowest supported release	Highest supported release
Option 61C equipped with NT5D10 CP card	2511	23	25
Option 61C equipped with NT5D03 CP card	2911	23.5X	25
Option 81 equipped with NT6D66 CP card*	1611	18	24
Option 81 equipped with NT9D19 CP card*	1911	21	25

Table 3
Software generic by machine type (Part 3 of 3)

System type	Software system number	Lowest supported release	Highest supported release
Option 71	1211	15	21
Option 81 equipped with NT5D10 CP card*	2611	23	25
Option 81 equipped with NT5D03 CP card*	3011	23.5X	25
Option 81C equipped NT6D66 CP card**	1611	21	24
Option 81C equipped with NT9D19 CP card**	1911	21	25
Option 81C equipped with NT5D10 CP card**	2611	23	25
Option 81C equipped with NT5D03 CP card**	3011	23.5X	25
Option 81C CP PII equipped with A0810496 CP PII card***	3311	25.xx	25.40
Option 81C CP PII equipped with NT4N64 CP PII card***	3311	25.xx	25.40
<p>Note 1: *Option 81 systems require software option 298.</p> <p>Note 2: **Option 81C systems require software option 299.</p> <p>Note 3: *** Option 81C CP PII systems require software option 368.</p>			

Preconversion procedure

Contents

The following are the topics in this section:

Preconversion steps	26
---	----

Reference list

The following are the references in this section:

- *Maintenance* (553-3001-511)

Read the Conversion notes section in this document before beginning your conversion procedures. The conversion procedure used depends on the release of the Source and Target software. Make sure you have all the necessary hardware and software. Save a copy of your data dumped **Source** software until you are sure that all site data converted successfully.

Use this procedure to begin all software conversions. When you complete this procedure, refer to “IODU/C software conversion” on page 31, or appropriate. After you have completed your conversion, perform the post-conversion steps in “Postconversion procedure” on page 251.

The following items should be available before proceeding:

- the Controlled Release Bulletin for the new software
- the appropriate software and conversion media
- the CD-ROM, and diskettes (as required)
- a temporary SDI card and a local TTY or remote TTY modem required to perform parallel reload in dual CPU systems
- new memory, if required

Preconversion steps

- 1 Perform an overall system check. Make sure the system is performing normal call processing.
- 2 Get software information from LD 22.

LD 22

REQ ISS
**** to exit overlay

Patches do not need to be removed prior to conversion. When data dumping (EDD), an EHM500 message is printed, rather than a list of patch numbers.

If a patch is included in your software and you are running on Release 19 or higher, a plus sign (+) will appear next to the software issue number in LD 22.

- 3 Load the configuration record (LD 17) to find the storage currently available in the Protected and Unprotected Data Store (PDATA and UDATA). Check the General Release Bulletin to see if additional memory is required for the new software or for any option packages being added.
- 4 Print system data listed in Table 4 on page 29. Verify all information is correct. Make corrections if necessary.
- 5 If additional memory is required for the conversion, change the MSPT, MEM, or MTYP prompts in the configuration record (LD 17). See "Increasing NT9D19, NT5D10 CP and NT5D03 CP memory" on page 151.
- 6 Perform a template audit. The template audit reviews the templates in your system and cleans up any duplicate or corrupted templates. The following is an example of the information generated by the system during the audit. This may take an extended period of time on large systems. It is recommended that it be run during a low traffic period.



CAUTION **Loss of Data**

Do not abort this overlay until the audit is complete. If the overlay is interrupted, data will be corrupted.

7

LD 01 The audit begins as soon as LD 01 is entered.

TEMPLATE AUDIT

STARTING PBX TEMPLATE SCAN

TEMPLATE 0001 USER COUNT LOW CHECKSUM OK

TEMPLATE 0002 USER COUNT HIGH CHECKSUM OK

TEMPLATE 0003 NO USERS FOUND

STARTING SL1 TEMPLATE SCAN

TEMPLATE 0001 USER COUNT OK CHECKSUM OK

•

•

TEMPLATE 0120 USER COUNT OK CHECKSUM OK

TEMPLATE AUDIT COMPLETE

- 8 To ensure backup, perform a data dump to the **Source** system media currently in the drive. If the data dump is not successful, do not proceed with the conversion. The data dump problem must be corrected. Contact your Nortel Networks technical support.

LD 43

EDD DATADUMP COMPLETE (or DATABASE BACKUP COMPLETE) is printed when the data dump has been successfully completed. Investigate any EDD messages. Refer to *Maintenance* (553-3001-511).

- 9 If parallel reload is to be used during the conversion, go to or "IODU/C software conversion" on page 31. Be sure to perform the correct parallel reload procedure for your system.

Note: To monitor the CPUs during parallel reload procedures, install a temporary Serial Data Interface (SDI) card, and connect a local TTY (or modem for remote TTY access). Refer to the parallel reload procedures for more information.

If parallel reload is not required (single CPU system) then perform one or more of the following conversion procedures. Remember to perform the post-conversion steps ("Postconversion procedure" on page 251) to complete the conversion.

- "cPCI® MMDU software conversion" on page 107
- "Increasing NT9D19, NT5D10 CP and NT5D03 CP memory" on page 151

Items marked with asterisks (*) are required printout for conversion. Other items are recommended for a total system status.

Table 4
Print site data (Part 1 of 2)

Site data	Print command	
Terminal blocks for all TNs	LD 20	
	REQ	PRT
	TYPE	TNB
	CUST	<cr>
Directory Numbers	LD 20 (LD 22 prior to Release 16)	
	REQ	PRT
	TYPE	DNB
	CUST	<cr>
Attendant Console data block for all customers	LD 20	LD 20
	REQ	PRT
	TYPE	ATT, 2250
	CUST	<cr>
*Customer data block for all customers	LD 21	LD 21
	REQ	PRT
	TYPE	CDB
	CUST	<cr>
Route data block for all customers	LD 21	
	REQ	PRT
	TYPE	RDB
	CUST	Customer number
	ROUT	<cr>
	ACOD	<cr>
*Configuration Record	LD 22	
	REQ	PRT
	TYPE	CFN

Table 4
Print site data (Part 2 of 2)

Site data	Print command	
*Software packages	LD 22	
	REQ TYPE	PRT PKG
*Software issue, ROM and tape ID	LD 22	
	REQ REQ REQ	ISS ROM TID
* Peripheral software versions	LD 22	
	REQ TYPE	PRT PSWV
ACD data block for all customers	LD 23	
	REQ TYPE CUST ACDN	PRT ACD Customer Number ACD DN (or <CR>)
Superloop card IDs and software version (peripheral controller, superloop network and controller cards)	LD 32	
	.	IDC loop
Multi-purpose ISDN Signaling Processor (MISP) card	LD 27	
	REQ TYPE LOOP APPL PH	PRT MISP loop number (0-158) <cr> <cr>
DTI/PRI data block for all customers	LD 73	
	REQ TYPE	PRT DDB
Note: Items marked with asterisks (*) are required printout for conversion. Other items are recommended for a total system status.		

IODU/C software conversion

Contents

The following are the topics in this section:

Parallel reload the 61C/81/81C	32
Verify memory	33
Perform a data dump	34
STAT the hardware	34
Split the Cores	35
Install software on Core/Net 1	35
Check for peripheral software download	40
Switch call processing to Core/Net 1	40
Test Core/Net 1	41
Install software on Core/Net 0	41
Exiting split mode	43
Test Core/Net 1 and Core/Net 0	44
Synchronize the hard disks	45
Backing out of the parallel reload on Options 61C, 81, 81C	46
Option 51C software conversion	48
Verify memory	48
Perform a data dump	49
STAT the hardware	49
Install software	49
Check for Peripheral Software Download	52
Test call processing	52
Complete the upgrade	52
Adding features and ISM limits	53
Feature operation	53

Feature and ISM parameter upgrade using a keycode diskette	54
Feature and ISM parameter upgrade using HyperTerminal®	62
Feature and ISM parameter upgrade enter manually	69
Reverting to the previous keycode with the KRVR command	75

	<p>CAUTION WITH ESDS DEVICES</p> <p>To avoid damaging equipment from electrostatic discharge, wear a properly connected anti-static wrist strap when working on or near Meridian 1 equipment.</p>
---	--

Use the procedures in this section if your system is equipped with NT5D61 Input Output Disk Unit with CD-ROM (IODU/C) card(s). If your system is not equipped with the IODU/C card, do not use these procedures.

The procedures in this section describe how to:

- convert one software release to a later release
- perform a software upissue within in the same software release
- add new features
- modify Incremental Software Management (ISM) limits

To better understand the process, read through the entire procedure before you begin.

Parallel reload the 61C/81/81C

Note: This procedure does not include instructions for installing new IODU/C cards. To use this procedure, your system must already be equipped with IODU/C cards.

Use the parallel reload procedures to convert from one software release to a later release or to upissue software within the same software release. These parallel reload procedures are for software conversions only. Do *not* use this procedure for any other purpose. Parallel reloads can be done from either CPU. For the purposes of this document, we begin with CPU 0.

Table 5 on page 33 summarizes the required steps to perform this procedure.

Table 5
Options 61C, 81, 81C parallel reload summary

Step	Page
1. Verify memory	page 33
2. Perform a data dump	page 34
3. STAT the hardware	page 34
4. Split the Cores	page 35
5. Install software on Core/Net 1	page 35
6. Check for peripheral software download	page 40
7. Switch call processing from Core/Net 0 to Core/Net 1	page 40
8. Test Core/Net 1	page 41
9. Install software on Core/Net 0	page 41
10. Exit split mode	page 43
11. Test Core/Net 0 and 1	page 44
12. Synchronize the hard disks	page 45
13. Perform a data dump	page 46

Verify memory

Determine whether your system requires additional memory. Refer to “Increasing NT9D19, NT5D10 CP and NT5D03 CP memory” on page 151 for memory requirements and upgrade procedures.

Perform a data dump

- 1 Load the Equipment Data Dump Program (LD 43). At the prompt, enter
LD 43 to load the program
- 2 When "EDD000" appears on the terminal, enter
EDD to begin the data dump
- 3 When "DATABASE BACKUP COMPLETE" or "DATADUMP COMPLETE" appears on the terminal, enter



CAUTION

Loss of Data

If the data dump is not successful, do not continue; contact your technical support organization. A data dump problem must be corrected before proceeding.

**** to exit the program

STAT the hardware

- 1 Load LD 137 and get status of the hard disks.
Note: Be sure the hard disks are synchronized. If not, synchronize before proceeding.

LD 137

STAT Get the status of the hard disks
SYNC Synchronize hard disks if necessary.
Synchronization may take up to 50 minutes
TEST CMDU Performs hard and floppy disk test.
**** exit program

- 2 Load LD 135 and get status of the CPs, CNIs and memories.

LD 135

STAT CPU Get the status of both CPs and memory
STAT CNI Get the status of all configured CNIs

- 3 Test the standby (inactive) CP. Then switch CPs, and test again.
 - TEST CPU** Test standby (inactive) CP
 - Wait until the terminal returns a complete test message. The message “HWI533 or HWI534” does not mean the test has completed!
 - SCPU** Switch CPs
 - TEST CPU** Test the standby (inactive) CP

Note: Testing the CPs can take up to 20 minutes for each test. When the test is complete, the memories are automatically synchronized.

Split the Cores

- 1 Be sure CP 0 is active and CP1 is standby. You may need to switch CPs again:
 - STAT CPU**
 - **** exit program
 - a. Verify that IODU/C 0 is active. You may need to switch IODU/Cs.
 - LD 137**
 - STAT** Get the status of IODU/C
 - SWAP** Switch IODU/Cs if necessary
 - **** exit program
- 2 Connect a terminal to the CPSI port in Core/Net 1 to J25 of the I/O panel at the back of the Core/Net. Be sure it is configured as follows. The recommended baud rate is 9600, to be the same as the CPSI port.
 - 7 data bits, 1 stop bit, Space parity, Full duplex, XON protocol**
- 3 Place CP 0 in Maintenance by setting the MAINT/NORM switch to MAINT.
- 4 In Core/Net 1, disable the CNI cards by setting the ENB/DIS faceplate switches to DIS.

Install software on Core/Net 1

- 1 Place the CP Install disk that corresponds with the installed CP card type into the IODU/C in Core/Net 1.
- 2 Install the CD-ROM into the CD drive:

- a. press the button on the CD-ROM drive to open the CD-ROM disk holder
 - b. place the CD-ROM disk into the holder with the disk label showing
 - c. use the four tabs to secure the CD-ROM drive
 - d. press the button again to close the CD-ROM disk holder (don't push the holder in by hand)
- 3 In Core/Net 1, perform the following three steps in uninterrupted sequence:
 - a. press and hold the MAN RST button on the CP card
 - b. set the MAINT/NORM switch on the CP card to MAINT
 - c. release the MAN RST button

A sysload will begin (cold start). Wait for the Main Menu to appear on the terminal before proceeding.

Note 1: If the CD-ROM is not in the CD drive of the IODU/C, the installation procedure will not continue. Please insert the CD-ROM into the drive to continue.

Note 2: If a problem is detected during the system verification, Install stops, prints an error message, and aborts the installation. If the verification is not successful, do not continue; contact your technical support organization.

- 4 Press <CR> to continue.
- 5 Log into the system and enter the time and date, when prompted.
- 6 Initiate the database installation by selecting the following command from the menu:
`<u>` to Install menu
- 7 Remove the CP Install Program diskette and insert the Keycode diskette, when prompted.
`<a>` to continue with keycode validation
`<y>` to confirm that the keycode matches the CD-ROM release

- 8** When the Install Menu is displayed, select the following options
- to install software, database, CP-BOOT ROM, and IOP-ROM
 - <a> to verify that the CD-ROM is now in drive
- The Installation Status Summary screen appears that lists the options to be installed.
- <y> Yes, start Installation
 - <a> Continue with Upgrade

Pre-release 3 language groups

- 9** Select a PSDL file to install. The PSDL file contains the loadware for all downloadable cards in the system and loadware for M3900 series sets.

Select one of the six PSDL files

- <1> Global 10 Languages
- <2> Western Europe 10 Languages
- <3> Eastern Europe 10 Languages
- <4> North America 6 Languages
- <5> Spare Group A
- <6> North America 6 Languages (Duplicate of <4>)

The languages contained in each selection are outlined as follows:

- 1 - English, French, German, Spanish, Swedish, Italian, Norwegian, Brazilian Portuguese, Finnish, Japanese Katakana.
- * 2 - English, French, German, Spanish, Swedish, Norwegian, Danish, Finnish, Italian, Brazilian Portuguese.
- * 3 - English, French, German, Dutch, Polish, Czech, Hungarian, Russian, Latvian, Turkish.
- * 4 - English, Spanish, French, Brazilian Portuguese, Japanese Katakana, German.
- * 5 - English, French, German, Spanish, Swedish, Italian, Norwegian, Portuguese, Finnish, Japanese Katakana.
- * 6 - English, Spanish, French, Brazilian Portuguese, Japanese Katakana, German.

Release 3 language groups

- 10 Select a PSDL file to install. The PSDL file contains the loadware for all downloadable cards in the system and loadware for M3900 series sets.

Select one of the six PSDL files

- <1> Global 10 Languages
- <2> Western Europe 10 Languages
- <3> Eastern Europe 10 Languages
- <4> North America 6 Languages
- <5> Spare Group A
- <6> North America 6 Languages (Duplicate of <4>)

The languages contained in each selection are outlined as follows:

- 1 – Global 10 Languages (Release 3) English, French, German, Spanish, Swedish, Italian, Norwegian, Brazilian Portuguese, Finnish, Japanese Katakana.
 - 2 – Western Europe 10 Languages (Release 3) English, French, German, Spanish, Swedish, Italian, Norwegian, Brazilian Portuguese, Finnish, Danish.
 - 3 – Eastern Europe 10 Languages (Release 3) English, French, German, Dutch, Polish, Czech, Hungarian, Russian, Latvian, Turkish.
 - 4 – North America six Languages (Release 3) English, French, German, Spanish, Brazilian Portuguese, Japanese Katakana.
 - 5 – Spare Group A.
 - 6 – Spare Group B.
- 11 Continue with ROM and IOP-ROM upgrade when prompted.

12 Select a database to install.

When the installation is complete, the Installation Status Summary table appears. Press <CR> to continue.

When the Install Menu appears, select:

<d> To install Database only

When the database installation screen appears, insert the first 2 MB database diskettes in the IODU/C.

<a> to install the customer database

<y> to start installation

Follow the instructions to install the database and update the ROM.

The Installation Status Summary screen appears. Verify that CD to disk, disk to ROM, Database, CP-BOOTROM, and IOP-ROM were installed.

<cr> press return to continue

<q> to quit (remove any diskettes from the floppy drive)

<y> Yes, to confirm quit

<a> to reboot the system

The system will automatically perform a sysload during which several messages will appear on the system terminal. Wait for "DONE" and then "INI" messages to be displayed before continuing.

If the system fails to load, or system messages indicate data corruption, back out of the parallel reload process by performing the steps in "Backing out of the parallel reload on Options 61C, 81, 81C" on page 46.

Check for peripheral software download

- 1 Load LD 22 and print Target peripheral software version. The Source peripheral software version was printed during the pre-conversion procedure. If there is a difference between the Source and Target peripheral software version, a forced download will occur during initialization when coming out of parallel reload. System initialization will take longer and established calls on IPE will be dropped.

LD 22

REQ

PRT

TYPE

PSWV

exit program

Switch call processing to Core/Net 1



CAUTION

Service Interruption

Call Processing will be interrupted! Perform these next steps carefully. This is the point at which your service is interrupted. Calls in process will be interrupted, especially if Peripheral Software Download takes place. Some calls may be dropped.

Perform the next four steps in succession. Call processing will be switched from Core/Net 0 to Core/Net 1.

- 1 In Core/Net 0, set the DIS/ENB faceplate switch on the IODU/C card to DIS.
- 2 In Core/Net 0, disable the CNI cards by setting the ENB/DIS faceplate switches to DIS.
- 3 In Core/Net 1, enable the CNI cards by setting the ENB/DIS faceplate to ENB.
- 4 In Core/Net 1, press the MAN INT button.

Note: Call processing is now switched from Core/Net 0 to Core/Net 1.

Test Core/Net 1

- 1 Test Call Processing. This includes, but is not limited to the following:
 - Check for dial tone.
 - Make internal, external, and network calls.
 - Check attendant console activity.
 - Check DID trunks.
 - Check any auxiliary processors.

Note: From this point forward you will be upgrading Core/Net 0 with new software.

Install software on Core/Net 0

- 1 Move the CPSI port cable from J25 on Core/Net 1 to J25 on Core/Net 0.
- 2 Set the IODU/C faceplate switch to ENB.
- 3 Insert the CP Install diskette into Core/Net 0.
- 4 Press the MAN RST button on the CP card in Core/Net 0 to reboot the system and start the Software Installation Tool. (The terminal displays SYSLOAD messages during file loading. When SYSLOAD is completed, the NT logo appears.)
- 5 When the NT logo appears, press <CR> to continue.
- 6 When the Main Menu appears, select the following options in sequence:
 - <u> to Install menu
- 7 Remove the CP Install Program diskette and insert the Keycode diskette. Select the following when prompted:
 - <a> to continue with keycode validation
 - <y> to confirm that the keycode matches the CD-ROM release

- 8 When the Install Menu appears, select the following options in sequence to copy the software from Core/Net 1 to Core/Net 0, install CP-software, ROMs, and transfer the database to the redundant disk:

<o> to copy system software from the other core
<a> to copy /p partition from Core1 to Core 0
<a> to continue with upgrade

When the software has copied successfully, you must install CP-software from the hard disk to Flash EEPROM, and install CP-BOOT ROM.

<CR> press <CR> when you are ready to continue
<y> to start installation
<a> to continue with ROM upgrade
<y> to start installation
<a> to continue with ROM upgrade.

When the installation is complete, the Installation Status Summary screen appears.

<CR> to return to the Install Menu

When the Install Menu appears, install IOP-ROM:

<f> to install IOP-ROM only

When the Installation Status Summary screen appears:

<y> to start installation
<y> to continue installing IOP-ROM
<a> to continue with ROM upgrade

When the installation is complete, the Installation Status Summary screen appears.

<CR> to return to the Install Menu

When the Install Menu appears, install the database:

<d> to install database only
<d> to copy database from the redundant disk

When the Installation Status Summary screen appears:

<y> to start installation
<a> to continue transferring the database from the redundant disk

When the Installation Status Summary screen appears, press:

<CR> to return to the Install Menu

When the Install Menu appears, remove any diskettes in the floppy before rebooting the system:

- <q> to quit
- <y> to confirm quit
- <a> to reboot the system

Wait for “DONE” and then “INI” messages to be displayed before continuing.

Exiting split mode

- 1 Connect CPSI port or maintenance SDI port
- 2 Enable the CNI cards by setting the ENB/DIS faceplate switch to ENB in Core/Net 0.
- 3 Perform the following in uninterrupted sequence:
 - Press and release the MAN RST button in Core/Net 0.
 - When SYS700 messages appears on LCD display on Core/Net 0, set the MAINT/NORM switch to NORM in Core/Net 0.

In 60 seconds, the LCD will display and confirm your processes with:

RUNNING ROM OS
ENTERING CP VOTE

An HWI534 message indicates the start of memory synchronization. In 10 minutes, an HWI533 message on Core/Net 1 CSPI or SDI terminal indicates the memory synchronization is complete.

- 4 In Core/Net 1, set the MAINT/NORM switch on the CP card to NORM.

Test Core/Net 1 and Core/Net 0

- 1 Perform a redundancy sanity test using the following sequence:

LD 135

STAT CNI	Get status of CNI cards
STAT CPU	Get status of CPU and memory
TEST CPU	Test the inactive Core/Net
TEST CNI c s	Test each inactive CNI card

- 2 Switch Cores and test the other side (Core/Net 0)

SCPU	Switch cores
TEST CPU	Test the inactive Core/Net
TEST CNI c s	Test each inactive CNI card

Note: Testing the CP and CNI cards and synchronizing memory can take up to 20 minutes for each test. When the CP test is complete, the CP the memory is automatically synchronized.

- 3 Clear the display and minor alarms on both Cores.

CDSP	Clear the displays on the Cores
CMAJ	Clear major alarms
CMIN ALL	Clear minor alarms

- 4 Get the status of the Cores, CNIs, and memory.

STAT CPU	Get the status of both Cores
STAT CNI	Get the status of all configured CNIs and memory

Note: You may need to execute the STAT CNI command twice before receiving a response from the system.

**** exit program

Synchronize the hard disks

- 1 Load LD 137 and synchronize the hard disks. Synchronization may take up to 50 minutes. To be sure that the contents of IODU/C 1 are copied to IODU/C 0, verify that IODU/C 0 is disabled.

LD 137

STAT Get the status of the IODU/C and redundancy

SYNC Enter "Yes" to synchronize disks. Wait until the memory synchronization successfully completes before continuing.

TEST CMDU Performs hard and floppy disk test.

- 2 Get the status of the CMDU's and be sure CMDU 0 is active. Switch if necessary.

STAT Get the status of IODU/C and redundancy

SWAP Switch CMDU if necessary

STAT CMDU Get the status of the IODU/Cs. Be sure the same IODU/C and CPU are active.

******** exit program

Perform a data dump

Load the Equipment Data Dump Program (LD 43). At the prompt, enter

LD 43 to load the program

1 When "EDD000" appears on the terminal, enter

EDD to begin the data dump

2 When "DATABASE BACKUP COMPLETE" or "DATADUMP COMPLETE" appears on the terminal, enter



CAUTION

Loss of Data

If the data dump is not successful, do not continue; contact your technical support organization. A data dump problem must be corrected before proceeding.

**** to exit the program

Backing out of the parallel reload on Options 61C, 81, 81C

- 1 Place the original Install disk 1 into the IODU/C in Core/Net 1.
- 2 In Core/Net 1, press the MAN RST button.
- 3 Select <u> to initiate the Install Tool.
- 4 Remove the CP Install diskette and insert the source keycode diskette.
- 5 Select <a> to continue with keycode validation.
- 6 When the install screen appears, select the following options in sequence, and insert the **source** database diskette when you are prompted to do so.
 - to install software, database, CP-BOOT ROM, and IOP-ROM
 - <a> to start installation
 - <a> continue with upgrade

- 7** When the database installation screen appears, select the following:
- <c>** to transfer the previous system database (DBMT)
(choose this option if the database was converted on-site)
 - or**
 - <a>** to install customer database (choose this option if the database was sent to Nortel Networks for conversion)
 - <a>** to continue with the database install
 - <y>** to delete the hardware infrastructure database files from the hard disk
- 8** When the ROM installation screen appears, select the following:
- <a>** to continue with the ROM upgrade
- 9** Following the database installation, upgrade the ROMs:
- <a>** to continue with ROM upgrade (CP-BOOT)
 - <y>** to start installation
 - <a>** to continue with ROM upgrade (IOP-ROM)
- 10** Remove the disk from the IODU/C in Core/Net 1.
- 11** From the main menu, select the following options to quit and reload the system:
- <q>** to quit
 - <y>** to confirm quit
- 12** Remove any diskettes from the floppy drive, and type
- <a>** to reboot the system
- 13** In Core/Net 1, perform the following steps:
- enable the CNI cards by setting the ENB/DIS faceplate switches to ENB
 - press and release the MAN RST button on the CP card
 - When SYS700 messages appear on the CP 1 LCD display
 - set CP 1 MAINT/NORM switch to NORM.

Within 60 seconds, the LCD will display the following messages, confirming the process.

RUNNING ROM OS ENTERING CP VOTE

An "HWI534" message from the CPSI or SDI port indicates the start of memory synchronization. Within 10 minutes, an "HWI533" message on Core/Net 0 CPSI or SDI TTY indicates the memory synchronization is complete. Wait until the memory synchronization is complete before continuing.

- 14 In Core/Net 0, set the MAINT/NORM switch on the CP card to NORM.
- 15 Perform a redundancy sanity test.

LD 135

TEST CPU	Test the standby (inactive) Core/Net.
SCPU	Switch the Cores.
CDSP	Clear display.
TEST CPU	Test the standby (inactive) Core/Net.
SCPU	Switch the Cores.

Note: Testing the CPs can take up to 20 minutes for each test. When the test is complete, the memories are automatically synchronized.

- 16 Load LD 137 and synchronize hard disks. Synchronization may take up to 50 minutes. To be sure the contents of CMDU 0 are copied to CMDU 1, use the STAT command to verify that CMDU 1 is disabled.

LD 137

STAT CMDU	Get the status of both CMDUs.
SYNC	Synchronize disks.
TEST CMDU	Performs hard and floppy disk test.

You are now out of the parallel reload process, and have returned to the Source software.

Option 51C software conversion

Use this procedure to convert from one software release to another on Option 51C systems only.

Verify memory

Determine whether your system requires additional memory. Refer to "Increasing NT9D19, NT5D10 CP and NT5D03 CP memory" on page 151 for memory requirements and upgrade procedures.

Perform a data dump

- 1 Load the Equipment Data Dump Program (LD 43). At the prompt, enter
LD 43 to load the program
- 2 When "EDD000" appears on the terminal, enter
EDD to begin the data dump
- 3 When "DATABASE BACKUP COMPLETE" or "DATADUMP COMPLETE" appears on the terminal, enter



CAUTION

Loss of Data

If the data dump is not successful, do not continue; contact your technical support organization. A data dump problem must be corrected before proceeding.

**** to exit the program

STAT the hardware

- 1 Load LD 137 and get status of the hard disk.
LD 137
STAT Get the status of the hard disks
- 2 Load LD 135 and get status of the CP, CNI and memory.
LD 135
STAT CPU Get the status of the CP and memory
STAT CNI Get the status of the CNI

Install software

- 1 Select the CP Install diskette which matches the Call Processor (CP) type on your system.
- 2 Insert the CP Install diskette into the floppy drive of the IODU/C.
- 3 Press MAN RST on the CP card.

The system will be booted from the floppy and the Install tool will be automatically invoked. The following screen appears

- 4 Press <CR> to continue.
- 5 Log into the system and enter the time and date, when prompted.
- 6 Initiate the database installation by selecting the following command from the menu:
 - <u> to Install menu
- 7 Remove the CP Install Program diskette and insert the Keycode diskette, when prompted.
 - <a> to continue with keycode validation
 - <y> to confirm that the keycode matches the CD-ROM release
- 8 When the Install Menu is displayed, select the following options in sequence when you are prompted to do so
 - to install software, database, CP-BOOT ROM, and IOP-ROM
 - <a> to verify that the CD-ROM is now in drive

The Installation Status Summary screen appears that lists the options to be installed.

 - <y> Yes, start Installation
 - <a> Continue with Upgrade

When the ROM installation screen appears, select the following prompts in sequence:

 - <a> Continue with ROM Upgrade

The following message appears:

Software Release XXXX was installed successfully. All files were copied from CDROM to the hard disk.

Please press <CR> to when ready...

 - <a> Continue with ROM upgrade
 - <a> Yes, start Installation
 - <a> Continue with ROM upgrade

When the Installation Status Summary screen appears, press <CR> when ready...

When the INSTALL MENU appears:

 - <d> To install Database only

When the database installation screen appears, insert the first 2 MB database diskettes in the IODU/C.

- <a> to install the customer database
- <y> to start installation
- <a> to continue the database installation
- <y> to load the database
- <a> to continue with ROM upgrade
- <cr> Are you sure you want to continue with IOP ROM
- <a> to install the IOP-ROM from hard disk
- <y> Yes, start installation
- <a> to continue with ROM upgrade

The Installation Status Summary screen appears. Verify that CD to disk, disk to ROM, Database, CP-BOOTROM, and IOP-ROM were installed.

- <cr> press return to continue
- <q> to quit (remove any diskettes from the floppy drive)
- <y> Yes, to confirm quit
- <a> to reboot the system

The system will automatically perform a sysload during which several messages will appear on the system terminal. Wait for "DONE" and then "INI" messages to be displayed before continuing.

Check for Peripheral Software Download

- 1 Load LD 22 and print Target peripheral software version. The Source peripheral software version was printed during the pre-conversion procedure. If there is a difference between the Source and Target peripheral software version, a forced download will occur during initialization when coming out of parallel reload. System initialization will take longer and established calls on IPE will be dropped.

LD 22

REQ	PRT
TYPE	PSWV

Test call processing

- 1 Test Call Processing. This includes, but is not limited to the following:
 - Check for dial tone.
 - Make internal, external, and network calls.
 - Check attendant console activity.
 - Check DID trunks.
 - Check any auxiliary processors.

Complete the upgrade

- 1 Perform a redundancy sanity test using the following sequence:

LD 135

STAT CNI	Get status of CNI card
STAT CPU	Get status of CPU and memory

- 2 Clear the display and minor alarms..

CDSP	Clear the displays on the Cores
CMAJ	Clear major alarms
CMIN ALL	Clear minor alarms

****	exit program
------	--------------

The software conversion is complete.

Adding features and ISM limits

Adding new features and/or modifying Incremental Software Management (ISM) limits requires the installation of a new keycode. Keycodes are delivered via diskette or electronic file transfer and installed using the keycode management commands in LD 143 or the Meridian 1 Software Installation Tool.

The procedures below outline the steps to install a new keycode that can be activated "instantly" or that requires a sysload (Cold Restart). More information on the "Instant ISM" feature can be found in the X11 Features and Services guide.

This section describes how to install a keycode using the commands listed below:

LD 143 commands

Keycode delivery	Keycode Installation command
Diskette	Use the KNEW F0 or KNEW F1 command in LD 143
Electronic file on a PC	Use the KUPL command in LD 143, followed by the KNEW HD command (see note)
Faxed to the customer site (paper-based keycode)	Use the KMAN command in LD 143, followed by the KNEW HD command
<i>Note:</i> If the keycode is downloaded from the Keycode Distributor Server (KDS), use the KUPL command to install the keycode. Refer to the Distributor Keycode Application section in this document for more information about KDS.	

Feature operation

Feature operation is further broken down into four options:

- upgrade feature and ISM parameter using a keycode diskette
- upgrade feature and ISM parameter using HyperTerminal

- upgrade feature and ISM parameter entered manually
- Revert to the previous keycode with the KRVR command

For the following procedures, Core 0 is initially active and Core 1 is initially inactive.

Feature and ISM parameter upgrade using a keycode diskette

Leave the system in full redundant mode (hard-disk and CPU redundancy).

- 1 Log in on a system terminal and load overlay 143.

```
>LD 143  
CCBR000
```

.

- 2 Insert the new keycode diskette into the floppy drive on the active IODU/C card.
- 3 Print the pending keycode contents.

KSHO F1 (or F0) print the contents of the candidate keycode in the floppy drive on the active Core. Where:

F1 = Core 1

F0 = Core 0

- 4 Enter the KDIF command and select keycode comparison options.

Note: Ensure that the new keycode does not lower ISM limits or reduce features compared with the existing keycode. If you have determined that the keycode lowers ISM limits or reduces features, do not continue with the KNEW command, but contact your Nortel Networks order management representative.

. KDIF

Please use: KDIF <param1> <param2>
with the following parameters:

NEW	accepted new keycode
REC	currently used keycode
OLD	previously used keycode
F0	candidate keycode on diskette in /f0 floppy drive
F1	candidate keycode on diskette in /f1 floppy drive
HD	candidate keycode which was uploaded to hard disk

Enter the keycode comparison option. The new keycode option is shown in **bold**.

Note: In the following example, the (REC) currently used keycode will be compared with the new keycode disk in floppy drive F0. The limits shown are for example purposes only.

.KDIF REC F0

Validating Keycode File /p/install/keycode.rec ... OK

Validating Keycode File /f0/keycode.kcd ... OK

System parameters	1st keycode:	2nd keycode:
System Serial Number	: 46XX	46XX
Software Version	: 3311	3311
System Type	: Option 61C	Option 61C
Call Processor	: CP68040	CP68040
Release	: 25	25
Issue	: XX	XX
NTI Order Number	:	
NT SDID - 1	:	
NT SDID - 2	:	
Date and Time of Manufacture	:	

Note: () indicates that information is not available

ISM Limits	1st keycode:	2nd keycode:
Loop Limit	: 32	32
Sys TNs Limit	: 0	200
ACD Agt Limit	: 10	10
ACD DNs Limit	: 10	10
AST Limit	: 10	10

.....

Common packages for both keycodes:
0-2 4-5 7-25 28-29 32-55 58-65

.....

Additional packages in the 2nd keycode:

< **30-31**

.

- 5 Select the new keycode for activation using the KNEW command.

. **KNEW F0**

The uploaded keycode is validated against the security device.

If the following system message is given:

CCBR020 New Keycode accepted and activated successfully.
Sysload is NOT needed!

This implies that the new keycode is eligible for instant activation and no further user action is required, proceed to step 6 and 7.

Otherwise, if the keycode is not eligible for instant activation, a Sysload is needed to activate the new keycode and the following system message is given:

CCBR009 New Keycode accepted. New ISM limits and feature packages will be activated during the next sysload (Cold Restart).

Skip to step 8.

- 6 Load Overlay 22 and confirm that the new ISM parameters have been updated.

>LD 22
REQ SLT

....

If ISM limits are correct then the keycode installation is complete.

See "Reverting to the previous keycode with the KRVR command" on page...(NTP group to fill in) if ISM limits are not increased or problems exist.

- 7 Once you have confirmed that the keycode changes taken affect as expected, perform a data dump in LD 43.

- 8 Do these steps for keycodes that are not eligible for Instant ISM.

- a. Place the system in split mode. This puts a redundant (shadowed) system into single (non-shadowed) mode.

- b. Be sure CP 0 is active and CP1 is standby. You may need to switch CPs:

LD 135

STAT CPU

SCPU to switch CPUs if necessary

**** exit program

- c. Verify that IODU/C 0 is active. You may need to switch IODU/Cs.

LD 137

STAT Get the status of IODU/C

SWAP Switch IODU/Cs if necessary

**** exit program

- d. In Core 0, set the CP card MAINT/NORM switch to MAINT.
- e. In Core 1, disable the CNI cards by setting the ENB/DIS faceplate switches to DIS.
- f. In Core/Net 1, perform the following three steps in uninterrupted sequence:
 - press and hold the MAN RST button on the CP card
 - set the MAINT/NORM switch on the CP card to MAINT
 - release the MAN RST button

A sysload will begin (cold start).

- 9 In the inactive core (Core 1), load Overlay 22 and confirm that the new ISM parameters have been updated.

>LD 22

REQ SLT

....

- 10 Switch call processing from the active core (Core 0) to the inactive core (Core 1).



CAUTION
Service Interruption

Call Processing will be interrupted! Perform these next steps carefully and quickly. This is the point at which your service is interrupted. Calls in process will be interrupted, especially if Peripheral Software Download takes place. Some calls may be dropped.

- a. In Core 0, access LD 137 to software disable the IODU/C card.
>LD 137
.DIS CMDU 0
- b. In Core 0, set the DIS/ENB faceplate switch on the IODU/C card to DIS.
- c. In Core 0, disable the CNI cards by setting the ENB/DIS faceplate switches to DIS. Call Processing will be interrupted.
- d. In Core 1, enable the CNI cards by setting the ENB/DIS faceplate to ENB.
- e. In Core 1, press the MAN INT button. Call processing will be switched from Core 0 to Core 1 when the warm restart is completed.

The previously inactive core (Core 1) with the new keycode now becomes active.

- 11 In Core 0, set the DIS/ENB faceplate switch on the IODU/C card to ENB.
- 12 In order to activate the new keycode on the new inactive core, a sysload (Cold Restart) is required.
Press the MAN RST button on Core/Net 0.
- 13 In Core 0, load Overlay 22 and confirm that the new ISM parameters have been updated.
>LD 22
REQ SLT
....

- 14** Return the system to redundant mode, synchronizing the memory and hard drive of the inactive core with the active core.
- a.** Enable the CNI cards by setting the ENB/DIS faceplate switch to ENB in Core/Net 0.
 - b.** Perform the following in uninterrupted sequence:
 - Press and release the MAN RST button in Core/Net 0.
 - When SYS700 messages appears on LCD display on Core/Net 0, set the MAINT/NORM switch to NORM in Core/Net 0.

In 60 seconds, the LCD will display and confirm your processes with:

RUNNING ROM OS

ENTERING CP VOTE

An HWI534 message indicates the start of memory synchronization. In 10 minutes, an HWI533 message on Core/Net 1 CSPI or SDI terminal indicates the memory synchronization is complete.

- c.** In Core/Net 1, set the MAINT/NORM switch on the CP card to NORM.
- 15** Test Core/Net 1 and Core/Net 0
- a.** Perform a redundancy sanity test using the following sequence:

LD 135

STAT CNI	Get status of CNI cards
STAT CPU	Get status of CPU and memory
TEST CPU	Test the inactive Core/Net
TEST CNI c s	Test each inactive CNI card

b. Switch Cores and test the other side (Core/Net 0)

SCPU	Switch cores
TEST CPU	Test the inactive Core/Net
TEST CNI c s	Test each inactive CNI card

Note: Note: Testing the CP and CNI cards and synchronizing memory can take up to 20 minutes for each test. When the CP test is complete, the CP the memory is automatically synchronized.

c. Clear the display and minor alarms on both Cores.

CDSP	Clear the displays on the Cores
CMAJ	Clear major alarms
CMIN ALL	Clear minor alarms

d. Get the status of the Cores, CNIs, and memory.

STAT CPU	Get the status of both Cores
STAT CNI	Get the status of all configured CNIs and memory

Note: Note: You may need to execute the STAT CNI command twice before receiving a response from the system.

**** exit program

16 Synchronize the hard disks.

- a. Load LD 137 and synchronize the hard disks. Synchronization may take up to 50 minutes. To be sure that the contents of IODU/C 1 hard disk are copied to IODU/C 0 hard disk, verify that IODU/C 0 is disabled.

LD 137

- STAT** Get the status of the IODU/C and redundancy
- SYNC** Enter "Yes" to synchronize disks. Wait until the memory synchronization successfully completes before continuing
- TEST CMDU** Performs hard and floppy disk test.

- b. Get the status of the CMDU's and be sure CMDU 0 is active. Switch if necessary.

- STAT** Get the status of the IODU/C and redundancy
- SWAP** Switch CMDU if necessary
- STAT CMDU** Get the status of the IODU/Cs. Be sure the same IODU/C and CPU are active.
- **** exit program

- 17 Perform a data dump in LD 43.

Feature and ISM parameter upgrade using HyperTerminal®

Leave the system in full redundant mode (hard-disk and CPU redundancy).

- 1 On a PC, access the Meridian 1 system (via a modem) with HyperTerminal®:
Click the Start button | Programs | Accessories | HyperTerminal.
- 2 Double-click the HyperTerminal client to the Meridian 1 system.
- 3 Log into the Meridian 1 system.
- 4 Load the Keycode Management Program (LD 143).

- LD 143** to load program
- KUPL** to upload keycodes to the hard disk on the target system

- 5 Click the **Transfer** menu in HyperTerminal and select **Send Text File**.
- 6 From the **Files of type** pull-down menu, select **All Files (*.*)**.
- 7 Locate and select the keycode file on the PC. Use the **Look in** pull-down menu to select the drive on which the keycode is located.

- 8 Click **Open**.

The keycode will be displayed after the KUPL prompt.

Example:

```
KUPL 0001PBX 0101
9FPAMSRHNN17KRUQAFFSPREQEVMTHIDHRKDJHRKEJR56
```

- 9 Press the Enter key.

The Keycode is checked for CRC errors and is uploaded to the hard disk.

Enter the following command:

KDIF REC HD to compare the existing keycode with the new
keycode on the hard disk

Ensure that the new keycode does not lower ISM limits or reduce features compared with the existing keycode. If you have determined that the keycode lowers ISM limits or reduces features, do not continue with the KNEW command, but contact your Nortel Networks order management representative.

- 10 Select the new keycode for activation using the KNEW command.
KNEW HD

The uploaded keycode is validated against the security device.

If the following system message is given:

**CCBR020 New Keycode accepted and activated successfully.
Sysload is NOT needed!**

This implies that the new keycode is eligible for instant activation and no further user action is required, proceed to step 11 and 12.

Otherwise, if the keycode is not eligible for instant activation, a Sysload is needed to activate the new keycode and the following system message is given:

CCBR009 New Keycode accepted. New ISM limits and feature packages will be activated during the next sysload (Cold Restart).

Skip to step 13.

- 11 Load Overlay 22 and confirm that the new ISM parameters have been updated.

**>LD 22
REQ SLT**

....

If ISM limits are correct then the keycode installation is complete.

See "Reverting to the previous keycode with the KRVR command" on page...(NTP group to fill in) if ISM limits are not increased or problems exist.

- 12 Once you have confirmed that the keycode changes taken affect as expected, perform a data dump in LD 43.

- 13 Do these steps for keycodes that are not eligible for Instant ISM.

Place the system in split mode. This puts a redundant (shadowed) system into single (non-shadowed) mode.

- a. Be sure CP 0 is active and CP1 is standby. You may need to switch CPs:

LD 135

STAT CPU

SCPU to switch CPUs if necessary

**** exit program

- b. Verify that IODU/C 0 is active. You may need to switch IODU/Cs.

LD 137

STAT Get the status of IODU/C

SWAP Switch IODU/Cs if necessary

**** exit program

- c. In Core 0, set the CP card MAINT/NORM switch to MAINT.
- d. In Core 1, disable the CNI cards by setting the ENB/DIS faceplate switches to DIS.
- e. In Core/Net 1, perform the following three steps in uninterrupted sequence:
- press and hold the MAN RST button on the CP card
 - set the MAINT/NORM switch on the CP card to MAINT
 - release the MAN RST button

A sysload will begin (cold start).

- 14** In the inactive core (Core 1), load Overlay 22 and confirm that the new ISM parameters have been updated.

>LD 22
REQ SLT

....

- 15 Switch call processing from the active core (Core 0) to the inactive core (Core 1).



CAUTION
Service Interruption

Call Processing will be interrupted! Perform these next steps carefully and quickly. This is the point at which your service is interrupted. Calls in process will be interrupted, especially if Peripheral Software Download takes place. Some calls may be dropped.

- a. In Core 0, access LD 137 to software disable the IODU/C card.
>LD 137
.DIS CMDU 0
- b. In Core 0, set the DIS/ENB faceplate switch on the IODU/C card to DIS.
- c. In Core 0, disable the CNI cards by setting the ENB/DIS faceplate switches to DIS. Call Processing will be interrupted.
- d. In Core 1, enable the CNI cards by setting the ENB/DIS faceplate to ENB.
- e. In Core 1, press the MAN INT button. Call processing will be switched from Core 0 to Core 1 when the warm restart is completed.

The previously inactive core (Core 1) with the new keycode now becomes active.

- 16 In Core 0, set the DIS/ENB faceplate switch on the IODU/C card to ENB.
- 17 In order to activate the new keycode on the new inactive core, a sysload (Cold Restart) is required.
Press the MAN RST button on Core/Net 0.
- 18 In Core 0, load Overlay 22 and confirm that the new ISM parameters have been updated.
>LD 22
REQ SLT
....

- 19** Return the system to redundant mode, synchronizing the memory and hard drive of the inactive core with the active core.
- a.** Enable the CNI cards by setting the ENB/DIS faceplate switch to ENB in Core/Net 0.
 - b.** Perform the following in uninterrupted sequence:
 - Press and release the MAN RST button in Core/Net 0.
 - When SYS700 messages appears on LCD display on Core/Net 0, set the MAINT/NORM switch to NORM in Core/Net 0.

In 60 seconds, the LCD will display and confirm your processes with:

RUNNING ROM OS

ENTERING CP VOTE

An HWI534 message indicates the start of memory synchronization. In 10 minutes, an HWI533 message on Core/Net 1 CSPI or SDI terminal indicates the memory synchronization is complete.

- c.** In Core/Net 1, set the MAINT/NORM switch on the CP card to NORM.
- 20** Test Core/Net 1 and Core/Net 0
- a.** Perform a redundancy sanity test using the following sequence:

LD 135

STAT CNI	Get status of CNI cards
STAT CPU	Get status of CPU and memory
TEST CPU	Test the inactive Core/Net
TEST CNI c s	Test each inactive CNI card

b. Switch Cores and test the other side (Core/Net 0)

SCPU	Switch cores
TEST CPU	Test the inactive Core/Net
TEST CNI c s	Test each inactive CNI card

Note: Testing the CP and CNI cards and synchronizing memory can take up to 20 minutes for each test. When the CP test is complete, the CP the memory is automatically synchronized.

c. Clear the display and minor alarms on both Cores.

CDSP	Clear the displays on the Cores
CMAJ	Clear major alarms
CMIN ALL	Clear minor alarms

d. Get the status of the Cores, CNIs, and memory.

STAT CPU	Get the status of both Cores
STAT CNI	Get the status of all configured CNIs and memory

Note: You may need to execute the STAT CNI command twice before receiving a response from the system.

**** exit program

21 Synchronize the hard disks.

- a. Load LD 137 and synchronize the hard disks. Synchronization may take up to 50 minutes. To be sure that the contents of IODU/C 1 hard disk are copied to IODU/C 0 hard disk, verify that IODU/C 0 is disabled.

LD 137

- STAT** Get the status of the IODU/C and redundancy
- SYNC** Enter "Yes" to synchronize disks. Wait until the memory synchronization successfully completes before continuing
- TEST CMDU** Performs hard and floppy disk test.

- b. Get the status of the CMDU's and be sure CMDU 0 is active. Switch if necessary.

- STAT** Get the status of the IODU/C and redundancy
- SWAP** Switch CMDU if necessary
- STAT CMDU** Get the status of the IODU/Cs. Be sure the same IODU/C and CPU are active.
- **** exit program

- 22** Perform a data dump in LD 43.

Feature and ISM parameter upgrade enter manually

Before beginning this procedure, you must have a copy of the keycode. The keycode can reside on paper or as an electronic file. To enter the keycode manually, you will type the keycode in LD 143 as 21 lines, 16 characters per line.

- 1 Log into the system.
- 2 Load the Keycode Management Program (LD 143).

- LD 143** to load program
- KMAN** manually enter the keycode to the target system

- 3 Type keycode file, 21 lines of 16 characters each. Press return to go to the next line.

Note: When entering the keycode, do not enter the header information that proceeds the keycode.

- 4 Type "end" at line 22 to end the process.
- 5 Press enter. The new keycode file will be saved on the hard disk.

Enter the following command:

KDIF REC HD to compare the existing keycode with the new keycode on the hard disk

Ensure that the new keycode does not lower ISM limits or reduce features compared with the existing keycode. If you have determined that the keycode lowers ISM limits or reduces features, do not continue with the KNEW command, but contact your Nortel Networks order management representative.

- 6 Select the new keycode for activation using the KNEW command.

KNEW HD

The uploaded keycode is validated against the security device.

If the following system message is given:

CCBR020 New Keycode accepted and activated successfully. Sysload is NOT needed!

This implies that the new keycode is eligible for instant activation and no further user action is required, proceed to step 7 and 8.

Otherwise, if the keycode is not eligible for instant activation, a Sysload is needed to activate the new keycode and the following system message is given:

CCBR009 New Keycode accepted. New ISM limits and feature packages will be activated during the next sysload (Cold Restart).

Skip to step 9.

- 7 Load Overlay 22 and confirm that the new ISM parameters have been updated.

>LD 22
REQ SLT

....

If ISM limits are correct then the keycode installation is complete.

See "Reverting to the previous keycode with the KRVR command" on page...(NTP group to fill in) if ISM limits are not increased or problems exist.

- 8 Once you have confirmed that the keycode changes taken affect as expected, perform a data dump in LD 43.
- 9 Do these steps for keycodes that are not eligible for Instant ISM.

Place the system in split mode. This puts a redundant (shadowed) system into single (non-shadowed) mode.

- a. Be sure CP 0 is active and CP1 is standby. You may need to switch CPUs:

LD 135

STAT CPU

SCPU

to switch CPUs if necessary

exit program

- b. Verify that IODU/C 0 is active. You may need to switch IODU/Cs.

LD 137

STAT

SWAP

Get the status of IODU/C

Switch IODU/Cs if necessary

exit program

- c. In Core 0, set the CP card MAINT/NORM switch to MAINT.
- d. In Core 1, disable the CNI cards by setting the ENB/DIS faceplate switches to DIS.

- e. In Core/Net 1, perform the following three steps in uninterrupted sequence:
 - press and hold the MAN RST button on the CP card
 - set the MAINT/NORM switch on the CP card to MAINT
 - release the MAN RST button

A sysload will begin (cold start).

- 10 In the inactive core (Core 1), load Overlay 22 and confirm that the new ISM parameters have been updated.

```
>LD 22
REQ SLT
....
```

- 11 Switch call processing from the active core (Core 0) to the inactive core (Core 1).



CAUTION
Service Interruption

Call Processing will be interrupted! Perform these next steps carefully and quickly. This is the point at which your service is interrupted. Calls in process will be interrupted, especially if Peripheral Software Download takes place. Some calls may be dropped.

- a. In Core 0, access LD 137 to software disable the IODU/C card.

```
>LD 137
.DIS CMDU 0
```
- b. In Core 0, set the DIS/ENB faceplate switch on the IODU/C card to DIS.
- c. In Core 0, disable the CNI cards by setting the ENB/DIS faceplate switches to DIS. Call Processing will be interrupted.
- d. In Core 1, enable the CNI cards by setting the ENB/DIS faceplate to ENB.
- e. In Core 1, press the MAN INT button. Call processing will be switched from Core 0 to Core 1 when the warm restart is completed.

The previously inactive core (Core 1) with the new keycode now becomes active.

12 In Core 0, set the DIS/ENB faceplate switch on the IODU/C card to ENB.

13 In order to activate the new keycode on the new inactive core, a sysload (Cold Restart) is required.

Press the MAN RST button on Core/Net 0.

14 In Core 0, load Overlay 22 and confirm that the new ISM parameters have been updated.

```
>LD 22
REQ SLT
....
```

15 Return the system to redundant mode, synchronizing the memory and hard drive of the inactive core with the active core.

- a. Enable the CNI cards by setting the ENB/DIS faceplate switch to ENB in Core/Net 0.
- b. Perform the following in uninterrupted sequence:
 - Press and release the MAN RST button in Core/Net 0.
 - When SYS700 messages appears on LCD display on Core/Net 0, set the MAINT/NORM switch to NORM in Core/Net 0.

In 60 seconds, the LCD will display and confirm your processes with:

RUNNING ROM OS

ENTERING CP VOTE

An HWI534 message indicates the start of memory synchronization. In 10 minutes, an HWI533 message on Core/Net 1 CSPI or SDI terminal indicates the memory synchronization is complete.

- c. In Core/Net 1, set the MAINT/NORM switch on the CP card to NORM.

16 Test Core/Net 1 and Core/Net 0

- a. Perform a redundancy sanity test using the following sequence:

LD 135

STAT CNI	Get status of CNI cards
STAT CPU	Get status of CPU and memory
TEST CPU	Test the inactive Core/Net
TEST CNI c s	Test each inactive CNI card

- b. Switch Cores and test the other side (Core/Net 0)

SCPU	Switch cores
TEST CPU	Test the inactive Core/Net
TEST CNI c s	Test each inactive CNI card

Note: Testing the CP and CNI cards and synchronizing memory can take up to 20 minutes for each test. When the CP test is complete, the CP the memory is automatically synchronized.

- c. Clear the display and minor alarms on both Cores.

CDSP	Clear the displays on the Cores
CMAJ	Clear major alarms
CMIN ALL	Clear minor alarms

- d. Get the status of the Cores, CNIs, and memory.

STAT CPU	Get the status of both Cores
STAT CNI	Get the status of all configured CNIs and memory

Note: Note: You may need to execute the STAT CNI command twice before receiving a response from the system.

**** exit program

- 17 Synchronize the hard disks.

- a. Load LD 137 and synchronize the hard disks. Synchronization may take up to 50 minutes. To be sure that the contents of IODU/C 1 hard disk are copied to IODU/C 0 hard disk, verify that IODU/C 0 is disabled.

LD 137

- STAT** Get the status of the IODU/C and redundancy
- SYNC** Enter "Yes" to synchronize disks. Wait until the memory synchronization successfully completes before continuing
- TEST CMDU** Performs hard and floppy disk test.

- b. Get the status of the CMDU's and be sure CMDU 0 is active. Switch if necessary.

- STAT** Get the status of the IODU/C and redundancy
- SWAP** Switch CMDU if necessary
- STAT CMDU** Get the status of the IODU/Cs. Be sure the same IODU/C and CPU are active.
- **** exit program

- 18 Perform a data dump in LD 43.

Reverting to the previous keycode with the KRVR command

Note: The terms "old" and "new" keycode as discussed here refer to the most recent previous KNEW command. The "old" keycode is the former keycode, prior to the KNEW command. The "new" keycode is the keycode that was activated by the KNEW command.

To revert to the old keycode:

- In overlay 143, enter the **KRVR** command.

The old keycode is eligible for instant activation with the KRVR command if the only difference between the old keycode and the new keycode is that some or all of the ISM parameters in the old keycode are *higher*.

If the keycode is eligible for instant activation, it will be activated without further user action, and the following system message is given:

**CCBR020 New Keycode accepted and activated successfully.
Sysload is NOT needed!**

Otherwise, if the keycode is not eligible for instant activation, a Sysload is needed to activate the new keycode and the following system message is given:

CCBR009 New Keycode accepted. New ISM limits and feature packages will be activated during the next sysload (Cold Restart).

Follow below procedures to sysload the system if the keycodes are not eligible for Instant ISM and CCR009 message is displayed:

- 1 Place the system in split mode. This puts a redundant (shadowed) system into single (non-shadowed) mode.
 - a. Be sure CP 0 is active and CP1 is standby. You may need to switch CPUs:

LD 135

STAT CPU

SCPU

to switch CPUs if necessary

exit program

- b. Verify that IODU/C 0 is active. You may need to switch IODU/Cs.

LD 137

STAT

Get the status of IODU/C

SWAP

Switch IODU/Cs if necessary

exit program

- c. In Core 0, set the CP card MAINT/NORM switch to MAINT.
 - d. In Core 1, disable the CNI cards by setting the ENB/DIS faceplate switches to DIS.
 - e. In Core/Net 1, perform the following three steps in uninterrupted sequence:
 - press and hold the MAN RST button on the CP card
 - set the MAINT/NORM switch on the CP card to MAINT
 - release the MAN RST button A sysload will begin (cold start).
- 2 In the inactive core (Core 1), load Overlay 22 and confirm that the new ISM parameters have been updated.

```
>LD 22
REQ SLT
....
```

- 3 Switch call processing from the active core (Core 0) to the inactive core (Core 1).



CAUTION
Service Interruption

Call Processing will be interrupted! Perform these next steps carefully and quickly. This is the point at which your service is interrupted. Calls in process will be interrupted, especially if Peripheral Software Download takes place. Some calls may be dropped.

- a. In Core 0, access LD 137 to software disable the IODU/C card.


```
>LD 137
.DIS CMDU 0
```
- b. In Core 0, set the DIS/ENB faceplate switch on the IODU/C card to DIS.
- c. In Core 0, disable the CNI cards by setting the ENB/DIS faceplate switches to DIS. Call Processing will be interrupted.
- d. In Core 1, enable the CNI cards by setting the ENB/DIS faceplate to ENB.

- e. In Core 1, press the MAN INT button. Call processing will be switched from Core 0 to Core 1 when the warm restart is completed.

The previously inactive core (Core 1) with the new keycode now becomes active.

- 4 In Core 0, set the DIS/ENB faceplate switch on the IODU/C card to ENB.
- 5 In order to activate the new keycode on the new inactive core, a sysload (Cold Restart) is required.
- 6 Press the MAN RST button on Core/Net 0.
- 7 In Core 0, load Overlay 22 and confirm that the new ISM parameters have been updated.

```
>LD 22  
REQ SLT  
....
```

- 8 Return the system to redundant mode, synchronizing the memory and hard drive of the inactive core with the active core.
 - a. Enable the CNI cards by setting the ENB/DIS faceplate switch to ENB in Core/Net 0.
 - b. Perform the following in uninterrupted sequence:
 - Press and release the MAN RST button in Core/Net 0.
 - When SYS700 messages appears on LCD display on Core/Net 0, set the MAINT/NORM switch to NORM in Core/Net 0.

In 60 seconds, the LCD will display and confirm your processes with:

RUNNING ROM OS

ENTERING CP VOTE

An HWI534 message indicates the start of memory synchronization. In 10 minutes, an HWI533 message on Core/Net 1 CSPI or SDI terminal indicates the memory synchronization is complete.

- c. In Core/Net 1, set the MAINT/NORM switch on the CP card to NORM.
- 9 Test Core/Net 1 and Core/Net 0

- a. Perform a redundancy sanity test using the following sequence:

LD 135

STAT CNI	Get status of CNI cards
STAT CPU	Get status of CPU and memory
TEST CPU	Test the inactive Core/Net
TEST CNI c s	Test each inactive CNI card

- b. Switch Cores and test the other side (Core/Net 0)

SCPU	Switch cores
TEST CPU	Test the inactive Core/Net
TEST CNI c s	Test each inactive CNI card

Note: Note: Testing the CP and CNI cards and synchronizing memory can take up to 20 minutes for each test. When the CP test is complete, the CP the memory is automatically synchronized.

- c. Clear the display and minor alarms on both Cores.

CDSP	Clear the displays on the Cores
CMAJ	Clear major alarms
CMIN ALL	Clear minor alarms

- d. Get the status of the Cores, CNIs, and memory.

STAT CPU	Get the status of both Cores
STAT CNI	Get the status of all configured CNIs and memory

Note: Note: You may need to execute the STAT CNI command twice before receiving a response from the system.

**** exit program

- 10 Synchronize the hard disks.

- a. Load LD 137 and synchronize the hard disks. Synchronization may take up to 50 minutes. To be sure that the contents of IODU/C 1 hard disk are copied to IODU/C 0 hard disk, verify that IODU/C 0 is disabled.

LD 137

STAT Get the status of the IODU/C and redundancy

SYNC Enter "Yes" to synchronize disks. Wait until the memory synchronization successfully completes before continuing

TEST CMDU Performs hard and floppy disk test.

- b. Get the status of the CMDU's and be sure CMDU 0 is active. Switch if necessary.

STAT Get the status of the IODU/C and redundancy

SWAP Switch CMDU if necessary

STAT CMDU Get the status of the IODU/Cs. Be sure the same IODU/C and CPU are active.

**** exit program

IODU/C Software Installation Tool

Contents

The following are the topics in this section:

Status Summary Charts.	84
Messages.	86
Introductory Screen.	87
Install Menu.	89
Installing Software, CP-BOOTROM, and IOP-ROM.	91
Installing Software, Database, CP-BOOT ROM, and IOP-ROM.	91
Installing Software only.	91
Installing Database only.	92
Installing CP-BOOT ROM.	93
Installing CP-ROM.	93
Installing IOP-ROM.	94
Reinstalling CP-Software.	95
To copy system software from the other Core.	95
To go to the Tools Menu.	95
To Install Keycode only.	95
To quit.	95
Tools Menu.	97
Setting the system date and time.	100
Partitioning the hard disk.	101
Displaying the hard disk partition size.	101
Regenerate the PDT password.	101
To print the CD-ROM content.	101
To print the Keycode content.	103
To print the Security Device content.	104

To check the customer-specific part of the CD-ROM.	104
To manually create a Keycode diskette.	104
To install Keycode only.	104
To archive the existing database.	105
To check MDU connection.	105
To return to the Main Menu.	105

Reference list

The following are the references in this section:

- *Software Conversion Procedures (553-2001-320)*
- *Administration (553-3001-311)*
- *Hardware Replacement (553-3001-520)*

This chapter details the screen displays and options of the CD-ROM Software Installation Tool (hereafter referred to as “Software Installation Tool”) that is compatible on Options 51C, 61C, 81, and 81C systems equipped with the NT5D61 Input/Output Disk Unit with CD-ROM (IODU/C).

This tool is based on the existing Software Installation Tool, but has notable differences in menus as well as new functionality to support installation of software from CD-ROM, copying of system software from Core to Core, copying of database from Core to Core, and Keycode installation.

The IODU/C card no longer uses a Security Cartridge, but instead uses both a Security Device and an electronic keycode file. This keycode file is stored on a 2MB diskette and must be inserted into the IODU/C floppy drive and authenticated each time the Software Installation Tool is loaded and the Install Menu is accessed.

On systems equipped with an IODU/C, the database is stored on 2MB diskettes, not 4MB diskettes. A Database Transfer Utility diskette, specific to Call Processor type, is available to convert a 4MB database to a 2MB database. Refer to *Software Conversion Procedures (553-2001-320)* and *Hardware Replacement (553-3001-520)* for procedures on upgrading from systems equipped with IOP and CMDU or IOP/CMDU cards to IODU/C.

The Tools Menu has new options for finding the CD-ROM status (option <g>), printing the Keycode (option <h>), printing information about the Security Device (option <i>), checking the customer-specific CD-ROM data (<j>), manually creating a Keycode diskette (<k>), and archiving the database (<s>).

Do not turn off the system during the installation process. If you need to quit the installation process, do so from within the Software Installation Tool before powering off the system.

Read the entire procedure before attempting to perform an installation.

Before the Software Installation Tool is activated, verify that the system is in split mode (not applicable for Option 51C) and that a terminal is connected to CPSI port J25 on the I/O panel (in the inactive Core for dual CPU systems). Option 51C systems will be taken out of service.

To activate the Software Installation Tool, insert the Install diskette specific to your Call Processor type and the CD-ROM containing system software (if you will be installing that component). Press the MAN RST button on the CP card in the same Core.

The IODU/C Software Installation Tool requires the following items:

- 2MB diskettes (used to store, backup, and restore the database)
- an Install diskette specific to the system's Call Processor card
- a Keycode diskette
- a CD-ROM containing system software

Note: If you will be installing system software from CD-ROM (options <a>, , or <c> from the Install Menu), then insert the CD into the CD-ROM drive before loading the Software Installation Tool.



CAUTION
Loss of Data

The screens shown in this procedure are examples. They are not intended to exactly represent the displays that will appear for your system, nor do the choices entered represent those you should necessarily choose. Be sure to watch the terminal display, and follow the on-screen instructions.

Pay close attention to the menus when they appear; they display the options available at any given stage.

Status Summary Charts

Status Summary Charts are displayed for the purpose of informing the user about what items will be installed or have been installed. This example is shown when option (all components) is chosen from the Install Menu.

Note: Your screen may differ from this example.

 INSTALLATION STATUS SUMMARY

Option	Choice	Status	Comment
SW: CD to disk	yes		from xxxx to xxxx
SW: disk to ROM	yes		
Database	yes		
CP-BOOTROM	yes		
IOP-ROM	yes		

Please enter:
 <CR> -> <y> - Yes, start Installation.
 <n> - No, stop Installation. Return to the Main Menu.

Enter Choice> **y**

553-7731

The possible values and meanings for each column are defined below.

— Choice

- **yes** indicates the item will be installed
- **no** indicates the item was not selected, and will not be updated.

— Status

- **quit** indicates the quit option was used, and the process was exited.
- **ok** indicates the choice was installed successfully.
- **error** indicates the installation was not successful. A system message is given when the Software Installation Tool encounters a problem. Follow the actions required by the message.

- **ignore** applies to the CP ROM and IOP-ROM upgrade only. This appears when the process was exited when asked to replace a release and issue with the same release and issue.
 - **blank** indicates the status is not yet determined if Choice = Yes. If Choice = No, the field remains blank.
- Comment
- **from rel <number> to rel <number>** gives the Source and Target release and issue numbers.

Messages

When the Software Installation Tool encounters a problem, a system message appears on the terminal display. These messages fall into two categories: warning and non-warning.

Warning messages are not critical errors. The Software Installation Tool proceeds with the installation following the appearance of this message. Refer to *Administration (553-3001-311)* for details regarding these messages.

Non-warning messages appear when a critical problem is encountered. The Software Installation Tool stops the process, and an action is recommended. When the action is complete, the Software Installation Tool can be restarted. In some cases, the tool allows you to restart by pressing the carriage return <CR>.

Introductory Screen

The first screen that appears after loading the NT5D61 Software Installation Tool is the Nortel Networks Logo Screen shown below.

```

Nortel Meridian - 1 Software/Database/PEROM CDROM INSTALL Tool (x11)
=====
                                     * *
                                     * * *
* * * *           * *           * * * *
* * * *           * * * * *           * * * * * * * * * *
* * * *           * * * * * * *           * * * * * * * * * *
* * * * * * * * * * * * * * * * * * * * * * * * * * * * * * * *
* * * *           * * * *           * * * *
* * * *           * * * *           * * * *           Nortel — Meridian 1
* * * *           * * * *           * * * *           Install Tool (x11)
* * * *           * * * *           * * * *
* * * *           * * * * * * * * * * * * * * * * * * * *
* * * *           * * * * * *           * * * * * *
* * * *           * * * *           * * * *
                                     * * *
                                     * * *

Copyright 1992 - 1997 Nortel, Inc.

Please press <CR> when ready . . .
553-7728
    
```

The Main menu screen is displayed after the user presses <CR> from the NT Logo Screen. From this screen, the user may select option <u> to go to the Install Menu, or <t> to go to the Tools Menu. Alternately, option <q> to quit is available at this screen.

```
Nortel Meridian - 1 Software/Database/PEROM CDROM INSTALL Tool (x11)
=====
                M A I N   M E N U

The Software Installation Tool will install or upgrade Meridian-1
System Software, Database and the PE-ROM (both CP and IOP ROM).
You will be prompted throughout the installation and given the
opportunity to quit at any time.

Please enter:
<CR>--> <u> - To Install menu.
         <t> - To Tools menu.
         <q> - Quit.

Enter choice > u                                     553-7780
```

Install Menu

Note: A Keycode diskette is required before accessing the Install Menu.

Before the Install Menu screen is displayed, two intermediary screens shown below prompts the user to insert their Keycode diskette for validation against the Security Device.

```

Nortel Meridian - 1 Software/Database/PEROM CDROM INSTALL Tool (x11)
-----

Please insert the diskette with the keycode file into the floppy
drive.

Please enter:
<CR>--> <a> - Continue with the keycode validation
        (the keycode diskette is in the floppy drive).
        <q> - Quit.

Enter Choice > a
                                                    553-7729
    
```

```

Nortel Meridian - 1 Software/Database/PEROM CDROM INSTALL Tool (x11)
-----

Please confirm that this keycode matches the CDROM Release

Please enter:
<CR>--> <y> - Yes, the keycode matches. Go on to Install Menu.
        <n> - No, the keycode does not match. Try another keycode diskette.

Enter Choice > y
                                                    553-8365
    
```

Following successful Keycode validation, the Install Menu screen is displayed, as shown below.

Note: If the Software Installation Tool is loaded on a Core equipped with an NT5D61BA IODU/C (which lacks a CD-ROM drive), options <a>, , and <c> will not appear.

```
Nortel Meridian - 1 Software/Database/PEROM CDROM INSTALL Tool (x11)
=====
                I N S T A L L   M E N U

The Software Installation Tool will install or upgrade Meridian-1
System Software, Database and the PE-ROM (both CP and IOP ROM).
You will be prompted throughout the installation and given the
opportunity to quit at any time.

Please enter:
<CR>--> <a> - To install Software, CP-BOOTROM, IOP-ROM.
        <b> - To install Software, Database, CP-BOOTROM, IOP-ROM.
        <c> - To install Software only.
        <d> - To install Database only.
        <e> - To install CP-BOOTROM only.
        <f> - To install IOP-ROM only.
        <g> - To reinstall CP-Software.
        <o> - To copy System Software from the other Core.
        <t> - To go to the Tools menu.
        <k> - To install Keycode only.
            For Feature Expansion, use OVL143.
        <q> - Quit.

Enter Choice >
```

553-7789

Each option from the Install Menu is described in the following pages.

Installing Software, CP-BOOTROM, and IOP-ROM

Note: For dual-CPU systems, verify that the system is operating in split mode before activating the Software Installation Tool.

This option is selected for the sequential installation of software, CP-BOOTROM, and IOP-ROM. This option differs from option in that the database is not installed. Use option <a> when going to a later software release or for a software upissue.

Installing Software, Database, CP-BOOT ROM, and IOP-ROM

Note: For dual-CPU systems, verify that the system is operating in split mode before activating the Software Installation Tool.

This option is selected when you wish to sequentially install all components - software, database, CP-BOOTROM, and IOP-ROM.

Option is used during the upgrade procedures from NT5D20 IOP/CMDU, NT6D63 IOP and NT6D64 CMDU, NT9D33 SMDU, NTND16 FDU, NT8D69 MDU, and NTND16 MDU cards to NT5D61 IODU/C cards.

Installing Software only

Note: For dual-CPU systems, verify that the system is operating in split mode before activating the Software Installation Tool.

This option is selected when you wish to install system software from the CD-ROM to the hard drive. When selecting option <c>, IOP-ROM and CP-BOOTROM are not installed.

Installing Database only

Note: For dual-CPU systems, verify that the system is operating in split mode before activating the Software Installation Tool.

The Database Menu of the Software Installation Tool is accessed by the <d> option on the Install Menu. The following options are available for installing a database:

```
Nortel Meridian - 1 Software/Database/PEROM CDROM INSTALL Tool (x11)
=====
```

You will now perform the database installation.

Note: If you are installing the Database from a floppy disk,
please insert the correct disk now.

Please enter:

```
<CR>--> <a> - Install CUSTOMER Database
          (the customer database diskette must be in the Core 1 disk drive).
<b> - Install DEFAULT Database
          (the installation CDROM must be in the Core 1 disk drive).
<d> - Copy Database from the redundant disk.
<e> - Check the Database that exists on the hard disk.
<q> - Quit.
```

Enter Choice > a

553-7779

- Option <a> is to install the backup customer database from one or more 2MB diskettes.
- Option allows installation from the CD-ROM containing the default database. This option is used on new systems which have no existing database.
- Option <d> copies the existing database from the redundant Core. This option is used when the database has already been installed on one Core. This option is used when upgrading from IOP/CMDU to IODU/C cards.

- Option <e> displays the version and issue of the current database residing on the Core. If database files are missing, error messages will be printed.



CAUTION
Loss of Data

Before upgrading the system database, be sure a backup of the previous (source) database is on hand. Should any problems arise, it may be necessary to return to the previous database.

Installing CP-BOOT ROM

Note: Installation of CP-BOOTROM is available on systems with NT9D19, NT5D10, and NT5D03 Call Processor cards only. For systems with the NT6D66 Call Processor card, CP-ROM is installed instead of CP-BOOTROM. See page 93 for installing CP-ROM on a system equipped with an NT6D66.

Note: For dual-CPU systems, verify that the system is operating in split mode before activating the Software Installation Tool.

Option <e> is for installing new CP-BOOTROM. This option is used to install CP-BOOTROM while on Core 0 in a software upgrade, when software has already been installed using options <a> or on Core 1, and software has already been copied onto Core 0 using option <o>.

The next screen displayed after selecting option <e> will show the version of CP-BOOTROM being replaced and version being installed, and the card slot where the CP-BOOTROM is being installed. The user is prompted to select <a> to continue with the CP-BOOTROM upgrade.

Installing CP-ROM

Note: Installation of CP-ROM is available on systems with NT6D66 Call Processor cards only. For systems with the NT9D19, NT5D10, or NT5D03 Call Processor cards, CP-BOOTROM is installed instead of CP-BOOTROM. See page 93 for installing CP-ROM on a system equipped with an NT6D66.

Note: For dual-CPU systems, verify that the system is operating in split mode before activating the Software Installation Tool.

Option <e> is for installing new CP-ROM. This option is used to install CP-ROM while on Core 0 in a software upgrade, when software has already been installed using options <a> or on Core 1, and software has already been copied onto Core 0 using option <o>.

The next screen displayed after selecting option <e> will prompt the user to choose whether to install the CP-ROM from the hard disk (option <a>), or from CD-ROM (option). If software has just been installed successfully, then option <a> should be used. However, if software was not installed, select option to install from CD-ROM.

Installing IOP-ROM

Note: For dual-CPU systems, verify that the system is operating in split mode before activating the Software Installation Tool.

Option <f> is for installing new IOP-ROM. This option is used to install IOP-ROM while on Core 0 in a software upgrade, when software has already been installed using options <a> or on Core 1, and software has already been copied onto Core 0 using option <o>, and CP-BOOTROM has been installed using option <e>.

The next screen displayed after selecting option <f> will prompt the user to choose whether to install the IOP-ROM from the hard disk (option <a>), or from CD-ROM (option). If software has just been installed successfully, then option <a> should be used. However, if software was not installed, select option to install from CD-ROM.

The next screen displayed after selecting option <f> will show the version of IOP-ROM being replaced and version being installed, and the card slot where the IOP-ROM is being installed. The user is prompted to select <a> to continue with the IOP-ROM upgrade.

Reinstalling CP-Software

Note: For dual-CPU systems, verify that the system is operating in split mode before activating the Software Installation Tool.

This option is used if a flash programming error occurs during software installation through options <a>, , or <c>. Option <g>, which assumes that software files have already been installed on the hard disk, copies these files from the hard disk to the Flash EEPROM.

To copy system software from the other Core

Note: For dual-CPU systems, verify that the system is operating in split mode before activating the Software Installation Tool.

Option <o> is used during a software upgrade when software has already been installed on Core 1, and the Software Installation Tool has been loaded on Core 0.

Note: This option does not perform the installation of CP-BOOTROM (option <e>) or IOP-ROM (option <f>).

To go to the Tools Menu

Option <t> displays the Tools Menu and its options, which are described beginning on page 97.

To Install Keycode only

Option <k> is used when you wish to replace an existing Keycode.

To quit

Note: For dual-CPU systems, verify that the system is operating in split mode before activating the Software Installation Tool.

Throughout the installation process, the option to quit is always available. Quitting with the Software Installation Tool quit commands is preferable to pressing the MAN RST button on the CP card, since quitting from the tool will erase unneeded temporary files.

When you are done using the NT5D61 Software Install Tool remove the diskette from the IODU/C and select option <q> to quit from the Installation menu. The terminal displays a confirmation to quit. Pressing <y> confirms the quit.

```
Nortel Meridian - 1 Software/Database/PEROM CDROM INSTALL Tool (x11)
-----
You selected to Quit. Please confirm.

Please enter:
<CR>--> <y> - Yes, Quit.
        <n> - No, DO NOT Quit.

Enter choice > y                                     553-7751
```

The final screen displayed before quitting reminds the user that the Install diskette should be removed from the IODU/C floppy drive before pressing <a> to reboot the system.

```
Nortel Meridian - 1 Software/Database/PEROM CDROM INSTALL Tool (x11)
-----
You have selected to Quit the Software Installation Tool
You may reboot the system or return to the Main Menu.
Before rebooting the system, remove Install diskette from the floppy drive.

-----
DO NOT REBOOT USING BUTTON!!
-----

Please enter:
<a> - Reboot the system.
<CR>--> <m> - Return to the Main menu.

Enter Choice > a                                     553-7752
```

Tools Menu

To load the Software Installation Tool which contains the Tools Menu, insert the Install diskette which is compatible with your Call Processor card. Press the MAN RST button on the CP card to load the tool.

The first screen that appears after loading the NT5D61 Software Installation Tool is the Nortel Networks Logo Screen shown below.

```

Nortel Meridian - 1 Software/Database/PEROM CDROM INSTALL Tool (x11)
=====
                                     * *
                                     * * *
* * * *           * *           * * * *
* * * *           * * * * *           * * * * * * * * *
* * * *           * * * * * * *           * * * * * * * * *
* * * * * * * * * * * * * * * * * * * * * * * * * * * * *
* * * *           * * * *           * * * *
* * * *           * * * *           * * * *           Nortel — Meridian 1
* * * *           * * * *           * * * *           Install Tool (x11)
* * * *           * * * *           * * * *
* * * *           * * * * * * * * * * * * * * * * * * *
* * * *           * * * * * *           * * * * * *
* * * *           * * * *           * * *

```

Copyright 1992 - 1997 Nortel, Inc.

Please press <CR> when ready . . .

553-7728

This screen is displayed after the user presses <CR> from the Nortel Networks Logo Screen. From this screen, selecting option <t> brings the user to the Tools Menu.

```
Nortel Meridian - 1 Software/Database/PEROM CDROM INSTALL Tool (x11)
=====
                M A I N   M E N U

The Software Installation Tool will install or upgrade Meridian-1
System Software, Database and the PE-ROM (both CP and IOP ROM).
You will be prompted throughout the installation and given the
opportunity to quit at any time.

Please enter:
<CR>--> <u> - To Install menu.
        <t> - To Tools menu.
        <q> - Quit.

Enter choice > t
```

553-7797

Note: Insertion of the Keycode diskette is not required for accessing the Tools Menu.

The Tools Menu has new options for finding the CD-ROM status (option <g>), printing the Keycode (option <h>), printing information about the Security Device (option <i>), checking the customer-specific CD-ROM data (<j>), manually creating a Keycode diskette (<k>), and archiving the database (<s>).

The Tools Menu is displayed below.

```

Nortel Meridian - 1 Software/Database/PEROM CDROM INSTALL Tool (x11)
-----
                T O O L S   M E N U

This is the Tools Menu for Install. You can select the tool that
is appropriate. Please select one of the options below.

Please enter:
<CR>--> <a> - To set the system date and time.
        <b> - To partition the hard disk.
        <c> - To display the partition size of hard disk.
        <d> - To regenerate PDT Password.
        <g> - To print CDROM content.
        <h> - To print Keycode content.
        <i> - To print Security Device content.
        <j> - To Check the customer specific part of CDROM.
        <k> - To manually create Keycode floppy diskette.
        <r> - To install Keycode only.
        <s> - To archive existing database.
        <z> - To check MDU connection.
        <m> - To return to the Main Menu

                    553-7796

Enter choice >

```

Each option from the Tools Menu is described in the following pages.

Setting the system date and time

This option is used to change the system date and time for the system's internal clock. The correct date and time will ensure that files are time-stamped accurately.

Nortel Meridian - 1 Software/Database/PEROM CDROM INSTALL Tool (x11)

You have selected the option to set the system date and time.
This will change the internal clock of your system to a new data and time.

The system date and time are also used by Install to time-stamp the new files created.

Pressing the carriage return at the prompt below will leave the system date or time unchanged.

Please enter the new date or time.

Current date is: Tuesday 04-29-1997
Enter new date (dd mm yyyy) ? 30 4 1997
Date is set to: Wednesday 04-30-1997

Current time is: 15:52:00
Enter new time (hh mm ss) ? 15 05 45
Time is set to: 15 05 45

System Date and Time now is:
Wednesday 04-30-1997, 15:05:46

553-7743

Partitioning the hard disk

Note: Option requires a password, and should only be performed by Nortel Networks support personnel.



CAUTION
Loss of Data

Partitioning a disk erases all files from it.

Displaying the hard disk partition size

Option <c> displays the partition sizes of the hard disk. The manufacturer and model number of the hard disk are also displayed.

```

IODU 0
Hard Disk from: MAXTOR:7120SCS, Size:124MB,Sectors:248502
Unprotected   Part Size:30MB, Sectors: 60000
Spare         Part Size:30MB, Sectors: 60000
CardId        Part Size:1MB, Sectors: 2000
Protected     Part Size:60MB, Sectors: 120000
    
```

553-7742

Regenerate the PDT password

Note: Option <d> requires a password, and should only be performed by Nortel Networks support personnel.

To print the CD-ROM content

Option <g> is used to find whether a CD-ROM exists on each IODU/C, and whether its sectors are readable. After selecting <g>, three options are available:

- **Fast** readability test, which takes about 17 seconds for each CD-ROM and reads 1/30th of the CD-ROM sectors.
- **Extensive** readability test, which takes about 3 minutes for each CD-ROM and reads 1/4th of the CD-ROM sectors.
- **Total** readability test, which takes about 6 minutes for each CD-ROM and reads all sectors of the CD-ROMs.

Note: The failure of a CD-ROM drive to read a known good CD-ROM may indicate a problem with the CD-ROM drive.

To print the Keycode content

Option <h> is used when you wish to display the information contained in the current Keycode. The information displayed includes machine type, software version, ISM limits, and which feature packages are enabled.

```

System Serial Number      : 46379
Software Version         : 1811
System Type              : Option 61C
Call Processor           : CP68030
Release                  : 23
Issue                    : 30G
NTI Order Number        : 000000000000
NT SDID - 1             : 00000000
NT SDID - 2             : 00000000
Date and Time of Manufacture : 06/03/1998 - 14:53:38
    
```

Note: () indicates that information is not available

ISM Limits:

```

Loop Limit              : 32
Sys TNs Limit          : 32767
ACD Agt Limit          : 32767
ACD DNs Limit          : 24000
AST Limit              : 32767
DSL Limit              : 100
LTID Limit             : 100
DCH Limit              : 64
AML Limit              : 16
MPH DSL Limit          : 100
RAN CON Limit          : 32767
RAN RTE Limit          : 512
MUS CON Limit          : 1000
Brand Index            : 1
    
```

Options Packages:

```

0-2 4-5 7-25 28-29 232-55 57-65
67 70-77 79-81 84 86 88-93
95 98-105 107-109 111 113-121 125
127 129 132-134 136 139-140 145-151
153-155 157-160 162 164 170 172-175
178-181 186 191-192 196 202-212 214-216
218-219 222-225 227-229 231 233-235 240
242-243 245-248 250-251 253-256 258-259 262-263
286 290-293 296-297 301-303 305-310 313-316
321 323-324 327-335
    
```

553-7745

To print the Security Device content

Option <i> shows specific information about the Security Device, such as Serial Number. This enables the user to find information about the Security Device without removing the NT5D61 IODU/C card.

Engineering Code (Side x)	:NT5D61AA	
Card Serial Number	:06NNTM1831RRC3 IOP	
NT SDID	:20000080	
Security Device Type	:NT_TCH	
System Serial Number	:46379	553-7746

To check the customer-specific part of the CD-ROM

Option <j> is used to check the readability of the Keycode-specified system software on the CD-ROM drive. Once all files have been checked successfully, the message “Checking directory /cdx/xxxx_DMR.Nxx ended successfully” is displayed to indicate completion.

To manually create a Keycode diskette

Option <k> is used to manually type in a keycode and save it to a 2MB diskette. Upon selecting this option, you may enter the characters into 21 Keycode entry lines of 16 characters each, which will compose the Keycode file to be saved on a 2MB diskette in the floppy drive.

Characters may be entered on the Keycode entry lines in one of two ways:

- manually entering each 16-character line followed by a <CR> or
- “pasting” each individual 16-character line, then pressing <CR> (available on a PC running Windows 95 ®, using the Copy command (Control-C) to copy a line of characters from a keycode file, positioning the cursor on the current Keycode entry line, and using the Paste command (Control-V) to paste the line).

If a line is entered which does not have 16 characters, a message will be displayed informing the user to reenter the line correctly.

To install Keycode only

Option <r> is used when you wish to replace an existing Keycode.

To archive the existing database

Option <s> is one of the methods (the ABKO and BKO commands from overlay 143 are other methods) that is available to backup the customer database to 2MB diskettes. The size of the backup files and the estimated number of 2MB diskettes required to store the database will be displayed.

To check MDU connection

Option <z> tests the connection between a connected MDU and IODU/C.

To return to the Main Menu

Option <m> is selected to return the user from the Tools Menu to the Main Menu, where the user may select to quit (<q>) or go to the Install Menu (<u>).

cPCI® MMDU software conversion

Contents

The following are the topics in this section:

Perform a parallel reload.	108
Back up current data.	108
Check the status of the hardware.	109
Check that Core 0 is active.	109
Split the Cores.	109
Install the software on Core/Net 1.	109
Transfer call processing from Core/Net 0 to Core/Net 1.	114
Test Core/Net 1.	115
Install software on Core/Net 0.	115
Enable system redundancy.	121
Test Core/Net 1 and Core/Net 0.	121
Perform a data dump.	122
Back out of a system software upgrade.	123
Split the Cores.	123
Install the software on Core/Net 1.	123
Transfer call processing from Core/Net 0 to Core/Net 1.	128
Test Core/Net 1.	128
Install software on Core/Net 0.	129
Enable system redundancy.	135
Test Core/Net 1 and Core/Net 0.	135
Perform a data dump.	136

The NT4N43AA cPCI Multi-Media Disk Unit (cPCI MMDU) is located in the extreme right hand slot next to the CP PII card. The cPCI MMDU contains the Hard drive, floppy drive and CD-ROM drive

Perform a parallel reload

You must install software on both Core hard drives. Follow the tasks below in order to complete the installation.

Note: To complete these procedures, the system must be working and connected to a terminal.

Back up current data

- 1 Load the Equipment Data Dump Program (LD 43). At the prompt, enter **LD 43** Load the program.
- 2 When "EDD000" appears on the terminal, enter **EDD** Begin the data dump.
- 3 When "DATABASE BACKUP COMPLETE" or "DATADUMP COMPLETE" appears on the terminal, enter



CAUTION **Loss of Data**

If the data dump is not successful, do not continue; contact your technical support organization. Correct any data dump problem before you continue.

Exit the program.

Check the status of the hardware

- 1 Load LD 137 to check the status of the hard disks.
LD 137
STAT Get the status of the hard disks.
TEST CMDU Perform hard and floppy disk test.

- 2 Load LD 135 and check the status of the CPs, CNIs and memories.
LD 135
STAT CPU Get the status of both CPs and memory.
STAT CNI Get the status of all configured CNIs.

Check that Core 0 is active

Check that Core 0 is active.
If Core 1 is active, make Core 0 active:

LD 135
STAT CPU Get the status of the CPUs.
SCPU Switch to Core 0 (if necessary).

Split the Cores

From the active side, split the cores:

LD 135
SPLIT Enter Split on the active core.
******** Exit program.

The system is now in split mode.

Install the software on Core/Net 1

- 1 Install the CD-ROM into the CD-ROM drive in the cPCI MMDU:
 - a. Press the button on the CD-ROM drive to open the CD-ROM disk holder.
 - b. Place the CD-ROM disk into the holder with the disk label facing up. Use the four tabs to secure the CD-ROM drive.
 - c. Press the button to close the CD-ROM disk holder.
Do not push the holder in by hand.

Note: If the CD-ROM is not in the CD-ROM drive, the installation will not continue. Insert the CD-ROM to continue.

- 2 Place the CP PII Install floppy disk into the cPCI MMDU floppy drive.

Note: If a problem is detected during the system verification. Install stops, prints an error message, and aborts the installation. If the verification is not successful, do not continue; contact your technical support organization.

- 3 Press the RESET button on CP PII. Before the install menu runs, the system validates hard disk partitioning which takes about five minutes. The screen displays:

Testing partition 0

0 percent done...1 percent done.....99 percent done....100 percent done

Testing partition 1

0 percent done...1 percent done.....99 percent done....100 percent done

Testing partition 2

0 percent done...1 percent done.....99 percent done....100 percent done completed!

Disk physical checking is completed!

There are 3 partitions in disk 0:

The size of partition 0 of disk 0 is XX MB

The size of partition 0 of disk 0 is XX MB

The size of partition 0 of disk 0 is XX MB

Disk partitions and sectors checking is completed!

- 4 From the terminal, press <cr> to start the software installation.
- 5 When prompted, remove the CP PII Install Program diskette and insert the Keycode diskette.
 - <a> Continue with keycode validation.
 - <y> Confirm that the keycode matches the CD-ROM release.

- 6 When the screen displays the Install Menu, select the following options in sequence when you are prompted to do so:

<a> Install software.

<a> Verify that the CD-ROM is now in drive.

The Installation Status Summary screen appears that lists the options to be installed.

<y> Start Installation.

<a> Continue with Upgrade.

Pre-release 3 language groups

- 7 Select a PSDL file to install. The PSDL file contains the loadware for all downloadable cards in the system and loadware for M3900 series sets.

Select one of the six PSDL files

<1> Global 10 Languages

<2> Western Europe 10 Languages

<3> Eastern Europe 10 Languages

<4> North America 6 Languages

<5> Spare Group A

<6> North America 6 Languages (Duplicate of <4>)

The languages contained in each selection are outlined as follows:

- 1 - English, French, German, Spanish, Swedish, Italian, Norwegian, Brazilian Portuguese, Finnish, Japanese Katakana.
- 2 - English, French, German, Spanish, Swedish, Norwegian, Danish, Finnish, Italian, Brazilian Portuguese.
- 3 - English, French, German, Dutch, Polish, Czech, Hungarian, Russian, Latvian, Turkish.
- 4 - English, Spanish, French, Brazilian Portuguese, Japanese Katakana, German.
- 5 - English, French, German, Spanish, Swedish, Italian, Norwegian, Portuguese, Finnish, Japanese Katakana.
- 6 - English, Spanish, French, Brazilian Portuguese, Japanese Katakana, German.

Release 3 language groups

- 8 Select a PSDL file to install. The PSDL file contains the loadware for all downloadable cards in the system and loadware for M3900 series sets.

Select one of the six PSDL files

- <1> Global 10 Languages
- <2> Western Europe 10 Languages
- <3> Eastern Europe 10 Languages
- <4> North America 6 Languages
- <5> Spare Group A
- <6> North America 6 Languages (Duplicate of <4>)

The languages contained in each selection are outlined as follows:

- 1 – Global 10 Languages (Release 3) English, French, German, Spanish, Swedish, Italian, Norwegian, Brazilian Portuguese, Finnish, Japanese Katakana.
- 2 – Western Europe 10 Languages (Release 3) English, French, German, Spanish, Swedish, Italian, Norwegian, Brazilian Portuguese, Finnish, Danish.
- 3 – Eastern Europe 10 Languages (Release 3) English, French, German, Dutch, Polish, Czech, Hungarian, Russian, Latvian, Turkish.
- 4 – North America six Languages (Release 3) English, French, German, Spanish, Brazilian Portuguese, Japanese Katakana.
- 5 – Spare Group A.
- 6 – Spare Group B.

- 9 Continue with ROM upgrade when prompted.
Select a database to install.
- <cr> Enter carriage return to continue.
 - <a> Continue with CP BOOTROM installation.
 - <a> Install the CP BOOTROM from hard disk.
 - <a> Start installation.
 - <a> Continue with ROM upgrade.
- The Installation Status Summary screen appears. Verify that CD to disk, disk to ROM, and CP-BOOTROM were installed.
- <cr> Continue.
 - <q> Quit.
Remove any diskettes and the CD-ROM from the cPCI MMDU drives.
 - <y> Confirm quit.
 - <a> Reboot the system.
- 10 The system automatically performs a sysload: several message appear on the system terminal. Wait for "DONE" and then "INI" message to display before you continue.
- While the sysload is being performed, database conversion occurs.
- Verify that the following message appears on the system terminal:
- DATA CONVERSION**
RELEASE 25.XX TO RELEASE 25.XX
- 11 Confirm that Release 25 software is installed and is working on Core/Net 1:
- LD 135** Load the program.
 - STAT CPU** Display the CPU status.
 - STAT CNI** Display the cCNI status.

Check for peripheral software download

Use LD 22 and print the Target peripheral software version. (You printed the Source peripheral software version during the pre-conversion procedure.)

If there is a difference between the Source and Target peripheral software version, a forced download occurs during initialization when coming out of parallel reload. System initialization will take longer and established calls on IPE will be dropped.

LD 22

REQ	Print.
TYPE	PSWV.
ISSP	Print issue and release.
TID	Print Tape ID.
SLLP	Print System and patch information. Print auxiliary ID.
****	Exit program.

Transfer call processing from Core/Net 0 to Core/Net 1



CAUTION

Service Interruption

The following procedure to transfer call processing can cause service interruptions. Time your procedure to minimize the effect of any breaks in service.

- 1 From Core/Net 0, the active side, transfer call processing to Core/Net 1:

LD 135	Load the program.
CUTOVR	The inactive CP become active.

Call processing is now switched from Core/Net 0 to Core/Net 1.

Test Core/Net 1

Test Call Processing. This includes, but is not limited to the following:

- 1 Check for dial tone.
- 2 Make internal, external, and network calls.
- 3 Check attendant console activity.
- 4 Check DID trunks.
- 5 Check any auxiliary processors.

Note: From this point forward you are upgrading Core/Net 0 with new software.

Install software on Core/Net 0

- 1 Install the CD-ROM into the CD-ROM drive in the cPCI MMDU:
 - a. Press the button on the CD-ROM drive to open the CD-ROM disk holder.
 - b. Place the CD-ROM disk into the holder with the disk label facing up.
 - c. Press the button again to close the CD-ROM disk holder.
Do not push the holder in by hand.

Note: If the CD-ROM is not in the CD-ROM drive, the installation will not continue. Insert the CD-ROM to continue.

- 2 Place the CP PII Install floppy disk into the cPCI MMDU floppy drive.

Note: If a problem is detected during the system verification, Install stops, prints an error message, and aborts the installation. If the verification is not successful, do not continue; contact your technical support organization.

- 3 Press the manual RESET button on the CP PII card faceplate. Before the install menu runs, the system validates hard disk partitioning which takes about five minutes. The screen displays:

Testing partition 0

0 percent done...1 percent done ...99 percent done...100
percent done

Testing partition 1

0 percent done...1 percent done...99 percent done...100 percent done

Testing partition 2

0 percent done...1 percent done.....99 percent done....100 percent completed!

Disk physical checking is completed!

There are 3 partitions in disk 0:

The size of partition 0 of disk 0 is XX MB

The size of partition 0 of disk 0 is XX MB

The size of partition 0 of disk 0 is XX MB

Disk partitions and sectors checking is completed!

- 4 At the terminal, press <cr> to start the software installation.
- 5 When prompted, remove the CP PII Install Program diskette and insert the Keycode diskette.
 - <a> Continue with keycode validation
 - <y> Confirm that the keycode matches the CD-ROM release
- 6 When the screen displays the Install Menu, select the following options in sequence when you are prompted to do so:
 - <a> Install software.
 - <a> Verify that the CD-ROM is now in drive.

The Installation Status Summary screen appears that lists the options to be installed.
 - <y> Start Installation.
 - <a> Continue with Upgrade.

Pre-release 3 language groups

- 7 Select a PSDL file to install. The PSDL file contains the loadware for all downloadable cards in the system and loadware for M3900 series sets.

Select one of the six PSDL files

- <1> Global 10 Languages
- <2> Western Europe 10 Languages
- <3> Eastern Europe 10 Languages
- <4> North America 6 Languages
- <5> Spare Group A
- <6> North America 6 Languages (Duplicate of <4>)

The languages contained in each selection are outlined as follows:

- 1 - English, French, German, Spanish, Swedish, Italian, Norwegian, Brazilian Portuguese, Finnish, Japanese Katakana.
- 2 - English, French, German, Spanish, Swedish, Norwegian, Danish, Finnish, Italian, Brazilian Portuguese.
- 3 - English, French, German, Dutch, Polish, Czech, Hungarian, Russian, Latvian, Turkish.
- 4 - English, Spanish, French, Brazilian Portuguese, Japanese Katakana, German.
- 5 - English, French, German, Spanish, Swedish, Italian, Norwegian, Portuguese, Finnish, Japanese Katakana.
- 6 - English, Spanish, French, Brazilian Portuguese, Japanese Katakana, German.

Release 3 language groups

- 8 Select a PSDL file to install. The PSDL file contains the loadware for all downloadable cards in the system and loadware for M3900 series sets.

Select one of the six PSDL files

- <1> Global 10 Languages
- <2> Western Europe 10 Languages
- <3> Eastern Europe 10 Languages
- <4> North America 6 Languages
- <5> Spare Group A
- <6> North America 6 Languages (Duplicate of <4>)

The languages contained in each selection are outlined as follows:

- 1 – Global 10 Languages (Release 3) English, French, German, Spanish, Swedish, Italian, Norwegian, Brazilian Portuguese, Finnish, Japanese Katakana.
- 2 – Western Europe 10 Languages (Release 3) English, French, German, Spanish, Swedish, Italian, Norwegian, Brazilian Portuguese, Finnish, Danish.
- 3 – Eastern Europe 10 Languages (Release 3) English, French, German, Dutch, Polish, Czech, Hungarian, Russian, Latvian, Turkish.
- 4 – North America six Languages (Release 3) English, French, German, Spanish, Brazilian Portuguese, Japanese Katakana.
- 5 – Spare Group A.
- 6 – Spare Group B.

- 9** Continue with ROM upgrade when prompted.
Select a database to install.
- <cr>** Enter carriage return to continue.
 - <a>** Continue with CP BOOTROM installation.
 - <a>** Install the CP BOOTROM from hard disk.
 - <a>** Start installation.
 - <a>** Continue with ROM upgrade.
- The Installation Status Summary screen appears. Verify that CD to disk, disk to ROM, and CP-BOOTROM were installed.
- <cr>** Continue.
 - <q>** Quit (remove any diskettes and the CD-ROM from the cPCI MMDU drives).
 - <y>** Confirm quit.
 - <a>** Reboot the system.
- 10** The system automatically performs a sysload: several message appear on the system terminal. Wait for "DONE" and then "INI" message to display before you continue.
- While the sysload is being performed, database conversion occurs.
- Verify that the following message appears on the system terminal:
- DATA CONVERSION**
RELEASE 25.XX TO RELEASE 25.XX
- 11** Confirm that Release 25 software is installed and is working on Core/Net 1:
- LD 135** Load the program.
 - STAT CPU** Display the CPU status.
 - STAT CNI** Display the cCNI status.

Check for peripheral software download

Use LD 22 to print the Target peripheral software version. (You printed the Source peripheral software version during the pre-conversion procedure.)

If there is a difference between the Source and Target peripheral software version, a forced download occurs during initialization when coming out of parallel reload. System initialization will take longer and established calls on IPE will be dropped.

LD 22

REQ	PRT
TYPE	PSWV
ISSP	Print issue and release.
TID	Print Tape ID.
SLLP	Print System and patch information.
	Print auxiliary ID.
****	Exit program.

Enable system redundancy

- 1 From the active CPU, Core/Net 1, enable redundancy:

LD 135

JOIN Synchronize the memory and drives.

Test Core/Net 1 and Core/Net 0

From the active CPU, Core/Net 1, perform these tests:

- 1 Perform a redundancy sanity test using the following sequence:

LD 135

STAT CNI c s Get status of cCNI cards.
STAT CPU Get status of CPU and memory.
TEST CPU Test the CP PII card in both Core/Nets.
TEST CNI c s Test each cCNI card (core, slot).
STAT SUTL Get status of System Utility (main and Transition) cards.
TEST SUTL Test the System Utility (main and Transition) cards.
TEST IPB Test the Inter Processor Bus
TEST LCD Test the LCDs.
TEST LED Test the LEDs.

- 2 Test system redundancy:

LD 137

TEST RDUN Test redundancy.
DATA RDUN
TEST CMDU Test the cPCI MMDU card.

- 3 Switch Cores and test the other side (Core/Net 0)
 - LD 135**
 - SCPU** Switch cores.
 - TEST CPU** Test the inactive Core/Net.
 - STAT CNI c s** Get status of cCNI (both main and Transition) cards.
 - TEST CNI c s** Test cCNI (both main and Transition) cards.
 - STAT SUTL** Get status of System Utility card.
 - TEST SUTL** Test System Util card.
 - TEST IPB** Test Inter Processor Bus.
 - TEST LCD** Test LCDs.
 - TEST LED** Test LEDs

- 4 Clear the display and minor alarms on both Cores.
 - CDSP** Clear the displays on the Cores.
 - CMAJ** Clear major alarms.
 - CMIN ALL** Clear minor alarms.

- 5 Get the status of the Cores, CNIs, and memory.
 - STAT CPU** Get the status of both Cores and redundancy
 - STAT CNI c s** Get the status of all configured cCNIs (both main and Transition) cards.
 - ****** Exit program.

Perform a data dump

- 1 Load the LD 43. At the prompt, enter
 - LD 43** Load the program

- 2 Insert a floppy disk into the cPCI MMDU to capture the backup.

- 3 When "EDD000" appears on the terminal, enter
 - EDD** Begin the data dump

- 4 When “DATABASE BACKUP COMPLETE” or “DATADUMP COMPLETE” appears on the terminal, enter

**CAUTION****Loss of Data**

If the data dump is not successful, do not continue; contact your technical support organization. Correct any data dump problem before you continue.

The parallel reload procedure is complete.

Back out of a system software upgrade

To back out of a system software upgrade once it is in the redundant mode running CP PII, split the cores and install the old release of software. Perform the following procedures in order.

Split the Cores

From the active side, split the cores:

LD 135	Load the program.
SPLIT	Enter Split on the active core.
	Allow the former active side to INIT before continuing.
****	Exit the program.

The system is now in split mode.

Install the software on Core/Net 1

Install the old release of software:

- 1 Install the CD-ROM into the CD-ROM drive in the cPCI MMDU:
 - a. Press the button on the CD-ROM drive to open the CD-ROM disk holder.
 - b. Place the CD-ROM disk into the holder with the disk label facing up. Use the four tabs to secure the CD-ROM drive.
 - c. Press the button again to close the CD-ROM disk holder.
Do not push the holder in by hand.

Note: If the CD-ROM is not in the CD-ROM drive, the installation will not continue. Insert the CD-ROM to continue.

- 2 Place the Install floppy disk with the old software release into the cPCI MMDU floppy drive.

Note: If a problem is detected during the system verification, install stops, prints an error message, and aborts the installation. If the verification is not successful, do not continue; contact your technical support organization.

- 3 Press the manual RESET button on the CP PII card faceplate. Before the install menu runs, the system validates hard disk partitioning which takes about five minutes. The screen displays:

Testing partition 0

0 percent done ...1 percent done ...99 percent done....100 percent done

Testing partition 1

0 percent done ...1 percent done ...99 percent done....100 percent done

Testing partition 2

0 percent done ...1 percent done ...99 percent done....100 percent completed!

Disk physical checking is completed!

There are 3 partitions in disk 0:

The size of partition 0 of disk 0 is XX MB

The size of partition 0 of disk 0 is XX MB

The size of partition 0 of disk 0 is XX MB

Disk partitions and sectors checking is completed!

- 4 At the terminal, press <cr> to start the software installation.
- 5 When prompted, remove the Install Program diskette and insert the Keycode diskette.
 - <a> Continue with keycode validation.
 - <y> Confirm that the keycode matches the CD-ROM release.

- 6 When the screen displays the Install Menu, select the following options in sequence when you are prompted to do so:

<a> Install software.

<a> Verify that the CD-ROM is now in drive.

The Installation Status Summary screen appears that lists the options to be installed.

<y> Start Installation.

<a> Continue with Upgrade.

Pre-release 3 language groups

- 7 Select a PSDL file to install. The PSDL file contains the loadware for all downloadable cards in the system and loadware for M3900 series sets.

Select one of the six PSDL files

<1> Global 10 Languages

<2> Western Europe 10 Languages

<3> Eastern Europe 10 Languages

<4> North America 6 Languages

<5> Spare Group A

<6> North America 6 Languages (Duplicate of <4>)

The languages contained in each selection are outlined as follows:

- 1 - English, French, German, Spanish, Swedish, Italian, Norwegian, Brazilian Portuguese, Finnish, Japanese Katakana.
- 2 - English, French, German, Spanish, Swedish, Norwegian, Danish, Finnish, Italian, Brazilian Portuguese.
- 3 - English, French, German, Dutch, Polish, Czech, Hungarian, Russian, Latvian, Turkish.
- 4 - English, Spanish, French, Brazilian Portuguese, Japanese Katakana, German.
- 5 - English, French, German, Spanish, Swedish, Italian, Norwegian, Portuguese, Finnish, Japanese Katakana.
- 6 - English, Spanish, French, Brazilian Portuguese, Japanese Katakana, German.

Release 3 language groups

- 8 Select a PSDL file to install. The PSDL file contains the loadware for all downloadable cards in the system and loadware for M3900 series sets.

Select one of the six PSDL files

- <1> Global 10 Languages
- <2> Western Europe 10 Languages
- <3> Eastern Europe 10 Languages
- <4> North America 6 Languages
- <5> Spare Group A
- <6> North America 6 Languages (Duplicate of <4>)

The languages contained in each selection are outlined as follows:

- 1 – Global 10 Languages (Release 3) English, French, German, Spanish, Swedish, Italian, Norwegian, Brazilian Portuguese, Finnish, Japanese Katakana.
- 2 – Western Europe 10 Languages (Release 3) English, French, German, Spanish, Swedish, Italian, Norwegian, Brazilian Portuguese, Finnish, Danish.
- 3 – Eastern Europe 10 Languages (Release 3) English, French, German, Dutch, Polish, Czech, Hungarian, Russian, Latvian, Turkish.
- 4 – North America six Languages (Release 3) English, French, German, Spanish, Brazilian Portuguese, Japanese Katakana.
- 5 – Spare Group A.
- 6 – Spare Group B.

- 9 Continue with ROM upgrade when prompted.
Select a database to install.
- <cr> Enter carriage return to continue.
 - <a> Continue with CP BOOTROM installation.
 - <a> Install the CP BOOTROM from hard disk.
 - <a> Start installation.
 - <a> Continue with ROM upgrade.
- The Installation Status Summary screen appears. Verify that CD to disk, disk to ROM, and CP-BOOTROM were installed.
- <cr> Continue.
 - <q> Quit.
Remove any diskettes and the CD-ROM from the cPCI MMDU drives.
 - <y> Confirm quit.
 - <a> Reboot the system.
- 10 The system automatically performs a sysload: several message appear on the system terminal. Wait for "DONE" and then "INI" message to display before you continue.
- While the sysload is being performed, database conversion occurs.
- Verify that the following message appears on the system terminal:
- DATA CONVERSION**
RELEASE 25.XX TO RELEASE 25.XX
- 11 Confirm that Release XX software is installed and working on Core/Net 1:
- LD 135** Load the program.
 - STAT CPU** Display the CPU status.
 - STAT CNI** Display the cCNI status.

Check for peripheral software download

Use LD 22 to print the Target peripheral software version. (You printed the Source peripheral software version during the pre-conversion procedure.)

If there is a difference between the Source and Target peripheral software version, a forced download occurs during initialization when coming out of parallel reload. System initialization will take longer and established calls on IPE will be dropped.

LD 22

REQ	Print.
TYPE	PSWV.
ISSP	Print issue and release.
TID	Print Tape ID.
SLLP	Print System and patch information. Print auxiliary ID.
****	Exit program.

Transfer call processing from Core/Net 0 to Core/Net 1



CAUTION Service Interruption

The following procedure to transfer call processing can cause service interruptions. Time your procedure to minimize the effect of any breaks in service.

From Core/Net 0, the active side, transfer call processing to Core/Net 1:

LD 135	Load the program.
CUTOVR	The inactive CP become active.

Call processing is now switched from Core/Net 0 to Core/Net 1.

Test Core/Net 1

Test Call Processing. This includes, but is not limited to the following:

- 1 Check for dial tone.
- 2 Make internal, external, and network calls.

- 3 Check attendant console activity.
- 4 Check DID trunks.
- 5 Check any auxiliary processors.

Note: From this point forward you are upgrading Core/Net 0 with new software.

Install software on Core/Net 0

- 1 Install the CD-ROM into the CD-ROM drive in the cPCI MMDU:
 - a. Press the button on the CD-ROM drive to open the CD-ROM disk holder.
 - b. Place the CD-ROM disk into the holder with the disk label showing.
 - c. Press the button again to close the CD-ROM disk holder.
Do not push the holder in by hand.

Note: If the CD-ROM is not in the CD-ROM drive, the installation will not continue. Insert the CD-ROM to continue.

- 2 Place the Install floppy disk for the old release of software into the cPCI MMDU floppy drive.

Note: If a problem is detected during the system verification, install stops, prints an error message, and aborts the installation. If the verification is not successful, do not continue; contact your technical support organization.

- 3 Press the manual RESET button on the CP PII card faceplate. Before the Install menu runs, the system validates hard disk partitioning which takes about five minutes. The screen displays:

Testing partition 0

0 percent done...1 percent done...99 percent done....100 percent done

Testing partition 1

0 percent done...1 percent done...99 percent done....100 percent done

Testing partition 2

0 percent done...1 percent done...99 percent done....100 percent completed!

Disk physical checking is completed!

There are 3 partitions in disk 0:

The size of partition 0 of disk 0 is XX MB

The size of partition 0 of disk 0 is XX MB

The size of partition 0 of disk 0 is XX MB

Disk partitions and sectors checking is completed!

- 4 At the terminal, press <cr> to start the software installation.
- 5 When prompted, remove the Install Program diskette and insert the Keycode diskette.
 - <a> Continue with keycode validation
 - <y> Confirm that the keycode matches the CD-ROM release
- 6 When the screen displays the Install Menu, select the following options in sequence when you are prompted to do so:
 - <a> Install software.
 - <a> Verify that the CD-ROM is now in drive.The Installation Status Summary screen appears that lists the options to be installed.
 - <y> Start Installation.
 - <a> Continue with Upgrade.

Pre-release 3 language groups

- 7 Select a PSDL file to install. The PSDL file contains the loadware for all downloadable cards in the system and loadware for M3900 series sets.

Select one of the six PSDL files

- <1> Global 10 Languages
- <2> Western Europe 10 Languages
- <3> Eastern Europe 10 Languages
- <4> North America 6 Languages
- <5> Spare Group A
- <6> North America 6 Languages (Duplicate of <4>)

The languages contained in each selection are outlined as follows:

- 1 - English, French, German, Spanish, Swedish, Italian, Norwegian, Brazilian Portuguese, Finnish, Japanese Katakana.
- 2 - English, French, German, Spanish, Swedish, Norwegian, Danish, Finnish, Italian, Brazilian Portuguese.
- 3 - English, French, German, Dutch, Polish, Czech, Hungarian, Russian, Latvian, Turkish.
- 4 - English, Spanish, French, Brazilian Portuguese, Japanese Katakana, German.
- 5 - English, French, German, Spanish, Swedish, Italian, Norwegian, Portuguese, Finnish, Japanese Katakana.
- 6 - English, Spanish, French, Brazilian Portuguese, Japanese Katakana, German.

Release 3 language groups

- 8 Select a PSDL file to install. The PSDL file contains the loadware for all downloadable cards in the system and loadware for M3900 series sets.

Select one of the six PSDL files

- <1> Global 10 Languages
- <2> Western Europe 10 Languages
- <3> Eastern Europe 10 Languages
- <4> North America 6 Languages
- <5> Spare Group A
- <6> North America 6 Languages (Duplicate of <4>)

The languages contained in each selection are outlined as follows:

- 1 – Global 10 Languages (Release 3) English, French, German, Spanish, Swedish, Italian, Norwegian, Brazilian Portuguese, Finnish, Japanese Katakana.
- 2 – Western Europe 10 Languages (Release 3) English, French, German, Spanish, Swedish, Italian, Norwegian, Brazilian Portuguese, Finnish, Danish.
- 3 – Eastern Europe 10 Languages (Release 3) English, French, German, Dutch, Polish, Czech, Hungarian, Russian, Latvian, Turkish.
- 4 – North America six Languages (Release 3) English, French, German, Spanish, Brazilian Portuguese, Japanese Katakana.
- 5 – Spare Group A.
- 6 – Spare Group B.

- 9** Continue with ROM upgrade when prompted.
Select a database to install.
- <cr>** Enter carriage return to continue.
 - <a>** Continue with CP BOOTROM installation.
 - <a>** Install the CP BOOTROM from hard disk.
 - <a>** Start installation.
 - <a>** Continue with ROM upgrade.
- The Installation Status Summary screen appears. Verify that CD to disk, disk to ROM, and CP-BOOTROM were installed.
- <cr>** Continue.
 - <q>** Quit (remove any diskettes and the CD-ROM from the cPCI MMDU drives).
 - <y>** Confirm quit.
 - <a>** Reboot the system.
- 10** The system automatically performs a sysload: several message appear on the system terminal. Wait for "DONE" and then "INI" message to display before you continue.
- While the sysload is being performed, database conversion occurs.
- Verify that the following message appears on the system terminal:
- DATA CONVERSION**
RELEASE 25.XX TO RELEASE 25.XX
- 11** Confirm that Release 25.XX software is installed and working on Core/Net 1:
- LD 135** Load the program.
 - STAT CPU** Display the CPU status.
 - STAT CNI** Display the cCNI status.

Check for peripheral software download

Use LD 22 to print the Target peripheral software version. (You printed the Source peripheral software version during the pre-conversion procedure.)

If there is a difference between the Source and Target peripheral software version, a forced download occurs during initialization when coming out of parallel reload. System initialization will take longer and established calls on IPE will be dropped.

LD 22

REQ	PRT
TYPE	PSWV
ISSP	Print issue and release.
TID	Print Tape ID.
SLLP	Print System and patch information.
	Print auxiliary ID.
****	Exit program.

Enable system redundancy

- 1 From the active CPU, Core/Net 1, enable redundancy:
LD 135
JOIN Synchronize the memory and drives.

Test Core/Net 1 and Core/Net 0

From the active CPU, Core/Net 1, perform these tests:

- 1 Perform a redundancy sanity test using the following sequence:
LD 135
STAT CNI c s Get status of cCNI cards.
STAT CPU Get status of CPU and memory.
TEST CPU Test the CP PII card in both Core/Nets.
TEST CNI c s Test each cCNI card (core, slot).
STAT SUTL Get status of System Utility (main and Transition) cards.
TEST SUTL Test the System Utility (main and Transition) cards.
TEST IPB Test the Inter Processor Bus
TEST LCD Test the LCDs.
TEST LED Test the LEDs.
- 2 Test system redundancy:
LD 137
TEST RDUN Test redundancy.
DATA RDUN
TEST CMDU Test the MMDU card.
- 3 Switch Cores and test the other side (Core/Net 0)
LD 135
SCPU Switch cores.
TEST CPU Test the inactive Core/Net.
STAT CNI c s Get status of cCNI (both main and Transition) cards.
TEST CNI c s Test cCNI (both main and Transition) cards.
STAT SUTL Get status of System Utility card.

- TEST SUTL** Test System Util card.
 - TEST IPB** Test Inter Processor Bus.
 - TEST LCD** Test LCDs.
 - TEST LED** Test LEDs
- 4 Clear the display and minor alarms on both Cores.
- CDSP** Clear the displays on the Cores.
 - CMAJ** Clear major alarms.
 - CMIN ALL** Clear minor alarms.
- 5 Get the status of the Cores, CNIs, and memory.
- STAT CPU** Get the status of both Cores and redundancy
 - STAT CNI c s** Get the status of all configured cCNIs (both main and Transition) cards.
- **** Exit program.

Perform a data dump

- 1 Load the LD 43. At the prompt, enter
LD 43 Load the program
- 2 When "EDD000" appears on the terminal, enter
EDD Begin the data dump
- 3 When "DATABASE BACKUP COMPLETE" or "DATADUMP COMPLETE" appears on the terminal, enter



CAUTION

Loss of Data

If the data dump is not successful, do not continue; contact your technical support organization. Correct any data dump problem before you continue.

The software backup procedure is complete.

Adding features and ISM limits to a CP PII system

Adding new features and/or modifying Incremental Software Management (ISM) limits requires the installation of a new keycode. Keycodes are delivered via diskette or electronic file transfer and installed using the keycode management commands in LD 143 or the Meridian 1 Software Installation Tool (see Procedure 8: CD-ROM Software Installation Tool on page 255).

The procedures below outline the steps to install a new keycode that can be activated "instantly" or that requires a sysload (Cold Restart). More information on the "Instant ISM" feature can be found in the X11 Features and Services guide.

This section describes how to install a keycode to activate features and/or modify ISM limits using the commands listed below:

LD 143 commands

Keycode delivery	Keycode Installation command
Diskette	Use the KNEW F0 command in LD 143
Electronic file on a PC	Use the KUPL command in LD 143, for keycode file in ASCII format followed by the KNEW HD command
Faxed to the customer site (paper-based keycode)	Use the KMAN command in LD 143, to enter keycode manually followed by the KNEW HD command

Feature operation

Feature operation is further broken down into four options:

- Feature and ISM parameter upgrade using a keycode diskette
- Feature and ISM parameter upgrade using HyperTerminal
- Feature and ISM parameter upgrade entered manually
- Reverting to the previous keycode with the KRVR command

For the following procedures, Core 0 is initially active and Core 1 is initially inactive.

Feature and ISM parameter upgrade using a keycode diskette

Leave the system in full redundant mode (hard-disk and CPU redundancy).

- 1 Log in on a system terminal and load overlay 143.
>LD 143
CCBR000
.
- 2 Insert the new keycode diskette into the floppy drive on the active MMDU.

- 3** Enter the KDIF command and select keycode comparison options.

Note: Ensure that the new keycode does not lower ISM limits or reduce features compared with the existing keycode. If you have determined that the keycode lowers ISM limits or reduces features, do not continue with the KNEW command, but contact your Nortel Networks order management representative.

. KDIF

Please use: KDIF <param1> <param2>
with the following parameters:

NEW	accepted new keycode
REC	currently used keycode
OLD	previously used keycode
F0	candidate keycode on diskette in /f0 floppy drive
HD	candidate keycode which was uploaded to hard disk

Enter the keycode comparison option. The new keycode option is shown in **bold**.

Note: In the following example, the (REC) currently used keycode will be compared with the new keycode disk in floppy drive F0. The limits shown are for example purposes only.

.KDIF REC F0

Validating Keycode File /p/install/keycode.rec ... OK

Validating Keycode File /f0/keycode.kcd ... OK

System parameters	1st keycode:	2nd keycode:
System Serial Number	: 46XX	46XX
Software Version	: 3311	3311
System Type	: Option 81C	Option 81C
Call Processor	: CP PII	CP PII
Release	: 25	25
Issue	: XX	XX
NTI Order Number	:	
NT SDID - 1	:	

NT SDID - 2 :
Date and Time of Manufacture :

Note: () indicates that information is not available

ISM Limits	1st keycode:	2nd keycode:
Loop Limit	: 32	32
Sys TNs Limit	: 0	200
ACD Agt Limit	: 10	10
ACD DNs Limit	: 10	10
AST Limit	: 10	10

.....

Common packages for both keycodes:
0-2 4-5 7-25 28-29 32-55 58-65

.....

Additional packages in the 2nd keycode:

< **30-31**

.

- 4 Select the new keycode for activation using the **KNEW** command.

. KNEW F0

The uploaded keycode is validated against the security device.

If the following system message is given:

CCBR020 New Keycode accepted and activated successfully.
Sysload is NOT needed!

This implies that the new keycode is eligible for instant activation and no further user action is required, proceed to step 5 and 6.

Otherwise, if the keycode is not eligible for instant activation, a Sysload is needed to activate the new keycode and the following system message is given:

CCBR009 New Keycode accepted. New ISM limits and feature packages will be activated during the next sysload (Cold Restart).

Skip to step 7.

- 5** Load Overlay 22 and confirm that the new ISM parameters have been updated.
- >LD 22
REQ SLT**
....
- If ISM limits are correct then the keycode installation is complete.
- See "Reverting to the previous keycode with the KRVR command" on page...(NTP group to fill in) if ISM limits are not increased or problems exist.
- 6** Once you have confirmed that the keycode changes taken affect as expected, perform a data dump in LD 43.
- 7** For keycodes that are not eligible for Instant ISM.
- In the active core (e.g. Core 0) access LD 135 and type the "SPLIT" command. This puts a redundant (shadowed) system into single (non-shadowed) mode.
- >LD 135
.SPLIT**
.....
- 8** In the inactive core (Core 1), load Overlay 22 and confirm that the new ISM parameters have been updated.
- >LD 22
REQ SLT**
....
- 9** In the active core, access LD 135 and type the "CUTOVR" command. This transfers call processing from the active core (e.g. Core 0) to the inactive core (Core 1).
- >LD 135
.CUTOVR**
.....
- The previously inactive core (Core 1) with the new keycode now becomes active.
- 10** In order to activate the new keycode on the new inactive core, a sysload (Cold Restart) is required.
- Press the RESET button on Core 0.

- 11 In Core 0, load Overlay 22 and confirm that the new ISM parameters have been updated.
>LD 22
REQ SLT
....
- 12 In the active core, access LD 135 and type the "JOIN" command. This puts the system back to redundant mode, synchronizing the memory and hard drive of the inactive core with the active core.
>LD 135
.JOIN
....
- 13 Perform a data dump in LD 43.

Feature and ISM parameter upgrade using HyperTerminal®

Leave the system in full redundant mode (hard-disk and CPU redundancy).

- 1 On a PC, access the Meridian 1 system (via a modem) with HyperTerminal®:
 - Click the **Start button | Programs | Accessories | HyperTerminal.**
- 2 Double-click the HyperTerminal client to the Meridian 1 system.
- 3 Log into the Meridian 1 system.
- 4 Load the Keycode Management Program (LD 143).
LD 143 to load program
KUPL to upload keycodes to the hard disk on the target system
- 5 Click the **Transfer** menu in HyperTerminal and select **Send Text File.**
- 6 From the **Files of type** pull-down menu, select **All Files (*.*)**.
- 7 Locate and select the keycode file on the PC. Use the **Look in** pull-down menu to select the drive on which the keycode is located.

8 Click **Open**.

The keycode will be displayed after the KUPL prompt.

Example:

```
KUPL 0001PBX 0101
9FPAMSRHNN17KRUQAFFSPREQEVMTHTIDHRKDJHRKEJR56
```

9 Press the Enter key.

The Keycode is checked for CRC errors and is uploaded to the hard disk.

Enter the following command:

```
KDIF REC HD    to compare the existing keycode with the new
                keycode on the hard disk
```

Ensure that the new keycode does not lower ISM limits or reduce features compared with the existing keycode. If you have determined that the keycode lowers ISM limits or reduces features, do not continue with the KNEW command, but contact your Nortel Networks order management representative.

10 Select the new keycode for activation using the KNEW command.

```
KNEW HD
```

The uploaded keycode is validated against the security device.

If the following system message is given:

```
CCBR020 New Keycode accepted and activated successfully.
Sysload is NOT needed!
```

This implies that the new keycode is eligible for instant activation and no further user action is required, proceed to step 11 and 12.

Otherwise, if the keycode is not eligible for instant activation, a Sysload is needed to activate the new keycode and the following system message is given:

```
CCBR009 New Keycode accepted. New ISM limits and feature
packages will be activated during the next sysload (Cold Restart).
```

Skip to step 13.

- 11 Load Overlay 22 and confirm that the new ISM parameters have been updated.
- >LD 22**
REQ SLT
....
- If ISM limits are correct then the keycode installation is complete.
- See "Reverting to the previous keycode with the KRVR command" on page...(NTP group to fill in) if ISM limits are not increased or problems exist.
- 12 Once you have confirmed that the keycode changes taken affect as expected, perform a data dump in LD 43.
- 13 For keycodes that are not eligible for Instant ISM.
- In the active core (e.g. Core 0) access LD 135 and type the "SPLIT" command. This puts a redundant (shadowed) system into single (non-shadowed) mode.
- >LD 135**
.SPLIT
.....
- 14 In the inactive core (Core 1), load Overlay 22 and confirm that the new ISM parameters have been updated.
- >LD 22**
REQ SLT
....
- 15 In the active core, access LD 135 and type the "CUTOVR" command. This transfers call processing from the active core (e.g. Core 0) to the inactive core (Core 1).
- >LD 135**
.CUTOVR
.....
- The previously inactive core (Core 1) with the new keycode now becomes active.
- 16 In order to activate the new keycode on the new inactive core, a sysload (Cold Restart) is required.
- Press the RESET button on Core 0.

- 17 In Core 0, load Overlay 22 and confirm that the new ISM parameters have been updated.

```
>LD 22  
REQ SLT
```

....

- 18 In the active core, access LD 135 and type the "JOIN" command. This puts the system back to redundant mode, synchronizing the memory and hard drive of the inactive core with the active core.

```
>LD 135  
.JOIN
```

....

- 19 Perform a data dump in LD 43.

Feature and ISM parameter upgrade entered manually

Before beginning this procedure, you must have a copy of the keycode. The keycode can reside on paper or as an electronic file. To enter the keycode manually, you will type the keycode in LD 143 as 21 lines, 16 characters per line.

- 1 Log into the system.

- 2 Load the Keycode Management Program (LD 143).

```
LD 143          to load program
```

```
KMAN           manually enter the keycode to the target system
```

- 3 Type keycode file, 21 lines of 16 characters each. Press return to go to the next line.

Note: When entering the keycode, do not enter the header information that proceeds the keycode.

- 4 Type "end" at line 22 to end the process.

- 5 Press enter. The new keycode file will be saved on the hard disk.

Enter the following command:

KDIF REC HD to compare the existing keycode with the new
keycode on the hard disk

Ensure that the new keycode does not lower ISM limits or reduce features compared with the existing keycode. If you have determined that the keycode lowers ISM limits or reduces features, do not continue with the KNEW command, but contact your Nortel Networks order management representative.

- 6 Select the new keycode for activation using the KNEW command.

KNEW HD

The uploaded keycode is validated against the security device.

If the following system message is given:

CCBR020 New Keycode accepted and activated successfully.
Sysload is NOT needed!

This implies that the new keycode is eligible for instant activation and no further user action is required, proceed to step 7 and 8.

Otherwise, if the keycode is not eligible for instant activation, a Sysload is needed to activate the new keycode and the following system message is given:

CCBR009 New Keycode accepted. New ISM limits and feature packages will be activated during the next sysload (Cold Restart).

Skip to step 9.

- 7 Load Overlay 22 and confirm that the new ISM parameters have been updated.

>LD 22
REQ SLT

....

If ISM limits are correct then the keycode installation is complete.

See "Reverting to the previous keycode with the KRVR command" on page...(NTP group to fill in) if ISM limits are not increased or problems exist.

- 8 Once you have confirmed that the keycode changes taken affect as expected, perform a data dump in LD 43.

- 9 For keycodes that are not eligible for Instant ISM.
- In the active core (e.g. Core 0) access LD 135 and type the "SPLIT" command. This puts a redundant (shadowed) system into single (non-shadowed) mode.
- >LD 135**
.SPLIT
.....
- 10 In the inactive core (Core 1), load Overlay 22 and confirm that the new ISM parameters have been updated.
- >LD 22**
REQ SLT
....
- 11 In the active core, access LD 135 and type the "CUTOVR" command. This transfers call processing from the active core (e.g. Core 0) to the inactive core (Core 1).
- >LD 135**
.CUTOVR
.....
- The previously inactive core (Core 1) with the new keycode now becomes active.
- 12 In order to activate the new keycode on the new inactive core, a sysload (Cold Restart) is required.
- Press the RESET button on Core 0.
- 13 In Core 0, load Overlay 22 and confirm that the new ISM parameters have been updated.
- >LD 22**
REQ SLT
....
- 14 In the active core (Core 1), access LD 135 and type the "JOIN" command. This puts the system back to redundant mode, synchronizing the memory and hard drive of the inactive core with the active core.
- >LD 135**
.JOIN
.....
- 15 Perform a data dump in LD 43.

Reverting to the previous keycode with the KRVR command

Note: The terms “old” and “new” keycode as discussed here refer to the most recent previous KNEW command. The “old” keycode is the former keycode, prior to the KNEW command. The “new” keycode is the keycode that was activated by the KNEW command.

To revert to the old keycode:

- In overlay 143, enter the **KRVR** command.

The old keycode is eligible for instant activation with the KRVR command if the only difference between the old keycode and the new keycode is that some or all of the ISM parameters in the old keycode are *higher*.

If the keycode is eligible for instant activation, it will be activated without further user action, and the following system message is given:

CCBR020 New Keycode accepted and activated successfully. Sysload is NOT needed!

Otherwise, if the keycode is not eligible for instant activation, a Sysload is needed to activate the new keycode and the following system message is given:

CCBR009 New Keycode accepted. New ISM limits and feature packages will be activated during the next sysload (Cold Restart).

Follow below procedures to sysload the system if the keycodes are not eligible for Instant ISM and CCR009 message is displayed:

- 1 In the active core (e.g. Core 0) access LD 135 and type the "SPLIT" command. This puts a redundant (shadowed) system into single (non-shadowed) mode.

```
>LD 135
.SPLIT
.....
```

- 2 In the inactive core (Core 1), load Overlay 22 and confirm that the new ISM parameters have been updated.

```
>LD 22
REQ SLT
....
```

- 3** In the active core, access LD 135 and type the "CUTOVR" command. This transfers call processing from the active core (Core 0) to the inactive core (Core 1).

```
>LD 135  
.CUTOVR  
.....
```

The previously inactive core (Core 1) with the new keycode now becomes active.

- 4** In order to activate the new keycode on the new inactive core, a sysload (Cold Restart) is required.

Press the RESET button on Core 0..

- 5** In Core 0, load Overlay 22 and confirm that the new ISM parameters have been updated.

```
>LD 22  
REQ SLT  
....
```

- 6** In the active core (Core 1), access LD 135 and type the "JOIN" command. This puts the system back to redundant mode, synchronizing the memory and hard drive of the inactive core with the active core.

```
>LD 135  
.JOIN
```

Increasing NT9D19, NT5D10 CP and NT5D03 CP memory

Contents

The following are the topics in this section:

Software Release 25	151
Increasing memory on NT9D19, NT5D10 CP and NT5D03 CP cards	153
Determine your Call Processor memory configuration	154
NT5D03, NT5D10, NT9D19 CP cards	155
Install the DRAM SIMMs	159
Install the Flash memory	162
Installing new NT9D19, NT5D10 or NT5D03 CP cards on systems	163

Reference list

The following are the references in this section:

- *Hardware Upgrade Procedures (553-3001-258)*

Software Release 25

To install Release 25, your system must be operating with the required CP Flash and DRAM memory. If your system is not operating with the minimum memory requirement, the CP card(s) memory must be upgraded before installing Release 25 software.

Release 25 supports a078611, NT9D19 (68040), NT5D10 (68060), and NT5D03 (68060E) Call Processor cards. The minimum memory requirement for each system option is listed in Table 6 on page 152.

Note: Memory upgrades are not supported on A078611 CP PII Call Processor cards.

Table 6
Release 25.0x memory requirements

System type	Minimum memory requirement		
	Flash memory requirement	DRAM memory requirement	Total memory requirement
Options 51C,61C	32 MB	48 MB	80 MB
Options 81,81C <ul style="list-style-type: none"> • Options 81/81C systems operating on Call Processor 68060 or 68060E with 5 or fewer network groups (including Fiber Network Fabric systems) • any Option 81/81C system operating on Call Processor 68040 	32 MB	64 MB	96 MB
Options 81,81C <ul style="list-style-type: none"> • Options 81/81C systems operating on Call Processor 68060 or 68060E with 6 or more network groups 	32 MB	80 MB	112 MB

Increasing memory on NT9D19, NT5D10 CP and NT5D03 CP cards

DRAM SIMM memory upgrades are supported on NT5D03, NT5D10, and NT9D19 CP cards. Flash Memory upgrades are supported on NT5D03 and NT5D10 CP cards.

Memory upgrades consist of installing memory SIMMs on your existing NT9D19 or NT5D10 or NT5D03 CP card, or installing new, complete CP card(s) depending on memory requirements. Flash memory upgrades consist of installation new Flash modules on your existing NT5D10 or NT5D03 CP card.

Several system upgrades to Option 51C, 61C, 81, and 81C include procedures to upgrade CP card memory. If you are upgrading to one of these systems, do not use the procedures in this document; instead, locate the upgrade procedure that applies to your system (see *Hardware Upgrade Procedures* (553-3001-258) and use the memory upgrade procedure contained therein.



CAUTION **Damage to Equipment**

Nortel Networks recommends that only properly trained distributor personnel perform this memory SIMM upgrade. Upgrade memory on NT9D19, NT5D10, or NT5D03 CP cards involves some risk of damage to SIMMs and CP cards; personnel performing this upgrade do so at their own risk.



CAUTION **Service Interruption**

Personnel should have spare CP cards on hand or risk installation delay or system down time. Nortel Networks assumes no responsibility for any damage incurred, installation delays due to board damage, or loss due to damage or system down time.

Determine your Call Processor memory configuration

Before upgrading the Call Processor memory, determine the existing flash and DRAM SIMM configuration. This is accomplished through visual inspection (product labeling) or through Overlay 22.

Use the following procedure to determine your Call Processor memory configuration.

1 Log into your Meridian 1 system.

2 Load Overlay 22:

```
LD 22
PRT
CEQU
```

3 The example below shows the output for a 128 MB configuration..

MCFN	S1B0	S1B1	S2B0	S2B1	S2B0	S3B1	S3B0	S3B1	FLSH	TOTL
016	000	016	000	016	016	000	000	000	64	128

where:

- MCFN represents the call processor memory configuration
- S1 Slot 1 is the DRAM SIMM connector at position X5
- S2 Slot 2 is the DRAM SIMM connector at position X6
- S3 Slot 3 is the DRAM SIMM connector at position X7
- S4 Slot 4 is the DRAM SIMM connector at position X8
- B0 Bank 0 represents the DRAM memory at logical Bank 0
- B1 Bank 1 represents the DRAM memory at logical Bank 1
- FLSH is the total amount of Flash memory populated on the Call Processor board
- TOTL is the total Flash and DRAM memory populated on the Call Processor board

To determine the amount of DRAM memory in a particular slot, add the Bank 0 and Bank 1 values for that slot number.

In the example in Procedure 3 on page 154, the DRAM and Flash configuration is:

- X5 (DRAM memory) = 16 MB - the value 16 in S1B0 plus the value in 0 S1B1
- X6 (DRAM memory) = 16 MB - the value 16 in S2B0 plus the value 0 in S2B1
- X7 (DRAM memory) = 32 MB - the value 16 in S3B0 plus the value 16 in S3B1
- X8 (DRAM memory) = (empty slot) - the value 0 in S4B0 plus the value 0 in S4B1
- Flash Memory is 64 MB - the value 64 in FLSH
- Total Memory on the Call Processor card is 128 MB - the addition of all Flash and DRAM memory

When you determine the Call Processor memory configuration, proceed with the memory upgrade.

NT5D03, NT5D10, NT9D19 CP cards

Use the procedures in this section to complete the upgrade, or refer to “Install the DRAM SIMMs” on page 159 and “Install the Flash memory” on page 162 for detailed upgrade instructions.

Table 7 on page 156 defines the memory upgrade paths for the following Motorola-based Call Processor cards:

- 68060E
- 68040
- 68030

To perform a DRAM and/or Flash upgrade:

- Locate your existing processor vintage in Table 7 on page 156.
- Locate the target processor vintage in Table 7 on page 156.
- Compare the existing SIMM configuration with the target configuration.
- Determine what SIMMs must be added or deleted from the existing location.

- Add or delete DRAM SIMMs as required to achieve the target memory configuration (see Figure 1 on page 158 for the DRAM and Flash SIMM slot locations).
- Install the Flash memory modules in an available Flash connector.
- Install the label and label inserts. Discard all unused labels.

The upgrade is complete.

Table 7
Supported memory upgrade configurations


Total Memory	Total FLASH	Total DRAM	Call Processor			Slot 0	Slot 1	Slot 2	Slot 3
			68040**	68060	68060E	X5	X6	X7	X8
48	32	16	NT9D19AA NT9D19AB	NT5D10AA	NT5D03AA	16	0	0	0
64	32	32	NT9D19CA NT9D19CB	NT5D10CA	NT5D03BA	16	16	0	0
						32	0	0	0
80	32	48	NT9D19EA NT9D19EB	NT5D10EA	NT5D03CA	16	16	16	0
						16	32	0	0
96	32	64	NT9D19TA NT9D19TB	NT5D10TA	NT5D03TA	16	16	16	16
						16	16	32	0
						32	32	0	0
112*	32	80	NT9D19UA NT9D19UB	NT5D10UA	NT5D03UA	16	16	16	32
						16	32	32	0
128*	32	96	NT9D19VA NT9D19VB	NT5D10VA	NT5D03VA	16	16	32	32

* This configuration requires Release 24 or later.
 ** The 68040 CP card is available in A and B vintages. When labeling the CP card, use the appropriate vintage suffix.

Table 7
Supported memory upgrade configurations

Total Memory	Total FLASH	Total DRAM	Call Processor			Slot 0	Slot 1	Slot 2	Slot 3
			68040**	68060	68060E	X5	X6	X7	X8
						32	32	32	0
96	64	32	NT9D19HA NT9D19HB	N/A	N/A	16	16	0	0
						32	0	0	0
112	64	48	NT9D19JA NT9D19JB	NT5D10JA	NT5D03EA	16	16	16	0
						16	32	0	0
128	64	64	N/A	N/A	NT5D03FA	16	16	16	16
128	64	64	NT9D19FA NT9D19FB	NT5D10FB	NT5D03FB	16	16	16	16
						16	16	32	0
						32	32	0	0
144*	64	80	NT9D19NA NT9D19NB	NT5D10NA	NT5D03NA	16	16	16	32
						16	32	32	0
160*	64	96	NT9D19PA NT9D19PB	NT5D10PB	NT5D03PB	16	16	32	32
						32	32	32	0
* This configuration requires Release 24 or later.									
** The 68040 CP card is available in A and B vintages. When labeling the CP card, use the appropriate vintage suffix.									

Figure 1
NT9D19, NT5D10 or NT5D03 DRAM and Flash location

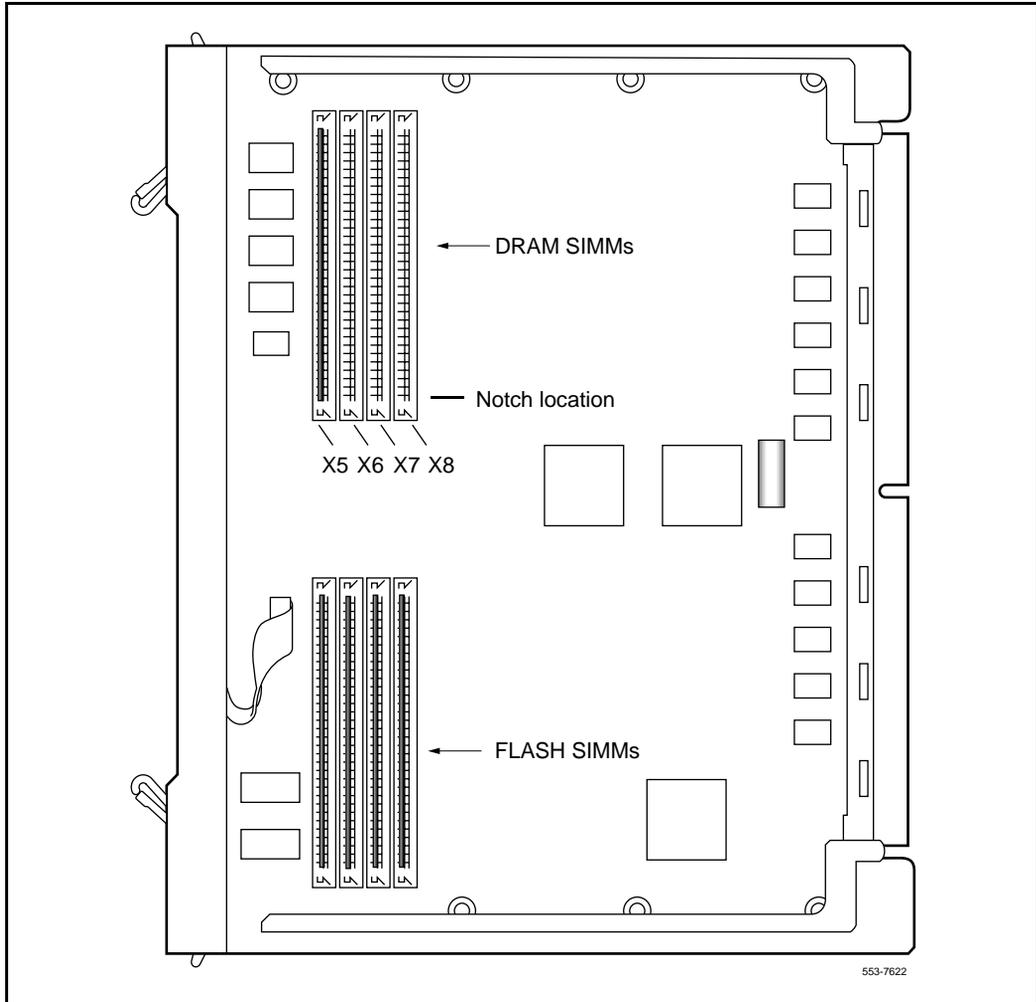

Install the DRAM SIMMs

- 1 Place the CP card SIMM-side up on the antistatic mat.
- 2 Locate the DRAM SIMM connectors (see Figure 1 on page 158).
- 3 Determine if your memory upgrade requires you to remove an existing DRAM SIMM (see.) If removal is required, remove the SIMM from the highest numbered slot available first (X8, X7, X6, etc.) To remove the DRAM SIMM:
 - a. Use a nonconducting screw driver to carefully move each latch away first from one end of the SIMM, and then the other end. The SIMM pivots away from the others until it is at approximately a 50- to 70-degree angle to the board (see Figure 1 on page 158).
 - b. If the SIMM does not release from the latches, use your thumbnails, one on each latch, to release the latches. If the board has plastic latches, the latches are located on the side facing the card faceplate. If the board has metal latches, the levers protrude from each latch. Carefully move the latches outward simultaneously until the SIMM pivots away from the others and is at approximately a 50- to 70-degree angle to the board (see Figure 1 on page 158).




CAUTION **System Failure**

Do not mix-up the 32 MB DRAM SIMM with the 16 MB DRAM SIMM. The 16 MB DRAM SIMM is labeled A0662646 or A0614334; the 32 MB DRAM SIMM is labeled A0634230. Older 16 MB DRAM SIMMs may not be labeled.

- 4 Working from left to right, install the 32 MB SIMM(s) in the SIMM location designated X5, X6, X7 or X8 where appropriate:
 - a. Orient the new SIMM so that the notch at one end of the SIMM aligns with the key at one end of the SIMM socket. Hold the SIMM at approximately a 50- to 70-degree angle and gently insert the SIMM into the socket. See Figure 2 on page 161.

- 5** Using your thumbs and index fingers only (at the upper corners of the SIMM), carefully lean the SIMM toward the others until it is upright and the latch at each end of the SIMM snaps into place. If necessary, use a nonconducting screwdriver to help open each latch while you move the SIMM into the upright position. Apply the generic label over the existing label.
- 6** Select the correct labels for your CP card from the sheet provided.
- 7** Place the CP/memory configuration label at the top of the faceplate.
- 8** Place the engineering code/release level label on the bottom of the faceplate.
- 9** Discard unused labels.

Figure 2
NT9D19, NT5D10, NT5D03 card DRAM SIMM installation

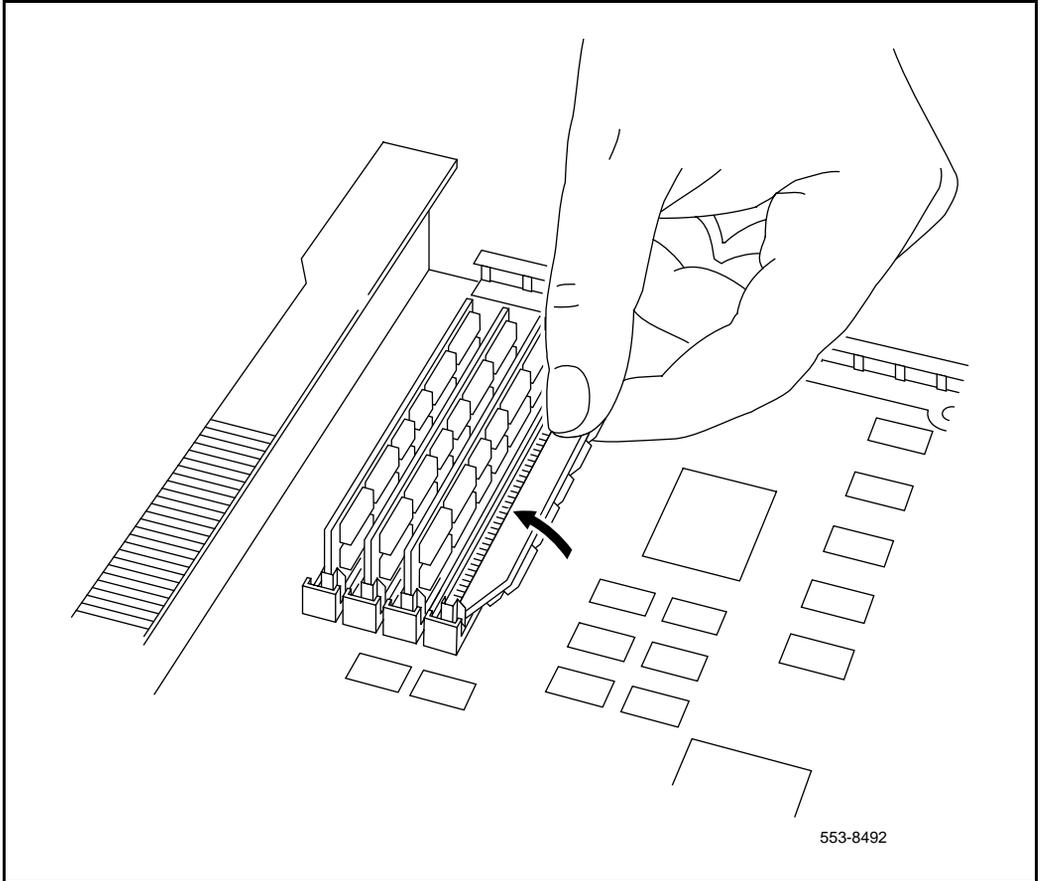

Install the Flash memory



CAUTION
System Failure

Do not remove the existing Flash SIMMS from the Call Processor board.

- 1 Place the CP card SIMM-side up on the antistatic mat.
- 2 Determine the location of the new Flash SIMM connectors.
- 3 Install the new 32 MB Flash SIMM module in the appropriate slot:
 - a. Orient the new SIMM so that the notches on the bottom of the SIMM align with the notches on the connector.
 - b. Gently guide the Flash SIMM toward the connector socket.
 - c. When the Flash SIMM makes contact with the connector, apply pressure to one end of the Flash SIMM and close the latch connector.
 - d. Apply pressure to the other end of the Flash SIMM and close the latch connector.
- 4 Apply the generic label over the existing label.
- 5 Select the correct labels for your CP card from the sheet provided.
- 6 Place the CP/memory configuration label at the top of the faceplate.
- 7 Place the engineering code/release level label on the bottom of the faceplate.
- 8 Discard unused labels.
- 9 Update the Flash ROM using the Software Install Tool:

Note: For dual CPU systems, verify that the system is operating in split mode before activating the Software Install Tool.

 - a. To activate the Software Install Tool, insert the Install disk into the inactive the IODU/C (or IOP/CMDU). Press the MAN RST button on the Call Processor card in the inactive Core.
 - b. From the Main Menu, select <G>, to update the Flash ROMs from the hard disk.

- c. Select <Y> to confirm installation.
- d. Press <CR> to return to the Install Menu.
- e. Upon successful installation of software on the Flash ROMs, select <E> to update the CP-BOOT ROM.
- f. Repeat this procedure for the second Core.

The Flash memory upgrade is complete.

Installing new NT9D19, NT5D10 or NT5D03 CP cards on systems

The following procedures describe how to increase the CP card memory by installing a new CP card with higher memory capacity. It can be used to replace and upgrade the following CP cards:

- **80 MB** NT9D19EA card with a new **96 MB** NT9D19CA card
- **80 MB** NT5D10CA card with a new **112 MB** NT5D10DA card
- **80 MB** NT5D03DA card with a new **128 MB** NT5D03EA card

Before starting the procedure, make a backup copy of the customer database using the data dump routine:

- 1 Log into the system.
- 2 Load the Equipment Data Dump Program (LD 43). At the prompt, enter **LD 43** to load the program
- 3 When "EDD000" appears on the terminal, enter **EDD** to begin the data dump

- 4 When “DATABASE BACKUP COMPLETE” or “DATADUMP COMPLETE” appears on the terminal, enter



CAUTION
Loss of Data

If the data dump is not successful, do not continue; contact your technical support organization. A data dump problem must be corrected before proceeding.

**** to exit the program

- 5 Check total memory allocation before the upgrade.

LD 10 to load the program

When the header for overlay 10 is displayed, note the value associated with Total Memory. After the upgrade, compare Total Memory before and after the upgrade. Total Memory should be greater after the upgrade.

Exit the program:

**** to exit the program

Split the cores

- 1 To access the Core during the replacement procedure, connect a terminal to the system. The CP card you are replacing must be in the inactive Core. Check the status of the NT5D10 or NT5D03 Call Processor card:

LD 135

STAT CPU determine which CP card is active

If necessary, switch Cores:

SCPU switch Cores

**** exit LD 135

- 2 Set the NORM/MAINT switch on the NT5D10 or NT5D03 Call Processor card to MAINT on the *active* Core.
- 3 Set the ENB/DIS switch on all CNI cards on the *inactive* Core to DIS.

- 4 Perform the following three steps on the *inactive* Core in an uninterrupted sequence:
 - Press and hold down the MAN RST button on the CP card on the inactive Core.
 - Set the NORM/MAINT switch to MAINT.
 - Release the MAN RST button.

The system is now in split mode where each Core is functioning independently and the automatic switchover has been disabled.

Installing equipment

- 1 Set the NORM/MAINT switch to MAINT on the replacement card.
- 2 Insert the CP Install Program diskette which corresponds with the NT5D10 or NT5D03 Call Processor (68060 or 68060E).
- 3 Remove the current CP card and put it in a static bag and box.
- 4 Insert the CP replacement card into its vacated slot and hook the locking devices.
- 5 Press the MAN RST button on the replacement CP card.
- 6 When the NT Logo Screen appears on the terminal, press <CR>.
- 7 Press <CR> to continue.
- 8 Log into the system and enter the time and date, when prompted.
- 9 Initiate the database installation by selecting the following command from the menu:

<u> to Install menu
- 10 Remove the CP Install Program diskette and insert the Keycode diskette, when prompted.

<a> to continue with keycode validation

<y> to confirm that the keycode matches the CD-ROM release
- 11 When the Install Menu appears, select the following options in sequence:

<g> to reinstall CP software

<y> to start installation

<a> to continue ROM upgrade
<cr> to return to the Install Menu

12 When the Install Menu appears, select the following options in sequence

<e> to install CP-BOOTROM
<y> to start installation
<a> to continue with the upgrade

13 A Status Summary is displayed indicating what was installed. Press <CR> to return to the Install Menu.

14 **Remove the diskette** from the IODU/C.

15 Select the following options to quit the Install Tool:

<q> to quit
<y> to confirm quit
<a> to reboot the system.

Note: The system will reboot. Wait for the “INI” and “DONE” messages to display before continuing. It will take at least 70 seconds between the “DONE” and “INI” messages.

After the system initialization has finished (INI messages are no longer displayed on the system terminal), check for dial tone on a telephone set.

16 Following a successful dial tone test, perform the following basic sanity tests:

- Make sure calls can be placed
- Check for error messages, line noise, chatter, or other problems. Track sources and resolve problems as necessary.

To place the system back in the redundant (normal) mode with automatic switchover capability. Perform the following five steps in uninterrupted sequence on the *inactive* Core (the Core with the replaced CP card):

17 Press and hold down the MAN RST button on the CP card of the *inactive* Core.

18 While holding down the MAN RST button, set the NORM/MAINT switch on the same CP card to NORM.

19 Enable all CNI switches in the inactive Core.

20 Release the MAN RST button.

21 Set the CP card in the active Core to NORM.

After several minutes, an “HWI533” message is issued by the *active* Core indicating that the *inactive* Core memory is being synchronized with the *active* Core memory.

22 Log into the system through the terminal, then check the status of the replacement CP card from the active side:

LD 135 load LD 135

STAT CPU obtain the CPU status

23 If there are CCED messages generated by the STAT CPU command on the replacement CP card, set the NORM/MAINT switch to MAINT, press the reload (MAN RST) button and set the NORM/MAINT switch back to NORM. (It may take 2 to 4 minutes for memory synchronization to take place.)

After the HWI0533 message is displayed, test the replacement CP card from the active CPU:

TEST CPU the test causes a cold start on the inactive CPU

If the test results in:

CCED014 “Test failed because unable to enter SPLIT mode”

On the active CP card set the NORM/MAINT switch to NORM, and from the active side enter:

TEST CPU to test the CP card

24 Set the NORM/MAINT switch to NORM on the active CP card (if not already set).

25 Check the status of the CPUs:

STAT CPU

26 Test the CPU.

TEST CPU

27 Check the status of the CNIs:

STAT CNI

28 Switch Cores and exit the program:

SCPU

 **** exit LD 135

Note: If, using the non-conductive screw driver, the SIMM does not release from the latches, use your thumbnails, one on each latch, to release the latches: for plastic latches, the latches are located on the ends of each SIMM; for metal latches, levers protrude from each latch. Carefully move the latches outward simultaneously until the SIMM pivots away from the others and it is at approximately a 50- to 70-degree angle to the board.

Using the Distributor Keycode Application

Contents

The following are the topics in this section:

Hardware and Software Requirements	170
Installing DKA	170
Creating a Shortcut	174
Adding the KDS network client in Dial-up Networking	175
Configure the Type of Dial-Up Server	177
Downloading from KDS	178
Establish the PPP connection to the KDS server via Dial-up Networking	179
Reading from a File	185
Manually entering a keycode	186

The Distributor Keycode Application (DKA) is a Windows 95® based utility program which enables distributors to download keycodes from a remote server (known as Keycode Delivery Server (KDS)). DKA makes use of a standard Wizard Windows 95 interface to guide the user's operation.

Note: Electronic retrieval of keycodes via DKA is not supported in European markets. If you are downloading keycodes from Europe, please refer to “Using the Keycode Retrieval Utility” on page 189.

This section contains the following procedures:

- “Installing DKA” on page 170

- “Adding the KDS network client in Dial-up Networking” on page 175
- “Downloading from KDS” on page 178
- “Reading from a File” on page 185
- “Manually entering a keycode” on page 186

Note: The “Installing DKA” and “Adding the KDS connection in Dial-Up Networking ®” procedures must be completed before the “Downloading from KDS” procedure can be performed.

Hardware and Software Requirements

To install and use the DKA program, certain requirements must be met:

- You must have an PC or compatible computer with a Pentium or compatible Intel processor running the Windows 95 or Windows 95B operating system.
- A modem that supports 14.4kbps or less must be installed and configured on your PC. To ensure that a modem is configured correctly under Windows 95, you must configure a modem through the Control Panel (using 8 data bits, Parity None, Stop Bits 1). Additionally, the modem must be configured with the correct Dial Prefix (Access Code) used by your telephone system to access an outside line. This modem must access a standard analog telephone line.
- Approximately 5 MB free hard drive space for installation of the DKA program and, if desired, storage of keycodes.
- Microsoft Dial-up Networking software must be installed on the PC (provided with Windows 95)
- The following procedures must be performed before downloading keycodes: “Installing DKA.” and “Adding the KDS connection in Dial-Up Networking ®.”

Installing DKA

Once you have checked that your PC and modem meet the system requirements listed above, you are ready to install the DKA program onto your PC. Once the program is installed, you will make a Shortcut to the program. This Shortcut will appear on your Windows 95 desktop. Double-clicking this Shortcut will give you easy access to the program.


The DKA program is installed as follows:

- 1 Locate the DKA Installation diskette.
- 2 Insert the diskette, label facing upwards, into the floppy drive on your PC.
- 3 Run the Windows Explorer ® application by clicking and dragging the **Start** button on the lower left corner of the screen. Drag the **Start** button to **Program Files** then **Windows Explorer**.
- 4 In the **Windows Explorer** application, click the 3.5" Floppy drive (A:) from the left side of the window.
- 5 In the right side of the window, double-click the **Setup.exe** file (which has a computer icon to the left of it).

Wait for the **Setup** program to prepare for installation.

The Identification Screen is displayed.


- 6 Enter the requested information in the **Name** and **Company** fields.

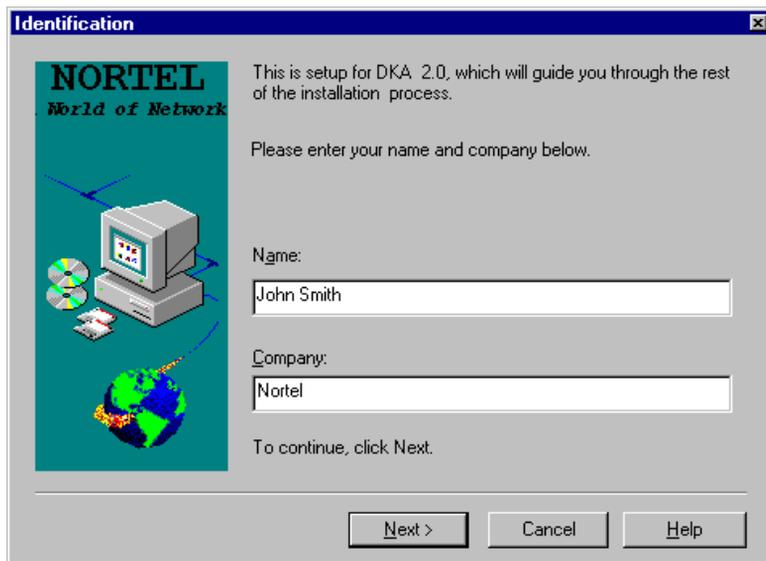

The screenshot shows a Windows-style dialog box titled "Identification". On the left side, there is a graphic with the text "NORTEL World of Network" above an illustration of a computer monitor, a keyboard, a mouse, and a globe. The main text area contains the following text: "This is setup for DKA 2.0, which will guide you through the rest of the installation process." followed by "Please enter your name and company below." Below this, there are two text input fields. The first is labeled "Name:" and contains the text "John Smith". The second is labeled "Company:" and contains the text "Nortel". At the bottom of the dialog, there are three buttons: "Next >", "Cancel", and "Help".

- 7 Click **N**ext or press return.

The Software License screen is displayed. This screen contains a scrollable text box that contains the legal agreement governing the use of the DKA software.

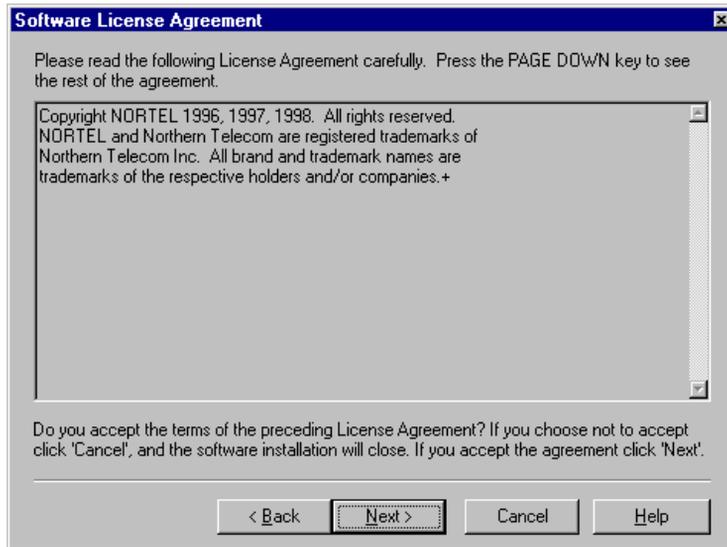


- 8 If you accept the terms of the license agreement, click the **N**ext button. If you do not accept, click **C**ancel and the program installation will be stopped.


The Destination Directory screen appears. This screen indicates that the DKA program will be installed on the hard drive in a folder called DKA.

- 9 Click **N**ext or press return.


The Read Note screen appears. This screen is used to read any Read me files for the DKA program.

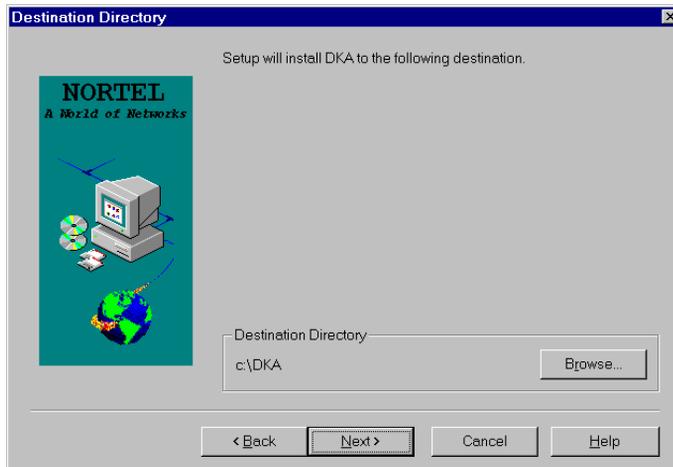

- 10 Read the contents of the Read Me files: Select file, then click **Open**. Click **Next** or press return.

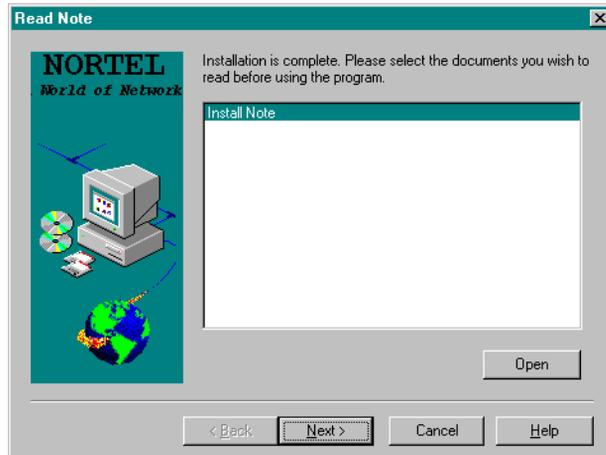

The Install Completed screen appears. This screen indicates that the Distributor Keycode Application has been successfully installed on your PC.

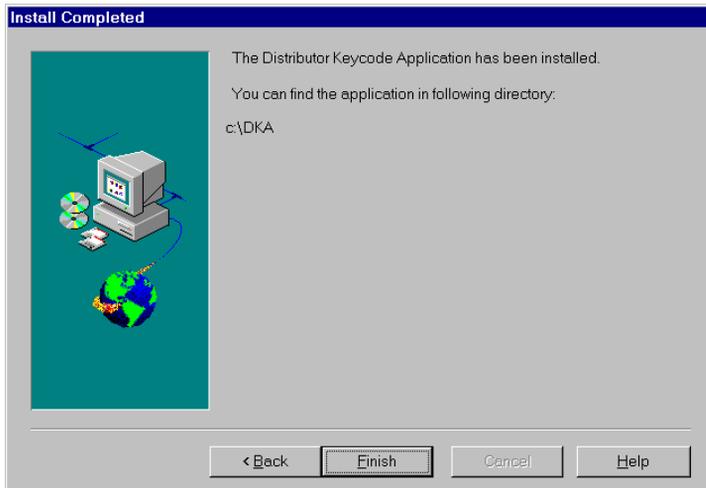

- 11 Click the **Finish** button to close the setup program.

Creating a Shortcut

To make the Distributor Keycode Application easier to access, create a Shortcut by doing the following:

- 1 Select the **dka.exe** file located in the DKA folder on the (C:) drive.
- 2 Click on the **File** menu and drag down to **Create Shortcut**.
A file called **Shortcut to dka.exe** appears in the DKA folder.
- 3 Click and drag the **Shortcut to dka.exe** file to a convenient location on your desktop and release.

Now the Distributor Keycode Application may be accessed easily by double-clicking on the **Shortcut to dka.exe** file on the desktop.

Adding the KDS network client in Dial-up Networking

Before you can download keycodes, you must configure the Dial-up Networking KDS client, as described below. Dial-up Networking stores and manages all communication parameters (phone number, dial prefixes, user name, password, etc.) necessary for connecting to the Keycode Download Server.

- 1 Click the **Start** button on the lower left corner of the PC desktop and drag to **Programs|Accessories|Dial-up Networking**.
- 2 Double-click the **Make a New Connection** icon in the Dial-Up Networking window and enter the following:

Type a name for the computer you are dialing:

Richardson KCD Server 1 (example)

Select a modem:

The modem must support 14.4kbps or less with the following configuration: *Data Bits 8, Parity None, Stop Bits 1*



- 3 Click **N**ext and enter the following for regions where the 888 Area Code is available:

Enter the Area Code as follows: 888

Telephone Number: 685-3923


Country code: United States of America

Note 1: The information entered in the Make New Connection window must match this information. If you using DKA in a market other than the United States of America, ensure that the Area Code, Telephone Number, Dial Prefix, and Country code are configured correctly.

Note 2: In regions where the 888 Area Code is not applicable, the number which must be substituted is: **(972) 685-1764**. This number must be configured in Dial-Up Networking.


- 4 Click **N**ext.

You will receive a message that you have successfully created a new Dial-Up Networking connection. Click **F**inish or press return to complete the procedure.

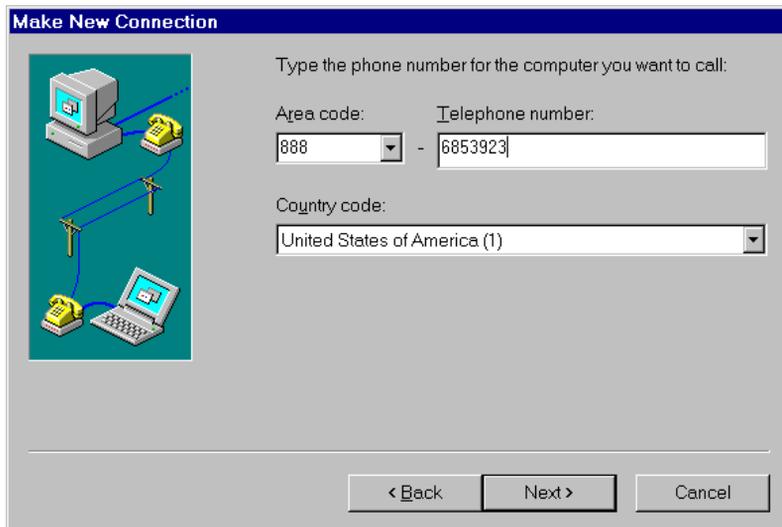


Configure the Type of Dial-Up Server

- 1 Click the **Start** button on the lower left corner of the PC desktop and drag to **Programs|Accessories|Dial-up Networking**.
- 2 Click on **Richardson KCD Server 1**.

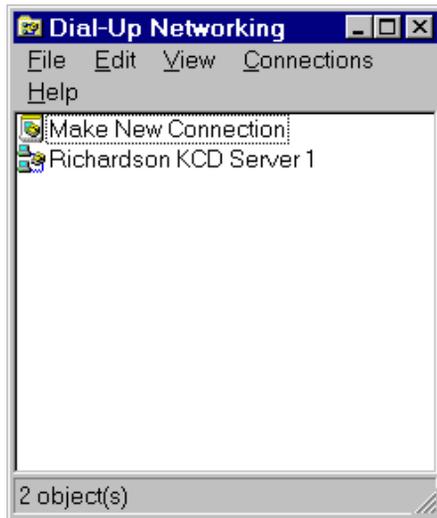

- 3 Select the **File** menu and choose **Properties**.
- 4 Click **Server Type...** to continue.
- 5 Configure the **Server Type** window with the following information:
Type of Dial-Up Server: PPP Windows 95 Windows NT 3.5 Internet
Advanced's: Enable software compression
Advanced network protocols: TCP/IP
TCP/IP Settings....: *use the default settings*
- 6 Click **OK** or press return.
- 7 Click **OK** again to return to the Dial-Up Networking window.

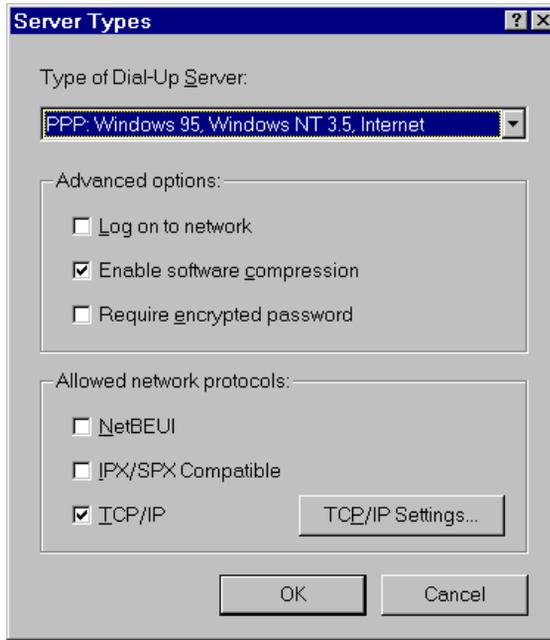

Downloading from KDS

The following procedure is used to request and receive keycodes from a remote server, known as KDS (Keycode Delivery Server). This procedure assumes that you have already installed the DKA program as described in “Installing DKA” on page 170, and have added and configured the Dial-up Networking client as described in “Adding the KDS network client in Dial-up Networking” on page 175.

Establish the PPP connection to the KDS server via Dial-up Networking

- 1 Double click on the Richardson KCD Server 1 Dial-Up Networking client. Enter user name "nortel-keycode" and password "97enable." Click the Connect button and verify that the modem dials a call and the Dial-Up Networking client successfully connects to the Richardson KCD Server 1.

Once the Dial-up Networking PPP connection has been established, continue with the download by starting the DKA application:

- 2 Double-click on the **Shortcut to DKA** icon on the PC desktop.

A gray screen appears that includes four menus and a Toolbar with buttons for essential commands.



- 3 Click on the **Tools** menu and select **Download Keycodes**.
The KDS Welcome screen appears.



- 4 Click **Next** or return to download a keycode from KDS.
The Build a Request List screen is displayed. This screen has four information fields which must be completed for each keycode request that is submitted.



- 5 Enter the information into the four fields as described in Table 8 on page 181.

Table 8
“Build a Request List” fields

Name of field	How the information is entered in the field
Product Name	Select the product family of the system for which you are requesting a keycode.
System ID	Enter the System ID for the system for which you are requesting a keycode.
NTI Number	Click in the field and type in the NTI Number for the system for which you are requesting a keycode (the NTI Number is the same as the NT order number).
File Name	<p>Enter a file name for the keycode you will be downloading.</p> <p>If the keycode will be downloaded to the hard drive ((C:) drive), use the following file naming convention: c:\DKA\<system <u="" click="" id>\nti="" number>.="" when="" you="">Add, a.kcd file extension is added to the file name.</system></p> <p>If the keycode will be downloaded to a floppy diskette in the 3.5" Floppy drive (A:), the file name must be named “keycode” so the Meridian 1 can recognize the file. When you click <u>A</u>dd, a.kcd file extension is added to the file name.</p>

- 6 Click **Add** to continue. The request will appear in the Request List scroll box.
- When a request is added to the list, another request may be added by filling out the fields with information for another keycode, and again clicking the Add button.
- To remove a request from the list, select the request in the Request List scroll box and click the Delete button.
- 7 Click the **Next** or press return.
- The KDS Billing Notice screen is displayed

- 8 Enter the information in Table 8 on page 181 into the KDS Billing Notice screen.

Table 9
Fields on the KDS Billing Notice screen

Name of field	How the information is entered in the field
Distributor Name	Enter the name of the Distributor who is requesting the keycode(s).
User Name	Enter the name of the person requesting the keycode(s).
Telephone Number	Enter the telephone number that can be used to contact the individual who is requesting the keycode(s). For example: (408) 555-1212.

- 9 Click the **Next** button or press return.

- 10 Click **Next** or press return.


The KDS Download screen is displayed.

Note: The Dial-up Networking connection must have been established, as described in “Establish the PPP connection to the KDS server via Dial-up Networking” on page 179.




- 11 Click **Start** to begin downloading the keycode(s).

Note: This starts the keycode download process. A socket connection is established over the existing PPP connection. Next, the provided login information is sent to the Keycode Delivery Server and verified. Then the requested keycodes are downloaded to your PC in the location you specified in the Build a Request List window. Status is displayed in the Download Status box.

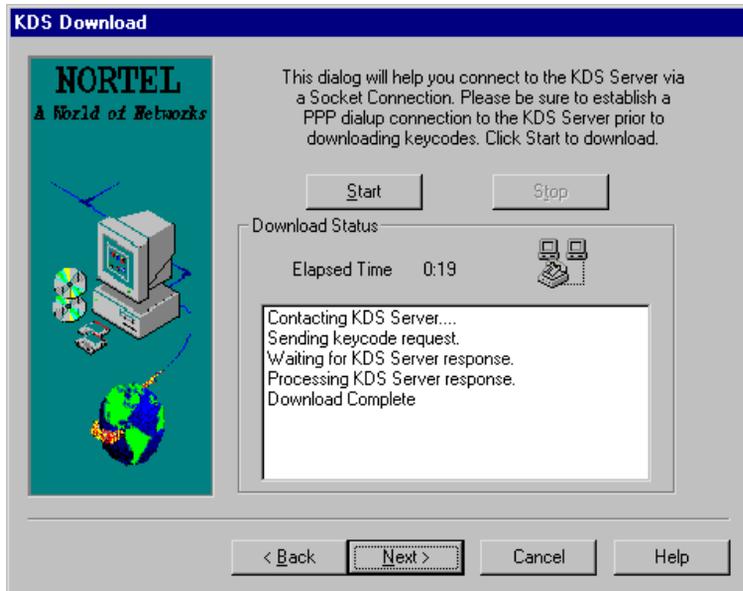

- Click **Next** to receive the “KDS Download Results” screen, summarizing the results of the download.

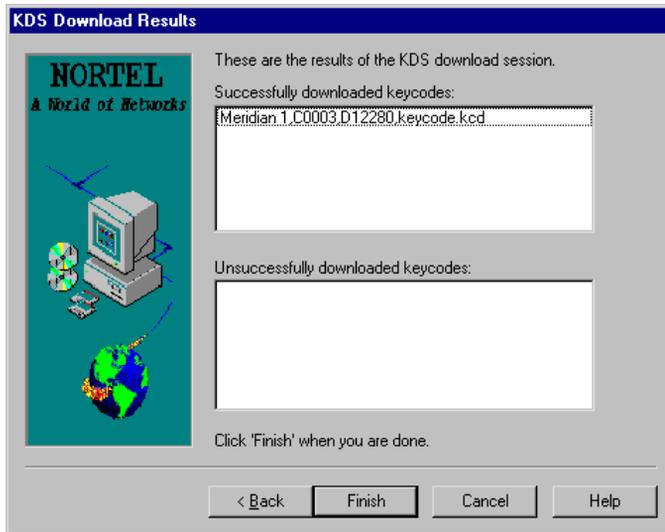

- Double-click the network icon in the lower right corner of the screen.



- The Dial-up Networking status window appears. Click the **Disconnect** button to end the connection to the network.

The “Download from KDS” procedure is complete. Refer to “Keycode Management, LD 143” in this document for keycode installation instructions.

If there was a problem downloading keycodes, the problem keycodes are listed in the “Unsuccessfully downloaded keycodes” scroll box.

Note: If the download was unsuccessful, verify that the correct telephone number and Dial Prefix are configured in Dial-up Networking.

When the requested keycode is downloaded from the Keycode Delivery System to your PC, refer to “Adding features and ISM limits” on page 53 for keycode installation procedures.

Reading from a File

The following procedure is used to learn information about the properties of an existing keycode, or a keycode that was just downloaded from KDS. In this procedure you will specify a keycode file in a location on your hard drive or on a floppy diskette that is inserted in your floppy disk drive.

You will also specify a “Product type” to examine within the keycode file, in case there are multiple keycodes within the keycode file being examined.


This procedure assumes that you have already installed the DKA program as described in “Installing DKA” on page 170.

- 1 Double-click on the **Shortcut to DKA** icon on the PC desktop.
- 2 Select **Open** from the **File** menu.

A navigation dialog box appears. In the navigation dialog box, locate the keycode. For a keycode residing on a floppy drive, this is the 3.5" Floppy drive (A:); for a keycode residing on the hard drive, this is most likely the C: drive.

- 3 Click **OK**.

The Keycode file is displayed in a format similar to the hardcopy Keycode Acknowledgment sent to a customer. The Keycode itself is displayed at the bottom of the file, in 21 rows of 16 characters each.

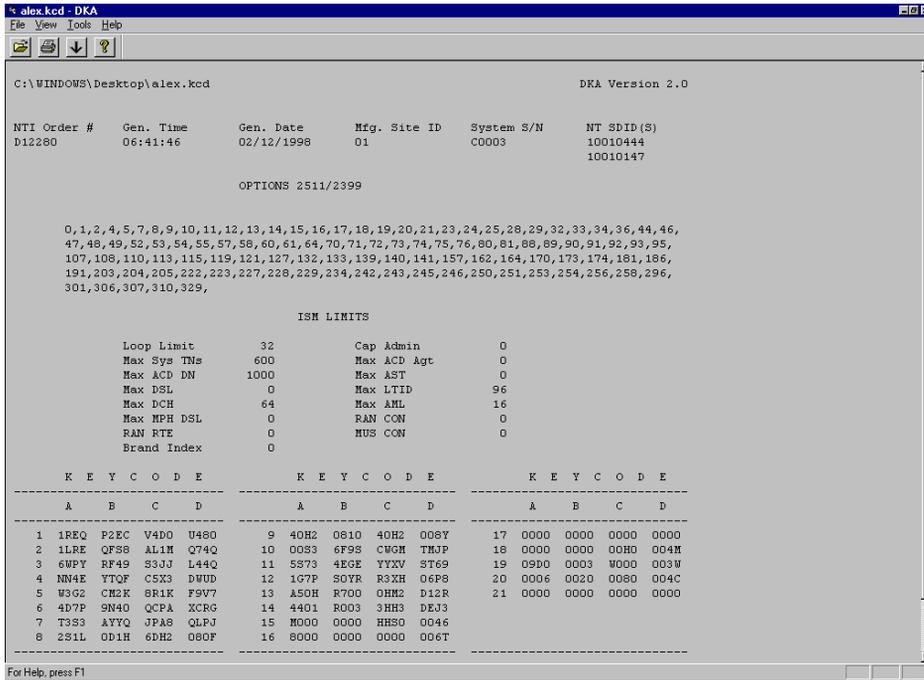

The “Reading from a File” procedure is complete.

Manually entering a keycode

The following procedure is used to manually enter a keycode for the purpose of creating and storing a keycode file.

This procedure assumes that you have already installed the DKA program as described in “Installing DKA” on page 170.

- 1 Double-click on the **Shortcut to DKA** icon on the PC desktop.
- 2 Select **Manual Entry** from the **Tools** menu.

The Keycode Entry screen is displayed. This screen consists of rows and four columns (A-D) into which the keycode is entered four characters at a time. When 16 characters (four cells) are entered in a row, the program tries to validate that row. If the row does not validate, a red X appears to the left of that row to indicate invalidity.

	A	B	C	D
15	M000	000H	THS8	000E
16	8000	0000	0000	006T
17	0000	0000	0000	0000
18	0000	0000	02H0	007P
19	3w00	2C03	w006	803N
20	0006	0020	0080	004C
21	0000	0000	0000	0000
22				

The Clear All... button is used to erase all characters in the cells that have been entered on the Keycode Entry screen. A dialog box will prompt "Are you sure you want to clear the Keycode characters?" when this button is selected. Confirming the dialog erases all characters in all cells.

- 3 When the entire keycode has been entered, click the **Save...** button.
If the keycode is valid, the Save As screen is displayed. This screen allows you to specify the file name your keycode will be saved as and the directory where it will be saved.



- 4 From the **Save in** pull-down menu, select the drive location where you want to save the keycode.
- 5 In the **File Name** field, type the name you want your keycode file to be saved as. Note that the .kcd extension will be appended to that filename.

To save the keycode file nested within folders, double-click on the folder in which the keycode file will ultimately be saved. When you have navigated to the folder where you would like to save the keycode file, click the **Save** button.
- 6 Click **Save** or press return.

The keycode file has been saved as specified. The “Manually Entering a Keycode” procedure is complete.

Using the Keycode Retrieval Utility

Contents

The following are the topics in this section:

Applying for access	189
Accessing Keycode Retrieval System application	190
Meridian 1 Keycode Retrieval System	195

The Keycode Retrieval Utility is a Nortel Networks Customer Support service feature available to registered customers. The Keycode Retrieval Utility provides a full suite of online tools, services, resources and interactive capabilities.

The Keycode Retrieval Utility provides a tool for distributors to browse and retrieve keycodes. A distributor is considered to "own" a keycode once it has been manufactured and its associated order invoiced.

If you do not have access to the Keycode Retrieval System (KRS) web site, you must apply (register) for access, and wait one to two business days for your account to be activated, before the "Downloading keycodes" procedure.

Applying for access

If you do not have access to the KRS web site, use the following procedure to register.

- 1 Start your web browser software.
- 2 Enter the URL "<http://www.nortelnetworks.com>" in the Address or Net Site bar and press Return or Enter.
- 3 Click on the Customer Support menu, then choose Register.

- 4 Under the Products and Services banner, click on the "Register for Customer Support Products" bar.
- 5 Follow the Registration instructions provided.

Accessing Keycode Retrieval System application

Use the following procedure only after you have completed the Registration procedure and your User Name and Password are activated.


- 1 Start your web browser software.
- 2 Enter the URL "<http://www.nortelnetworks.com>" in the Address or Net Site bar and press **Return** or **Enter**.
- 3 Select Customer Support on the left side of the Nortel Networks home page.

Figure 3
Nortel Networks home page



- 4 Select Keycode Retrieval System.

Figure 4
Customer Support

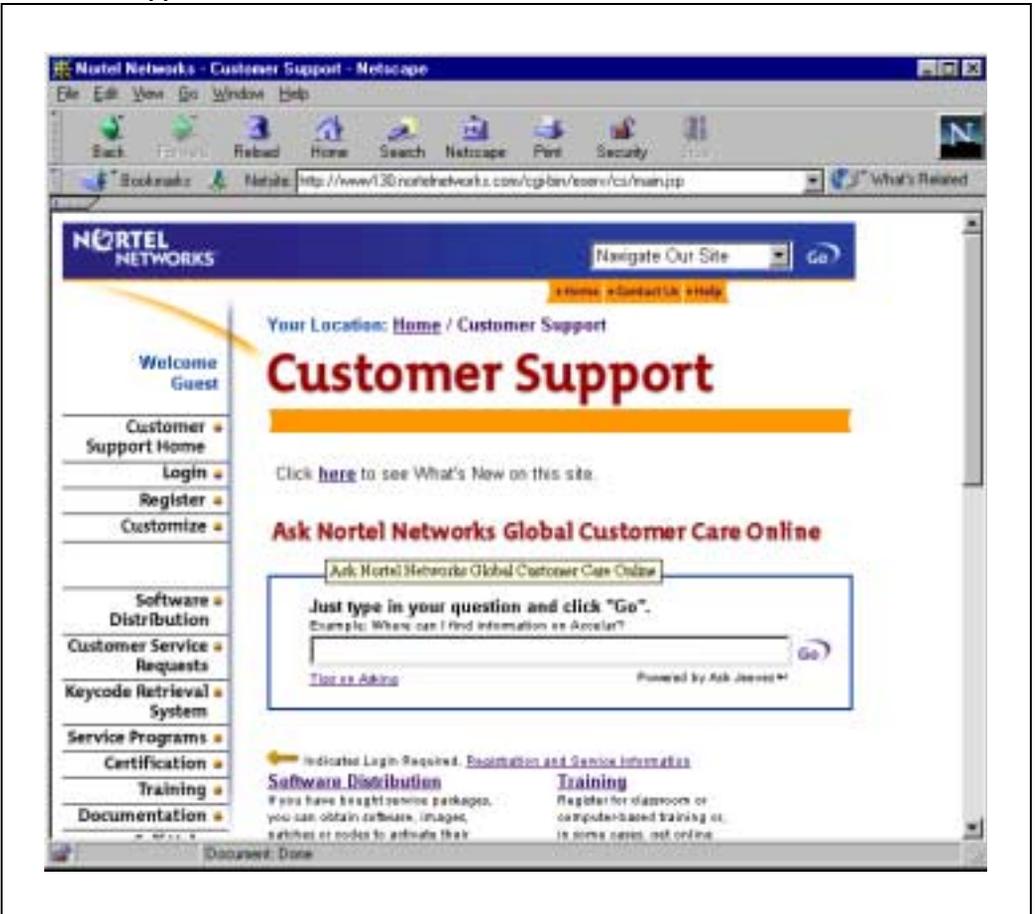

- 5 In Step 1 on the Banner Page you can:
 - a. register for access to the KRS
 - b. if you have an account, select the login type

Note: See Figure 6 for a Step1 example.
- 6 Proceed to Step 2 and select the product family for the keycode access.

Note: See Figure 7 for a Step 2 example.

Figure 5
Banner page



Figure 6
Step 1 pull-down menu

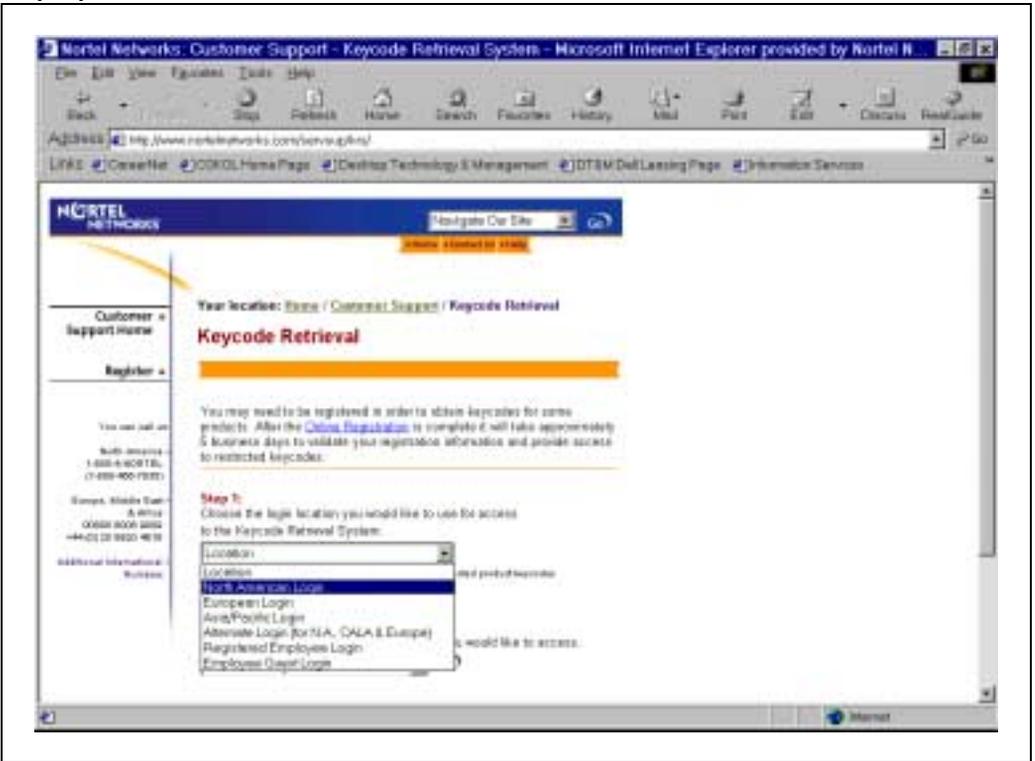


Figure 7
Step 2 pull-down menu



Meridian 1 Keycode Retrieval System


- 7 Use this link to access the keycode application for the Meridian product line.

Note: A registered user will have access to all keycode applications for the various product lines displayed.

Figure 8
Keycode Retrieval System



Figure 9
View or Download Keycode

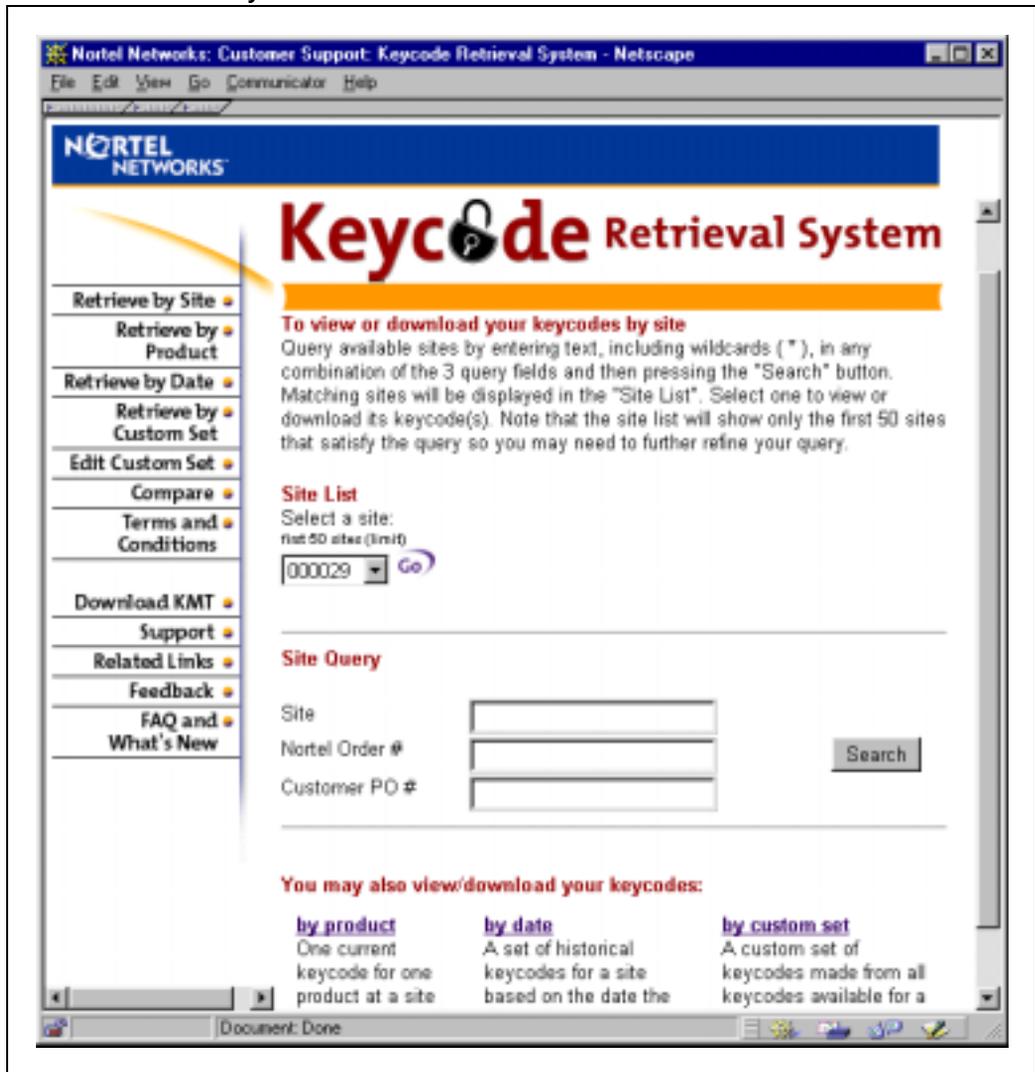

The following is an explanation of the Quick Links on left of screen:

- Retrieve by Site. Allows the user to specify a site ID and retrieve all keycodes for products associated with the entered site ID.
- Retrieve by Product. Allows the user to view Site I.D.'s sorted by product type.
- Retrieve by Date. Allows the user to retrieve all historic (previously produced) keycodes for a particular site ID.
- Retrieve by Custom Set. Allows the user to retrieve previously "grouped" keycodes by a custome label created by the user.
- Edit Custom Set. Allows the user to edit (add or delete) the contents of a custom set of keycodes.
- Compare. Allows the user to compare two keycodes of the same product type.
- Terms and Conditions. Legal disclaimers
- Download KMT. Takes the user to a site where the latest version of the KMT can be downloaded to the users desktop to manage keycodes. This client side application is only necessary for viewing downloaded keycodes when not connected to the website.
- Support. Provides the phone numbers or email address for support.
- Related Links. Takes the user to additional Nortel Networks keycode related sites.
- Feedback. Pops up an email reply that will allow the user to provide comments and suggestions back to the business owners of the KRS web site.
- FAQ and What's New.

Creating keycode diskettes

In addition to receiving a keycode diskette from Nortel Networks, a keycode diskette can be created onsite using the following methods:

- downloading a keycode from the Nortel Networks Keycode Distributor Server to a PC and creating a diskette (see “Using the Distributor Keycode Application” in this document for more information)
- entering a keycode manually using the commands in LD 143. Using this method, the keycode is entered as 21 lines of 16 characters. The keycode file is then saved to a 2 MB diskette in the floppy drive.
- entering a keycode manually in the Meridian 1 Software Installation Tool. Using this method, the keycode is entered as 21 lines of 16 characters. The keycode file is then saved to a 2 MB diskette in the floppy drive.
- All keycode files must be named keycode with no extension.

When the keycode diskette is created, the keycode is entered into the system:

- using the KNEW command in LD 143 or,
- using the Software Installation Tool

The keycode is activated on the next system sysload.

Increasing A0810496, and NT4N64 CP PII memory

Contents

The following are the topics in this section:

Reference list	202
Description	202
Operating parameters	202
Upgrading for Release 25.40 or later software	203
Perform simultaneous software and memory upgrade	203
Back up current data	203
Test system redundancy	205
Make Core 0 active	205
Split the Cores	206
Upgrade Core 1	206
Memory upgrade	207
Install the software on Core/Net	214
Transfer call processing from Core/Net 0 to Core/Net 1	226
Upgrade Core/Net 0	227
Enable system redundancy	227
Test Core/Net 1 and Core/Net 0	228
Perform a data dump	230
Back out of a system software and hardware upgrade	231
Make Core 0 active	231
Split the Cores	231
Install the software on Core/Net 1	232
Transfer call processing from Core/Net 0 to Core/Net 1	244
Test Core/Net 1	245

Install the software on Core/Net 0 245
 Enable system redundancy 245
 Test Core/Net 1 and Core/Net 0 247
 Perform a data dump 249

Reference list

The following are references for this section:

- *Hardware Replacement* (553-3001-520)

Description

The latest release of system software is shipped with new Meridian 1 systems. Introduced with Release 25.40 is a Call Processor Pentium (CP PII) card with 256 MB memory and a 256 MB Memory Upgrade Kit (NT4N19AA) for existing CP PII cards with 128 MB memory. Refer to Table 10 on page 202 for Call Processor cards.

Table 10
Call Processor cards

Call Processor	Description
A0810496	Call Processor with 128MB
NT4N64AA Rel 01	Call Processor (A0810496) upgraded from 128MB to 256MB with the CP PII Memory Upgrade Kit (NT4N19AA) and faceplate label.
NT4N64AA Rel 02 (A0844698)	Call Processor with 256MB

Operating parameters

Option 81C CP PII systems with 6 or more network groups should upgrade their DRAM to 256 MB memory at the same time they upgrade to Release 25.40. Memory upgrades for existing systems consists of replacing the DIMM on the existing CP PII cards, or installing Release 02 CP PII cards with 256MB on board.

Mixed memory configurations are not supported.

Option 81C systems configured with the NT4N64AA Rel 01 or NT4N64AA Rel 02 call processor cards require a minimum of Release 25.40 software.

Upgrading for Release 25.40 or later software

System upgrades fall into one of the following categories:

- An Option 51C/61C/81/81C CP2/CP3/CP4 upgrade to an Option 81C CP PII system. This is a major hardware upgrade/replacement. With Release 25.40 software, the 256 MB memory Call Processor card (NT4N64AA Rel 02) is used. Refer to *Hardware Replacement* (553-3001-520)
- An Option 81C CP PII with 128 MB memory upgrade to Release 25.40 software using the existing Call Processor card. This upgrade is not recommended for systems with six or more network groups.
- An Option 81C with 128 MB memory running Release 25.40 software upgrading to six or more network groups requires the NT4N64AA Rel 02 Call Processor card or the NT4N19AA Memory Upgrade Kits.
- An Option 81C CP PII with six or more network groups upgrading to Release 25.40 or later software using the NT4N64AA Rel 02 Call Processor card or the NT4N19AA Memory Upgrade Kits.

Use the tasks in this section to complete a software and memory upgrade.

Perform simultaneous software and memory upgrade

Install software on both Core hard drives. Follow the tasks below in order to complete the installation.

Note: To complete these procedures, the system must be working in redundant mode and connected to a terminal.

Back up current data

Before starting the upgrade check that:

- The system is operating in redundant mode. When the system is SPLIT, enter LD 135 and synchronize the memory and drives using the JOIN command.

- A backup copy of the customer database made with the data dump routine exists on 2 MB diskettes.



CAUTION
Loss of Data

Keep a backup copy of the database external to the switch when completing software/hardware upgrades.

Procedure 1
Backup current data

- 1 Load the Equipment Data Dump Program (LD 43). At the prompt, enter
LD 43 Load the program.
- 2 When "EDD000" appears on the terminal, enter
EDD Begin the data dump.
- 3 When "DATABASE BACKUP COMPLETE" appears on the terminal,
enter



CAUTION
Loss of Data

If the data dump is not successful, do not continue; contact your technical support group. Correct any data dump problem before you continue.

**** Exit the program.

----- *End of Procedure* -----

Test system redundancy

Procedure 2

Test system redundancy

- 1 Test system redundancy. At the prompt enter:
LD 137
STAT Get the status of the hard disks.
TEST RDUN Test redundancy
DATA RDUN Perform sector level checking on both hard disks
TEST CMDU Perform hard and floppy disk test.

- 2 Load LD 135 and check the status of the CPs, CNIs, and memory.
LD 135
STAT CPU Get the status of both CPs and memory.
STAT CNI Get the status of all configured CNIs.

----- *End of Procedure* -----

Make Core 0 active

Either Core can be upgraded first. The decision to upgrade Core 1 first is for this example only.

Procedure 3

Make Core 0 active

- 1 If Core 1 is active, make Core 0 active. At the prompt enter:
LD 135
STAT CPU Get the status of the CPUs.
SCPU Switch to Core 0.

----- *End of Procedure* -----

Split the Cores

Procedure 4 Split the cores

- 1 From the active side, split the cores. At the prompt enter:

LD 135

SPLIT

Enter Split on the active core.

Exit program.

The system is now in SPLIT mode.

----- *End of Procedure* -----

Upgrade Core 1

Procedure 5 Upgrade Core 1

- 1 Determine which of the following upgrades the system requires:
 - a Upgrade the software to Release 25.40 using the existing hardware. Continue with the "Install the software on Core/Net" on page 214.
 - b Upgrade the system with the 256 MB memory Call Processor card and Release 25.40 software. Go to step 2.
 - c Upgrade the software to Release 25.40 and replace the DIMM on the existing CP PII card. Go to step 3.
- 2 Remove the call processor card from Core 1 and replace with the NT4N64AA Rel 02 call processor card. Refer to *Hardware Replacement* (553-3001-520) for card replacement. Continue with the "Install the software on Core/Net" on page 214.



CAUTION **Damage to Equipment**

Nortel Networks recommends that only properly trained distributor personnel perform this memory DIMM upgrade. Upgrading memory on CP cards involves some risk of damage to DIMM and the CP card. Personnel performing this upgrade do so at their own risk.



CAUTION
Service Interruption

Personnel should have spare CP cards on hand or risk installation delay or system down time. Nortel Networks assumes no responsibility for any damage incurred, installation delays due to board damage, or loss due to damage or system down time.

- 3 Remove the Call Processor card from Core 1 and replace the memory module with the NT4N19AA Memory Upgrade Kit. Follow the steps provided in “Memory upgrade” on page 207.


————— *End of Procedure* —————

Memory upgrade

Procedure 6 Upgrade memory

- 1 Remove all cables connected to the faceplate of the standby Call Processor card on Core 1.
- 2 Hot unplug the card and place with the DIMM side-up on a flat, clean surface.
- 3 Hold the latches of the DIMM socket. See Figure 11 on page 208.

Figure 11
Latches

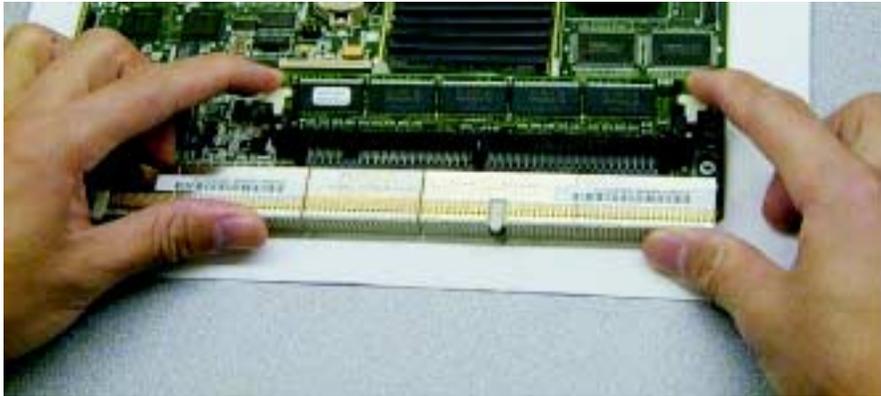


- 4 Press and rotate the latches from inside to outside carefully. See Figure 12 on page 209.

Figure 12
Rotate latches




- 5** Remove the 128 MB memory module.
- 6** Keep the latches open and insert the 256MB module into the DIMM socket. Align the two notches on the module with the two keys in the DIMM socket. See Figure 13 on page 210.

Figure 13
Insert 256MB module

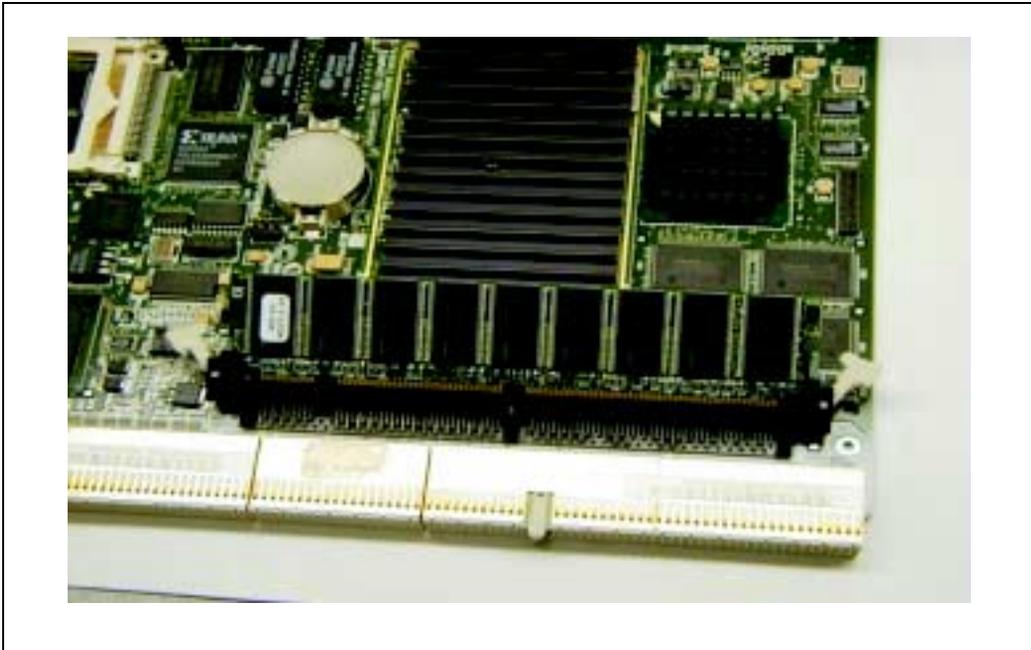


7 Hold the memory module as in Figure 14 on page 211.

Figure 14
Hold memory module

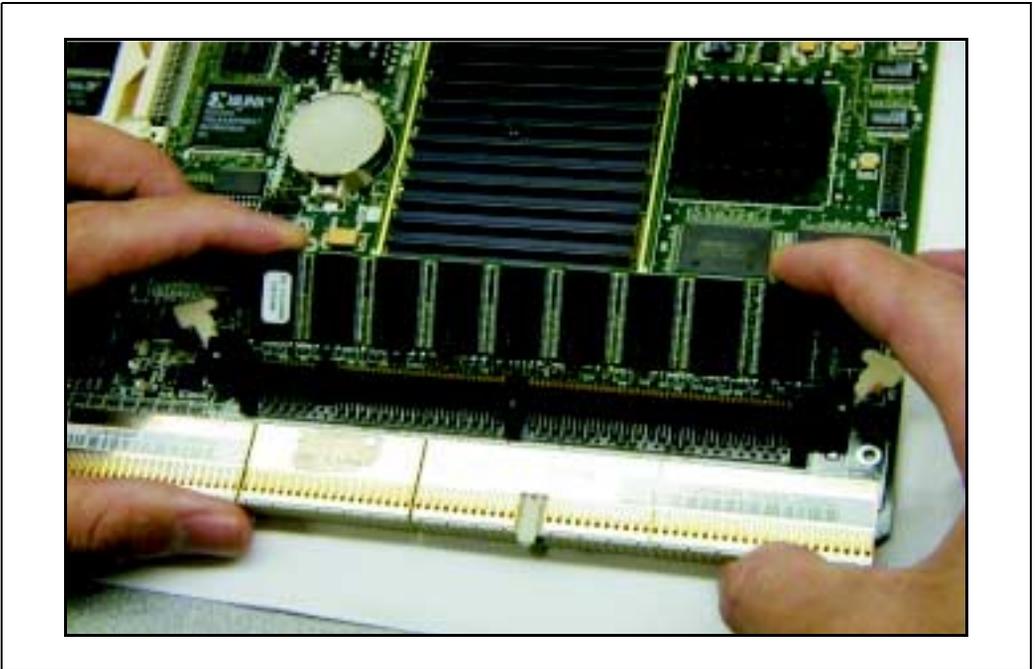


- 8** Push the module into the DIMM socket until it is locked by the latches. See Figure 15 on page 212.

Figure 15
Lock latches

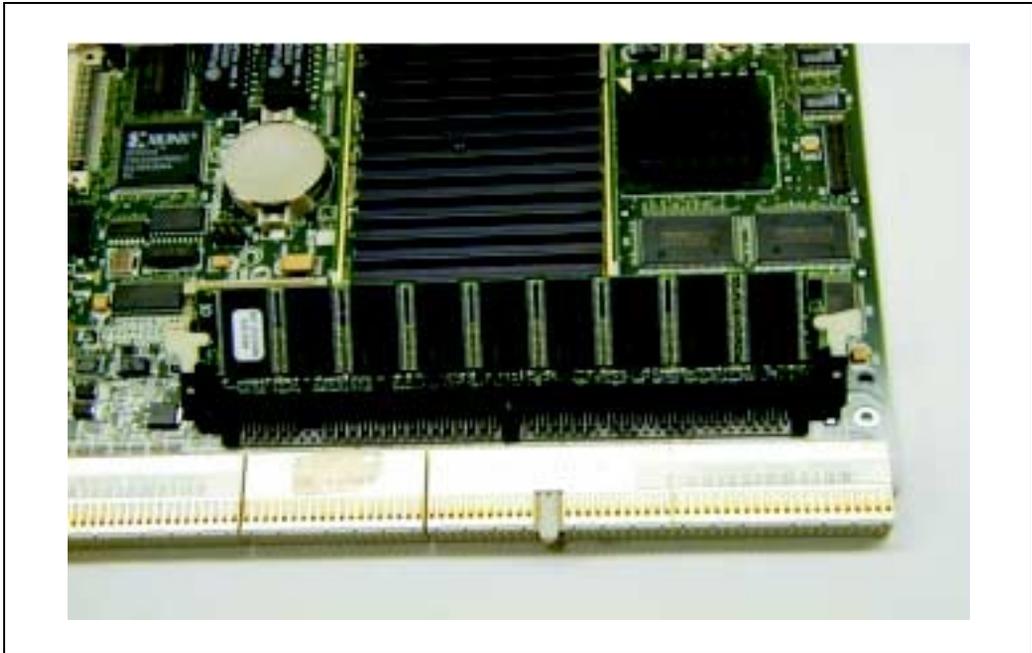

- 9** Put the faceplate label on the faceplate of the card. See Figure 16 on page 213.

Figure 16
Faceplate label

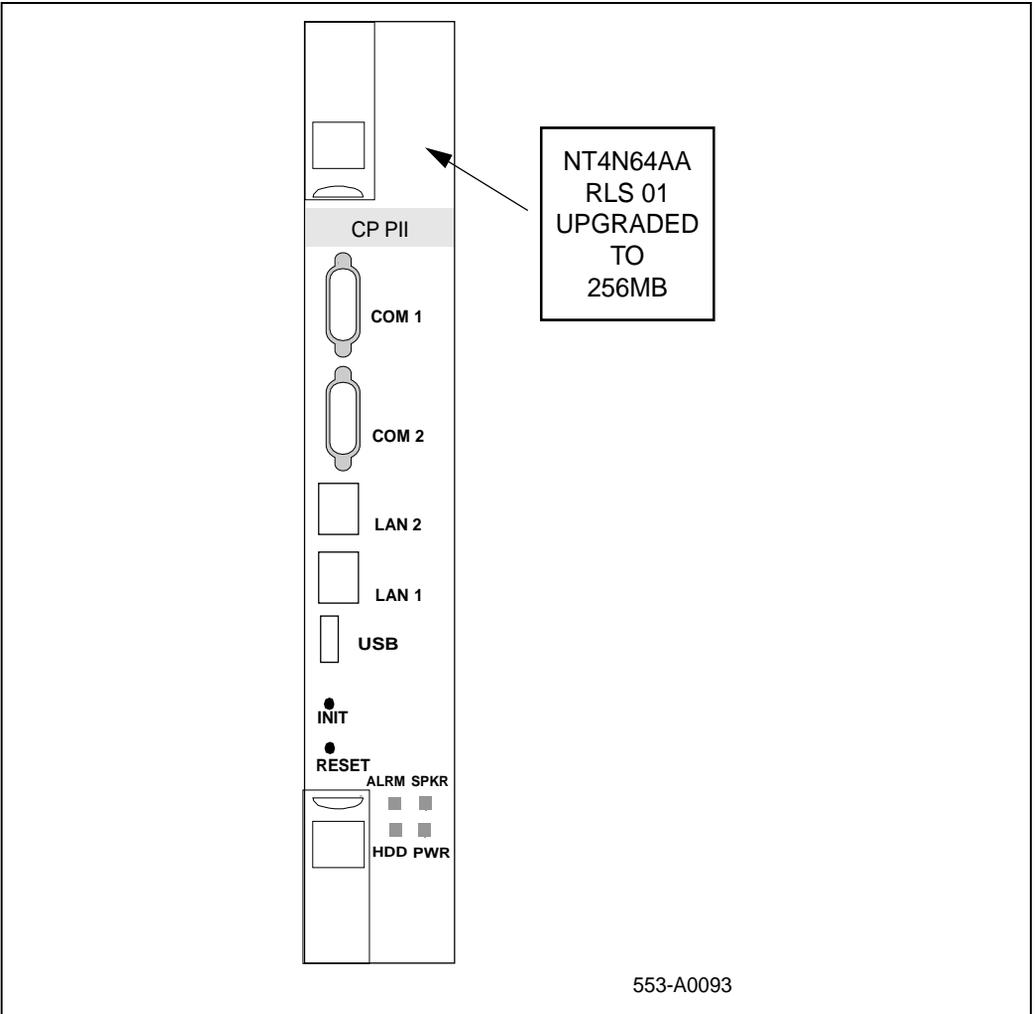

- 10** Return the card to its slot and reconnect all original cables.
Continue with the "Install the software on Core/Net" on page 214.

----- *End of Procedure* -----

Install the software on Core/Net

Procedure 1

Install software on Core/Net 1

- 1 Install the CD-ROM into the CD-ROM drive in the cPCI MMDU:
 - a. Press the button on the CD-ROM drive to open the CD-ROM disk holder.
 - b. Place the CD-ROM disk into the holder with the disk label facing up. Use the four tabs to secure the CD-ROM disk.
 - c. Press the button to close the CD-ROM disk holder.
Do not push the holder in by hand.

Note: If the CD-ROM is not in the CD-ROM drive, the installation will not continue. Insert the CD-ROM to continue.

- 2 Place the CP PII Install floppy disk into the cPCI MMDU floppy drive.
- 3 Press the RESET button on the CP PII. Press <CR> when prompted. Before the install menu runs, the system validates hard disk partitioning.

Note: If a problem is detected during the system verification, the installation stops, prints an error message, and aborts. If the verification is not successful, do not continue; contact your technical support organization.

The screen displays:

```
Nortel Meridian-1 Software/Database/BOOTROM CDROM INSTALL Tool
(Version 28)
=====
                                **
****      **      ****
****      *****      ****
***** Nortel Networks - Meridian 1
****      ****      ****      Install Tool (Version 28)
****      ****      ****
****      *****
****      *****

                                Copyright 1992 - 2001 Nortel Networks

                                Please press <CR> when ready ...

>OBTAIN and CHECK SYSTEM CONFIGURATION
>Validate hard disk partitions
Do physical checking for hard drive, it will take five to six
minutes.
Testing partition 0
100 percent completed!
Testing partition 1
100 percent completed!
Testing partition 2
100 percent completed!
Disk physical checking is completed!
Validate hard drive partition number and size ...

There are 3 partitions in disk 0:
The size of partition 0 of disk 0 is xx MB
The size of partition 1 of disk 0 is xx MB
The size of partition 2 of disk 0 is xx MB
Disk partitions and sectors checking is completed!
dosFsCheck for PART_C OK!
dosFsCheck for PART_D OK!
dosFsCheck for PART_E OK!
DosFsCheck is completed!
>Copy /f0/disk3311.sys to /u/disk3311.sys -
System Date and Time now is:
Friday 01-05-2001, 15:49:16
```

- 4 Press <CR> on the terminal to start the software installation from the following menu.

```
Nortel Meridian-1 Software/Database/BOOTROM CDROM INSTALL Tool
(Version 28)
=====
                        M A I N    M E N U
The Software Installation Tool will install or upgrade
Meridian-1 System Software, Database and the CP-BOOTROM.
You will be prompted throughout the installation and given the
opportunity to quit at any time.

Please enter:
<CR> ->        <u> - To Install menu
                 <t> - To Tools menu.
                 <q> - Quit

Enter Choice>
```

- 5 Insert keycode diskette.

```
Nortel Meridian-1 Software/Database/BOOTROM CDROM INSTALL Tool
(Version 28)
=====
Please insert the diskette with the keycode file into the floppy
drive.

Please enter:
<CR> -> <a> - Continue with the keycode validation
                 (the keycode diskette is in the floppy drive on
                 Core 1).
                 <q> - Quit.

Enter Choice>
```

6 Confirm that the keycode matches the CD ROM release.

The provided keycode authorizes the install of Release 25xx software (all subissues) for machine type 3311 (CPP processor on Option 81C).

Nortel Meridian-1 Software/Database/BOOTROM CDROM INSTALL Tool
(Version 28)

=====

Please confirm that this keycode matches the CDROM Release

Please enter:

<CR> -> <y> - Yes, the keycode matches. Go on to Install Menu.
<n> - No, the keycode does not match. Try another
keycode diskette.

Enter Choice>

- 7 If the Keycode matches the CD ROM release, you are prompted to select an option from the following install menu.

```
Nortel Meridian-1 Software/Database/BOOTROM CDROM INSTALL Tool
(Version 28)
=====
                I N S T A L L   M E N U
The Software Installation Tool will install or upgrade
Meridian-1 System Software, Database and the CP-BOOTROM.
You will be prompted throughout the installation and given the
opportunity to quit at any time.

Please Enter:
<a>   To install Software, CP-BOOTROM.
<b>   To install Software, Database, CP-BOOTROM
<c>   To install Database only.
<d>   To install CP-BOOTROM only.
<t>   To go to the Tools menu.
<k>   To install Keycode only.
      For feature Expansion, use OVL143.
<p>   To install 3900 set Languages.
<q>   Quit.

Enter Choice>
```

Note: Press <CR> to select option <a>. The default database is not installed; instead, the existing customer database is left on disk, and then converted at the next sysload.

8 Insert the CDROM is in the CDROM drive.

```
Nortel Meridian-1 Software/Database/BOOTROM CDROM INSTALL Tool
(Version 28)
=====
Please insert the installation CDROM into the drive on Core 1.

The labeled side of the CDROM should be side up in the CDROM
tray.

Please enter:
<CR> ->   <a> - CDROM is now in the drive. Continue with s/w
           checking.
           <q> - Quit.

Enter Choice>
```

9 Confirm the software version.

```
Nortel Meridian-1 Software/Database/BOOTROM CDROM INSTALL Tool
(Version 28)
=====
           The installation CDROM contains version Release 25xx__.

Please enter:
<CR> -> <y> - Yes, this is the correct version. Continue.
           <n> - No, this is not the correct version. Try another
           CDROM or keycode disk.

Enter Choice>
```

10 Review the Installation Status Summary

```
-----  
                        INSTALLATION STATUS SUMMARY  
-----  
+=====+=====+=====+=====+  
|   Option       | Choice | Status |      Comment      |  
+=====+=====+=====+=====+  
| SW: CD to disk | yes    |        | Install for rel 25xx |  
+-----+-----+-----+-----+  
| Database       | no     |        |                    |  
+-----+-----+-----+-----+  
| CP-BOOTROM    | yes    |        |                    |  
+-----+-----+-----+-----+  
  
Please enter:  
<CR> -> <Y> - Yes, start Installation.  
        <n> - No, stop Installation. Return to the Main Menu.  
  
Enter Choice>
```

11 Confirm the Upgrade.

```
Nortel Meridian-1 Software/Database/BOOTROM CDROM INSTALL Tool  
(Version 28)  
-----  
You selected to upgrade the system from release: 25xx to release:  
25xx.  
This will erase all old system files.  
Database files will NOT be erased. You may continue installing  
the software or quit now and leave your system unchanged.  
  
Please enter:  
<CR> ->   <y> - Continue with Upgrade.  
          <q> - Quit.  
  
Enter Choice>
```

Pre-release 3 language groups

- 12 Select a PSDL file to install. The PSDL file contains the loadware for all downloadable cards in the system and loadware for M3900 series**

sets.

Select one of the six PSDL files

- <1> Global 10 Languages
- <2> Western Europe 10 Languages
- <3> Eastern Europe 10 Languages
- <4> North America 6 Languages
- <5> Spare Group A
- <6> North America 6 Languages (Duplicate of <4>)

The languages contained in each selection are outlined as follows:

- 1 - English, French, German, Spanish, Swedish, Italian, Norwegian, Brazilian Portuguese, Finnish, Japanese Katakana.
- * 2 - English, French, German, Spanish, Swedish, Norwegian, Danish, Finnish, Italian, Brazilian Portuguese.
- * 3 - English, French, German, Dutch, Polish, Czech, Hungarian, Russian, Latvian, Turkish.
- * 4 - English, Spanish, French, Brazilian Portuguese, Japanese Katakana, German.
- * 5 - English, French, German, Spanish, Swedish, Italian, Norwegian, Portuguese, Finnish, Japanese Katakana.
- * 6 - English, Spanish, French, Brazilian Portuguese, Japanese Katakana, German.

Release 3 language groups

- 13** Select a PSDL file to install. The PSDL file contains the loadware for all downloadable cards in the system and loadware for M3900 series

sets.

Select one of the six PSDL files

- <1> Global 10 Languages
- <2> Western Europe 10 Languages
- <3> Eastern Europe 10 Languages
- <4> North America 6 Languages
- <5> Spare Group A
- <6> North America 6 Languages (Duplicate of <4>)

The languages contained in each selection are outlined as follows:

- 1 – Global 10 Languages (Release 3) English, French, German, Spanish, Swedish, Italian, Norwegian, Brazilian Portuguese, Finnish, Japanese Katakana.
- 2 – Western Europe 10 Languages (Release 3) English, French, German, Spanish, Swedish, Italian, Norwegian, Brazilian Portuguese, Finnish, Danish.
- 3 – Eastern Europe 10 Languages (Release 3) English, French, German, Dutch, Polish, Czech, Hungarian, Russian, Latvian, Turkish.
- 4 – North America six Languages (Release 3) English, French, German, Spanish, Brazilian Portuguese, Japanese Katakana.
- 5 – Spare Group A.
- 6 – Spare Group B.

14 Continue with the installation.

```
Nortel Meridian-1 Software/Database/BOOTROM CDROM INSTALL Tool
(Version 28)
=====
Software release 25xx was installed sucessfully on Core 1.
All files were copied from CDROM to the hard disk.

Please press <CR> when ready ...
```

15 Perform the CP-BOOTROM installation.

```
Nortel Meridian-1 Software/Database/BOOTROM CDRom INSTALL Tool
(Version 28)
=====
You will now perform the CP-BOOTROM installation.
    Note: You will be overriding existing CP-BOOTROM on hard
          disk. If you quit, Bootrom will be left unchanged

Please enter:
<CR> ->  <a> - Continue with CP-BOOTROM install.
          <q> - Quit.

Enter Choice>
```

16 Review the Status Summary.

```
-----
                        INSTALLATION STATUS SUMMARY
-----
+-----+-----+-----+-----+
| Option          | Choice | Status | Comment                |
+-----+-----+-----+-----+
| SW: CD to disk  | yes    | ok     | from 2530_ to 2540    |
+-----+-----+-----+-----+
| Database        | no     |        |                        |
+-----+-----+-----+-----+
| CP-BOOTROM     | yes    | ok     |                        |
+-----+-----+-----+-----+

Please press <CR> when ready ...
```

17 Enter "q" to leave the installation program.

```
Nortel Meridian-1 Software/Database/BOOTROM CDROM INSTALL Tool
(Version 28)
=====
                I N S T A L L  M E N U
The Software Installation Tool will install or upgrade
Meridian-1 System Software, Database and the CP-BOOTROM.
You will be prompted throughout the installation and given the
opportunity to quit at any time.
Please enter:
<a>            To install Software, CP-BOOTROM.
<b>            To install Software, Database, CP-BOOTROM
<c>            To install Database only.
<d>            To install CP-BOOTROM only.
<t>            To go to the Tools menu.
<k>            To install Keycode only.
              For feature Expansion, use OVL143.
<p>            To install 3900 set Languages.
<q>            Quit.
Enter Choice>
```

18 Enter "y" to confirm Quit.

```
Nortel Meridian-1 Software/Database/BOOTROM CDROM INSTALL Tool
(Version 28)
=====
You selected to Quit. Please confirm.
Please enter:
<CR> ->    <y> - Yes, Quit.
           <n> - No, DO NOT Quit.
Enter Choice>
```

- 19** Choose either Reboot or Return to the Main Menu

Note: Remove the Install diskette from the floppy drive(s) before rebooting.

```
Nortel Meridian-1 Software/Database/BOOTROM CDRom INSTALL Tool
(Version 28)
=====
You selected to Quit the Software Installation Tool.
You may reboot the system or return to the Main Menu.
Before rebooting the system, remove Install diskette from the
floppy drive(s).
-----
DO NOT REBOOT USING BUTTON!!
-----
Please enter:
<CR> ->   <a> - Reboot the system.
           <m> - Return to the Main menu.
Enter Choice>
```

- 20** The system automatically performs a sysload and several messages appear on the system terminal. Wait for "DONE" and then the "INI" message to display before you continue.

Database conversion occurs during sysload.

Verify that the following message appears on the system terminal:

```
DATA CONVERSION
RELEASE 25.XX TO RELEASE 25.XX
```

- 21** Confirm that Release 25.xx software is installed and is working on Core/Net 1:
- LD 135** Load the program.
 - STAT CPU** Display the CPU status.
 - STAT CNI** Display the cCNI status.
 - STAT MEM** Display memory status on CPUs.

22 Check the software version.

Use LD 22 to print the software issue and release. At the prompt enter:

LD 22

REQ

ISS

Exit the program.

----- *End of Procedure* -----

Transfer call processing from Core/Net 0 to Core/Net 1



CAUTION

Service Interruption

The following procedure to transfer call processing causes service interruptions.

Time your procedure to minimize the effect of any breaks in service.

Procedure 2

Transfer call processing

1 From Core/Net 0, the active side, transfer call processing to the upgraded Core/Net 1. At the prompt enter:

LD 135

CUTOVR

Transfer call processing from active core to standby core. This will cause a service interruption.

Call processing is now switched from Core/Net 0 to Core/Net 1.

2 Test Call Processing. This includes the following:

- a Check for dial tone.
- b Make internal, external, and network calls.
- c Check attendant console activity.
- d Check DID trunks.
- e Check any auxiliary processors.

----- *End of Procedure* -----

Upgrade Core/Net 0

Start at “Upgrade Core 1” on page 206 and repeat the procedures for Core/Net 0.

Continue with the following procedures after completing “Check the software version.” on page 226.

Enable system redundancy



CAUTION

Service Interruption

The following procedure to transfer call processing causes service interruptions.

Time your procedure to minimize the effect of any breaks in service.

Procedure 3

Transfer call processing

- 1 Transfer call processing from the active core 1 to the standby core 0.
At the prompt enter:

LD 135

CUTOVR

Transfer call processing from active core to standby core. This will cause a service interruption.

Note: The CUTOVR command is necessary to ensure that the second upgraded core is capable of call processing.

- 2 Test Call Processing. This includes, but is not limited to the following:
 - a Check for dial tone.
 - b Make internal, external, and network calls.
 - c Check attendant console activity.
 - d Check DID trunks.
 - e Check any auxiliary processors.

Procedure 4
Enable system redundancy

1 From the active CPU, Core/Net 0, enable redundancy. At the prompt enter:

LD 135

JOIN Synchronize the memory and drives.

----- *End of Procedure* -----

Test Core/Net 1 and Core/Net 0

Procedure 5
Test both cores

From the active CPU, Core/Net 0, perform these tests:

1 Perform a redundancy sanity test using the following sequence. At the prompt enter:

LD 135

STAT CNI Get the status of the cCNI cards.

STAT CPU Get the status of the CPU and memory.

TEST CNI Test each cCNI card (core, slot).

STAT SUTL Get the status of the System Utility (main and transition) cards.

TEST SUTL Test the System Utility (main and transition) cards.

TEST IPB Test the Interprocessor Bus

TEST LCD Test the LCDs.

TEST LED Test the LEDs.

2 Test system redundancy. At the prompt enter:

LD 137

STAT Get the status of the hard disks.

TEST RDUN Test redundancy

DATA RDUN Perform sector level checking on both hard disks

TEST CMDU Perform hard and floppy disk test.

3 Switch to the inactive CPU. At the prompt enter:

LD 135

SCPU Switch to the inactive CPU, Core/Net 1

- 4 Test Core/Net 1. At the prompt enter:
- LD 135**
 - STAT CNI** Get the status of cCNI (both main and transition) cards.
 - STAT CPU** Get the status of both Cores and redundancy.
 - TEST CNI** Test the cCNI (both main and transition) cards.
 - STAT SUTL** Get the status of the System Utility card.
 - TEST SUTL** Test System Utility card.
 - TEST IPB** Test Interprocessor Bus.
 - TEST LCD** Test LCDs.
 - TEST LED** Test LEDs
- 5 Clear the display and minor alarms on both Cores. At the prompt enter:
- CDSP** Clear the displays on the Cores.
 - CMAJ** Clear all major alarms.
 - CMIN ALL** Clear all minor alarms.
 - ****** Exit the program.
- 6 If desired, switch back to Core/Net 0. At the prompt enter:
- LD 135**
 - SCPU** Switch to the inactive CPU, Core/Net 0

----- *End of Procedure* -----

Perform a data dump

Procedure 6

Perform a data dump

- 1 At the prompt, enter
 LD 43 Load the program
- 2 Insert a floppy disk into the cPCI MMDU to capture the backup.
- 3 When "EDD000" appears on the terminal, enter
 EDD Begin the data dump
- 4 When "DATABASE BACKUP COMPLETE" appears on the terminal,
 enter



CAUTION **Loss of Data**

If the data dump is not successful, do not continue; contact your technical support group. Correct any data dump problems before you continue.

**** Exit the program

The parallel reload procedure is complete.

----- *End of Procedure* -----

Back out of a system software and hardware upgrade

To back out of a CP PII system software and hardware upgrade the following tasks must be completed.

- Determine which core is active.
- Split the cores.
- Revert to the old memory configuration, if required.
- Install the original release of software.

Perform the following procedures in order.

Make Core 0 active

Either Core can be downgraded first. The decision to downgrade Core 1 first is for this example only.

Procedure 7 Make Core 0 active

- 1 If Core 1 is active, make Core 0 active. At the prompt enter:

```
LD 135
STAT CPU      Get the status of the CPUs.
SCPU          Switch to Core 0.
```

Split the Cores

Procedure 8 Split the cores

- 1 From the active Core 0, split the cores. At the prompt enter:

```
LD 135      Load the program.
SPLIT      Enter Split on the active core.
****      Exit the program.
```

The system is now in split mode.

----- *End of Procedure* -----

Install the software on Core/Net 1

Procedure 9

Install the original release of software

- 1 Install the CD-ROM into the CD-ROM drive in the cPCI MMDU:
 - a. Press the button on the CD-ROM drive to open the CD-ROM disk holder.
 - b. Place the CD-ROM disk into the holder with the disk label facing up. Use the four tabs to secure the CD-ROM drive.
 - c. Press the button again to close the CD-ROM disk holder.
Do not push the holder in by hand.

Note: If the CD-ROM is not in the CD-ROM drive, the installation will not continue. Insert the CD-ROM to continue.

- 2 Place the Install diskette with the original software release into the cPCI MMDU floppy drive.
- 3 Press the manual RESET button on the CP PII card faceplate. Before the install menu runs, the system validates hard disk partitioning which takes about five minutes.

Note: If a problem is detected during the system verification, the installation stops, prints an error message, and aborts. If the verification is not successful, do not continue; contact your technical support group.

The screen displays:

```
Nortel Meridian-1 Software/Database/BOOTROM CDROM INSTALL Tool
(Version xx)
```

```
=====
```

```

                **
                ***
          ****      **      ****
          ****      *****      *****
          ****      *****      *****
          *****      *****      ***** Nortel Networks - Meridian 1
          ****      ****      ****      Install Tool (Version xx)
          ****      ****      ****
          ****      ****      ****
          ****      ****      ****
          ****      *****      *****
          ****      *****      *****
          ****      ***      ***

```

```
Copyright 1992 - 1999 Nortel Networks, Inc.
```

```
Please press <CR> when ready ...
```

```
>OBTAIN and CHECK SYSTEM CONFIGURATION
```

```
>Validate hard disk partitions
```

```
Do physical checking for hard drive, it will take five to six minutes.
Please wait ...
```

```
Testing partition 0
```

```
100 percent completed!
```

```
Testing partition 1
```

```
100 percent completed!
```

```
Testing partition 2
```

```
100 percent completed!
```

```
Disk physical checking is completed!
```

```
Validate hard drive partition number and size ...
```

```
There are 3 partitions in disk 0:
```

```
The size of partition 0 of disk 0 is xx MB
```

```
The size of partition 1 of disk 0 is xx MB
```

```
The size of partition 2 of disk 0 is xx MB
```

```
Disk partitions and sectors checking is completed!
```

```
dosFsCheck for PART_C OK!
```

```
dosFsCheck for PART_D OK!
```

```
dosFsCheck for PART_E OK!
```

```
DosFsCheck is completed!
```

```
>Copy /f0/disk3311.sys to /u/disk3311.sys -
```

```
System Date and Time now is:
```

```
Friday 01-05-2001, 15:49:16
```

- 4 Press <CR> on the terminal to start the software installation from the following menu.

```
Nortel Meridian-1 Software/Database/BOOTROM CDROM INSTALL Tool
(Version xx)
=====
                        M A I N    M E N U
The Software Installation Tool will install or upgrade
Meridian-1 System Software, Database and the CP-BOOTROM.
You will be prompted throughout the installation and given the
opportunity to quit at any time.

Please enter:
<CR> -> <u> - To Install menu
         <t> - To Tools menu.
         <q> - Quit

Enter Choice>
```

- 5 Insert keycode diskette.

```
Nortel Meridian-1 Software/Database/BOOTROM CDROM INSTALL Tool
(Version xx)
=====
Please insert the diskette with the keycode file into the floppy
drive.

Please enter:
<CR> -> <a> - Continue with the keycode validation
         (the keycode diskette is in the floppy drive on Core 1).
         <q> - Quit.

Enter Choice
```

6 Confirm that the keycode matches the CD ROM release.

```
The provided keycode authorizes the install of Release 25xx__
software for generic 3311 (CPP processor on Option 81C).
Nortel Meridian-1 Software/Database/BOOTROM CDROM INSTALL Tool
(Version xx)
=====
Please confirm that this keycode matches the CDROM Release

Please enter:
<CR> ->  <y> - Yes, the keycode matches. Go on to Install Menu.
          <n> - No, the keycode does no match. Try another
          keycode diskette.

Enter Choice>
```

- 7 When the screen displays the Install Menu, enter choice "b" to install the database.

Note: The database has to be reinstalled. A database cannot be converted down.

```
Nortel Meridian-1 Software/Database/BOOTROM CDROM INSTALL Tool  
(Version xx)
```

```
=====
```

```
                  I N S T A L L   M E N U
```

```
The Software Installation Tool will install or upgrade  
Meridian-1 System Software, Database and the CP-BOOTROM.  
You will be prompted throughout the installation and given the  
opportunity to quit at any time.
```

```
Please enter:
```

- <a> To install Software, CP-BOOTROM.
- To install Software, Database, CP-BOOTROM
- <c> To install Database only.
- <d> To install CP-BOOTROM only.
- <t> To go to the Tools menu.
- <k> To install Keycode only.
 For feature Expansion, use OVL143.
- <p> To install 3900 set Languages.
- <q> Quit.

```
Enter Choice>
```

8 Insert the CDROM into the CDROM drive.

```
Nortel Meridian-1 Software/Database/BOOTROM CDROM INSTALL Tool
(Version xx)
=====
Install utility will install Release 25xx s/w for software
generic 3311 (CPP processor on Option 81C) on your system.
Please insert the installation CDROM into the drive on Core 1.

The labeled side of the CDROM should be side up in the CDROM
tray.

Please enter:
<CR> -> <a> - CDROM is now in the drive.
                Continue with installation.
                <q> - Quit.

Enter Choice>
```

9 Review the Installation Status Summary.

```
-----
                        INSTALLATION STATUS SUMMARY
-----
+=====+=====+=====+=====+
| Option          | Choice | Status | Comment          |
+-----+-----+-----+-----+
| SW: CD to disk  | yes    |        | Install for rel 25xx |
+-----+-----+-----+-----+
| Database        | yes    |        |                    |
+-----+-----+-----+-----+
| CP-BOOTROM      | yes    |        |                    |
+-----+-----+-----+-----+

Please enter:
<CR> -> <Y> - Yes, start Installation.
                <n> - No, stop Installation. Return to the Main Menu.

Enter Choice>
```

10 Confirm the Upgrade.

```
Nortel Meridian-1 Software/Database/BOOTROM CDROM INSTALL Tool
(Version xx)
=====
You selected to upgrade the system from release: 25xx to release
25xx.
This will erase all old system files.
Database files will not be erased. You may continue installing
the software or quit now and leave your system unchanged.

Please enter:
<CR> ->        <a> - Continue with Upgrade
                 <q> - Quit.

Enter Choice>
```

Pre-release 3 language groups

- 11** Select a PSDL file to install. The PSDL file contains the loadware for all downloadable cards in the system and loadware for M3900 series sets.

Select one of the six PSDL files

- <1> Global 10 Languages
- <2> Western Europe 10 Languages
- <3> Eastern Europe 10 Languages
- <4> North America 6 Languages
- <5> Spare Group A
- <6> North America 6 Languages (Duplicate of <4>)

The languages contained in each selection are outlined as follows:

- 1 - English, French, German, Spanish, Swedish, Italian, Norwegian, Brazilian Portuguese, Finnish, Japanese Katakana.
- * 2 - English, French, German, Spanish, Swedish, Norwegian, Danish, Finnish, Italian, Brazilian Portuguese.
- * 3 - English, French, German, Dutch, Polish, Czech,

Hungarian, Russian, Latvian, Turkish.

- * 4 - English, Spanish, French, Brazilian Portuguese, Japanese Katakana, German.
- * 5 - English, French, German, Spanish, Swedish, Italian, Norwegian, Portuguese, Finnish, Japanese Katakana.
- * 6 - English, Spanish, French, Brazilian Portuguese, Japanese Katakana, German.

Release 3 language groups

- 12** Select a PSDL file to install. The PSDL file contains the loadware for all downloadable cards in the system and loadware for M3900 series sets.

Select one of the six PSDL files

- <1> Global 10 Languages
- <2> Western Europe 10 Languages
- <3> Eastern Europe 10 Languages
- <4> North America 6 Languages
- <5> Spare Group A
- <6> North America 6 Languages (Duplicate of <4>)

The languages contained in each selection are outlined as follows:

- 1 – Global 10 Languages (Release 3) English, French, German, Spanish, Swedish, Italian, Norwegian, Brazilian Portuguese, Finnish, Japanese Katakana.
- 2 – Western Europe 10 Languages (Release 3) English, French, German, Spanish, Swedish, Italian, Norwegian, Brazilian Portuguese, Finnish, Danish.
- 3 – Eastern Europe 10 Languages (Release 3) English, French, German, Dutch, Polish, Czech, Hungarian, Russian, Latvian, Turkish.
- 4 – North America six Languages (Release 3) English, French, German, Spanish, Brazilian Portuguese, Japanese Katakana.
- 5 – Spare Group A.
- 6 – Spare Group B.

13 Continue with the installation.

```
Nortel Meridian-1 Software/Database/BOOTROM CDROM INSTALL Tool
(Version xx)
=====
Software release 25xx was installed successfully on Core 1.
All files were copied from CDROM to the hard disk.

Please press <CR> when ready ...
```

14 Install the archived database from the backup diskette.

Note: Insert the archived database diskette into the floppy drive.

Select option "a" from the following menu.

```
Nortel Meridian-1 Software/Database/BOOTROM CDROM INSTALL Tool
(Version xx)
=====
You will now perform the database installation.
Note: If you are installing the Database from a floppy disk,
      please insert the correct disk now.

Please enter:
<CR> -> <a> Install CUSTOMER Database
          (the customer database diskette must be in the
          core 1 disk drive)
        <b> Install DEFAULT Database.
        <c> Transfer the previous system Database.
        <e> Check the Database that exists on the hard disk.
        <q> Quit.

Enter Choice>
```

15 Perform the CP-BOOTROM installation.

```
Nortel Meridian-1 Software/Database/BOOTROM CDROM INSTALL Tool
(Version xx)
=====
You will now perform the CP-BOOTROM Installation.
Note: You will be overriding existing CP-BOOTROM on hard disk.
      If you quit, BOOTROM will be left unchanged

Please enter:
<CR> -> <a> Continue with CP-BOOTROM install.
      <q> Quit.

Enter Choice>
```

16 Review the Installation Status Summary

```
-----
                        INSTALLATION STATUS SUMMARY
-----
+-----+-----+-----+-----+
| Option          | Choice | Status | Comment                |
+-----+-----+-----+-----+
| SW: CD to disk  | yes    | ok     | from 25xx to 25xx     |
+-----+-----+-----+-----+
| Database        | yes    | ok     | from 25xx to 25xx     |
+-----+-----+-----+-----+
| CP-BOOTROM      | yes    | ok     |                         |
+-----+-----+-----+-----+
Please press <CR> when ready ...
```

17 Enter "q" to leave the installation program.

```
Nortel Meridian-1 Software/Database/BOOTROM CDROM INSTALL Tool
(Version xx)
=====
                I N S T A L L   M E N U
The Software Installation Tool will install or upgrade
Meridian-1 System Software, Database and the CP-BOOTROM.
You will be prompted throughout the installation and given the
opportunity to quit at any time.
Please enter:
<a>            To install Software, CP-BOOTROM.
<b>            To install Software, Database, CP-BOOTROM
<c>            To install Database only.
<d>            To install CP-BOOTROM only.
<t>            To go to the Tools menu.
<k>            To install Keycode only.
              For feature Expansion, use OVL143.
<p>            To install 3900 set Languages.
<q>            Quit.
Enter Choice>
```

18 Enter "y" to confirm Quit.

```
Nortel Meridian-1 Software/Database/BOOTROM CDROM INSTALL Tool
(Version xx)
=====
You selected to Quit. Please confirm.
Please enter:
<CR> ->    <y> - Yes, Quit.
           <n> - No, DO NOT Quit.
Enter Choice>
```

- 19** Choose either Reboot or Return to the Main Menu.

Note: Remove the database diskette from the disk drive before rebooting.

```
Nortel Meridian-1 Software/Database/BOOTROM CDRom INSTALL Tool
(Version xx)
=====
You selected to Quit the Software Installation Tool.
You may reboot the system or return to the Main Menu.
Before rebooting the system, remove Install diskette from the
floppy drive(s).
-----
DO NOT REBOOT USING BUTTON!!
-----
Please enter:
<CR> -> <a> - Reboot the system.
          <m> - Return to the Main menu.
Enter Choice>
```

- 20** The system automatically performs a sysload and several messages appear on the system terminal. Wait for "DONE" and then the "INI" message to display before you continue.

Verify that the following message appears on the system terminal:

```
DATA CONVERSION
RELEASE 25.xx TO RELEASE 25.xx
```

- 21** Confirm that Release 25.xx software is installed and working on Core/Net 1:

LD 135 Load the program.
STAT CPU Display the CPU status.
STAT CNI Display the cCNI status.

22 Check the software version.

Use LD 22 to print the software issue and release. At the prompt enter:

LD 22

REQ ISS

******** Exit the program.

----- *End of Procedure* -----

Transfer call processing from Core/Net 0 to Core/Net 1



CAUTION

Service Interruption

The following procedure to transfer call processing causes service interruptions.

Time your procedure to minimize the effect of any breaks in service.

Procedure 10

Transfer call processing

1 From Core/Net 0, the active side, transfer call processing to Core/Net 1. At the prompt enter:

LD 135 Load the program.

CUTOVR The inactive CP become active.

Call processing is now switched from Core/Net 0 to Core/Net 1.

----- *End of Procedure* -----

Test Core/Net 1

Test Call Processing. This includes, but is not limited to the following:

- 1 Check for dial tone.
- 2 Make internal, external, and network calls.
- 3 Check attendant console activity.
- 4 Check DID trunks.
- 5 Check any auxiliary processors.

Install the software on Core/Net 0

Start at “Install the software on Core/Net 1” on page 232 and repeat the procedures for Core/Net 0.

Continue with the following after completing “Check the software version.” on page 244.

Enable system redundancy



CAUTION

Service Interruption

The following procedure to transfer call processing causes service interruptions.

Time your procedure to minimize the effect of any breaks in service.

Procedure 11

Transfer call processing

- 1 Transfer call processing from the active core 1 to the standby core 0.
At the prompt enter:

LD 135

CUTOVR

Transfer call processing from active core to standby core. This will cause a service interruption.

Note: The CUTOVR command is necessary to ensure that the second upgraded core is capable of call processing.

- 2 Test Call Processing. This includes, but is not limited to the following:
 - a Check for dial tone.
 - b Make internal, external, and network calls.
 - c Check attendant console activity.
 - d Check DID trunks.
 - e Check any auxiliary processors.

Procedure 12
Enable system redundancy

- 1 From the active CPU, Core/Net 0, enable redundancy. At the prompt enter:

LD 135

JOIN Synchronize the memory and drives.

----- *End of Procedure* -----

Test Core/Net 1 and Core/Net 0

Procedure 13

Test both cores

From the active CPU, Core/Net 0, perform these tests:

- 1 Perform a redundancy sanity test using the following sequence. At the prompt enter:

LD 135

STAT CNI	Get the status of the cCNI cards.
STAT CPU	Get the status of the CPU and memory.
TEST CNI	Test each cCNI card (core, slot).
STAT SUTL	Get the status of the System Utility (main and transition) cards.
TEST SUTL	Test the System Utility (main and transition) cards.
TEST IPB	Test the Interprocessor Bus
TEST LCD	Test the LCDs.
TEST LED	Test the LEDs.

- 2 Test system redundancy. At the prompt enter:

LD 137

STAT	Get the status of the hard disks.
TEST RDUN	Test redundancy
DATA RDUN	Perform sector level checking on both hard disks
TEST CMDU	Perform hard and floppy disk test.

- 3 Switch to the inactive CPU. At the prompt enter:

LD 135

SCPU	Switch to the inactive CPU, Core/Net 1
-------------	--

- 4 Test Core/Net 1. At the prompt enter:

LD 135

STAT CNI	Get the status of cCNI (both main and transition) cards.
STAT CPU	Get the status of both Cores and redundancy.
TEST CNI	Test the cCNI (both main and transition) cards.
STAT SUTL	Get the status of the System Utility card.
TEST SUTL	Test System Utility card.

TEST IPB Test Interprocessor Bus.
TEST LCD Test LCDs.
TEST LED Test LEDs

5 Clear the display and minor alarms on both Cores. At the prompt enter:

CDSP Clear the displays on the Cores.
CMAJ Clear all major alarms.
CMIN ALL Clear all minor alarms.
******** Exit the program.

6 If desired, switch back to Core/Net 0. At the prompt enter:

LD 135
SCPU Switch to the inactive CPU, Core/Net 0

----- *End of Procedure* -----

Perform a data dump

Procedure 14

Perform a data dump

- 1 At the prompt, enter
LD 43 Load the program
- 2 Insert a floppy disk into the cPCI MMDU to capture the backup.
- 3 When "EDD000" appears on the terminal, enter
EDD Begin the data dump
- 4 When "DATABASE BACKUP COMPLETE" appears on the terminal, enter



CAUTION **Loss of Data**

If the data dump is not successful, do not continue; contact your technical support group. Correct any data dump problems before you continue.

**** Exit the program

The software backout procedure is complete.

----- *End of Procedure* -----

Postconversion procedure

Contents

The following are the topics in this section:

[Postconversion steps](#) 252

This procedure verifies that the conversion process was successful, and system data converted completely. This is the last part of the total conversion procedure. Perform these steps **after** you have completed all other procedures for your system.

The site data should be printed before and after conversion (see Table 11 on page 255). If the data has changed, make the necessary updates on the **Target** release, and datadump to the new system media. You must print out the items marked with an asterisk (*) to be sure everything converted properly. All other items on Table 11 on page 255 are provided if you want to print them.

Check the General Release Bulletin (GRB), and the Conversion notes (earlier in this document) to verify any database updates that need to be made as a result of conversion. Be sure to verify all SYSxxx messages that may appear during the conversion process. These messages may indicate some database updates are required.



CAUTION **Service Interruption**

Test call processing thoroughly. This can include more testing than is described in this procedure, depending on system configuration. This procedure is intended to show some of the basic tests performed to complete the conversion process.

Note: When parallel reload is complete, the attendant consoles will be in Night mode. If you are performing these procedures during the day, contact the attendant. If these procedures are taking place during the evening, you may not want to perform these call processing steps.

Postconversion steps

- 1 Print system data listed in Table 11, "Print site data," on page 255. Verify that all information matches the printouts created before conversions. Make changes if necessary.
- 2 From any unrestricted telephone, dial the access code for an outside line (usually 9), and dial the listed Directory Number (DN) for the customer. Verify that the correct Incoming Call Indicator (ICI) lights at the attendant console.
- 3 If the customer is equipped with more than one console, transfer the call to another console.
- 4 Extend the call to a telephone, and release the call from the console.
- 5 From the called telephone, transfer the call back to the attendant.
- 6 Answer and release the call.
- 7 From any telephone dial the DN for the attendant. Verify that the correct ICI lights at the console, then release the call.
- 8 Busy-out one trunk group using a Trunk Group Busy (TGB) key on the console.
- 9 From any telephone with TGAR 0-7, dial the access code of the busied-out trunk group, to verify that the call is intercepted to the console and receives either overflow tone or a recorded announcement.
- 10 Restore the trunk group to the in-service state using the Trunk Group Busy (TGB) key on the console.
- 11 During the conversion procedure the Central Office may have busied-out the DID trunks. If DID trunks are equipped, from any unrestricted telephone, dial the access code for an outside line, and dial a DID number into the system.
- 12 If a private network is used, from any unrestricted telephone, dial the network access code and place a CDP, ESN, BARS/NARS, or ISDN call as applicable to your system.

- 13** If not done previously, set the time and date. Note that if Call Detail Recording (CDR) is used, system message ERR225 will appear. This is normal.

LD 02

STAD dd mm yyyy hh mm ss

dd = day (for example, 05 for the fifth)

mm = month (for example, 09 for September)

yyyy = year (last 2 or all four digits, for example, 92 or 1992)

hh = hour (in 24-hour time, for example, 13:00 for 1:00 pm)

mm = minute (for example, 25)

ss = seconds (for example, 00)

- 14** If you have auxiliary processors working with your system, be sure they are powered up. Be sure the Application Module Links (AML) are up. DCH and AML messages may indicate problems during the conversion. Investigate any of these messages.

- 15** Keep one copy of the **Source** software, as it was backed up in the pre-conversion procedure, in case it becomes necessary to reconvert. After the **Target** software has been running well for a few weeks, return your original software to Nortel Networks through your distribution channel.

- 16** Load LD 135 to test and switch CPUs. (Omit this step for Option 51C.)

LD 135

TEST CPU

Test CPU.

SCPU

Switch CPUs.

To abort overlay.

- 17** Load LD 137 to get the status of the CMDUs and IOPs.

LD 137

STAT

Get the status of both CMDUs and IOPs.

To abort overlay.

- 18** Load LD 43 to back up the other set of B1 disks. Insert the B1 disk in the active CMDU.

LD 43

BKO Back up to the backup disks and the active CMDU.

- 19** If not done previously, set the time and date. Note that if Call Detail Recording (CDR) is used, system message ERR225 will appear. This is normal.

LD 02

STAD dd mm yyyy hh mm ss

dd = day (for example, 05 for the fifth)

mm = month (for example, 09 for September)

yyyy = year (last 2 or all four digits, for example, 92 or 1992)

hh = hour (in 24-hour time, for example, 13:00 for 1:00 pm)

mm = minute (for example, 25)

ss = seconds (for example, 00)

- 20** If you have auxiliary processors working with your system, be sure they are powered up. Be sure the Application Module Links (AML) are up. DCH and AML messages may indicate problems during the conversion. Investigate any of these messages.

- 21** Keep one copy of the **Source** software, as it was backed up in the pre-conversion procedure, in case it becomes necessary to reconvert. After the **Target** software has been running well for a few weeks, return your original software to Nortel Networks through your distribution channel.

Items marked with asterisks (*) are required printout for conversion. Other items are recommended for a total system status.

Table 11
Print site data (Part 1 of 3)

Site data	Print command
Terminal blocks for all TNs	LD 20 REQ PRT TYPE TNB CUST <cr>
Directory Numbers	LD 20 (LD 22 prior to Release 16) REQ PRT TYPE DNB CUST <cr>
Attendant Console data block for all customers	LD 20 REQ PRT TYPE ATT, 2250 CUST <cr>
*Customer data block for all customers	LD 21 REQ PRT TYPE CDB CUST <cr>

Table 11
Print site data (Part 2 of 3)

Site data	Print command
Route data block for all customers	LD 21 REQ PRT TYPE RDB CUST Customer number ROUT <cr> ACOD <cr>
*Configuration Record	LD 22 REQ PRT TYPE CFN
*Software Packages	LD 22 REQ PRT TYPE PKG
* Software Issue, ROM and tape ID	LD 22 REQ ISS REQ ROM REQ TID
* Peripheral software versions	LD 22 REQ PRT TYPE PSWV

Table 11
Print site data (Part 3 of 3)

Site data	Print command
ACD data block for all customers	LD 23 REQ PRT TYPE ACD CUST Customer Number ACDN ACD DN (or <CR>)
Superloop card IDs and software version (peripheral controller, superloop network and controller cards)	LD 32 . IDC loop
Multi-purpose ISDN Signaling Processor (MISP) card	LD 27 REQ PRT TYPE MISP LOOP loop number (0–158) APPL <cr> PH <cr>
DTI/PRI data block for all customers	LD 73 REQ PRT TYPE DDB
Note: Items marked with asterisks (*) are required printout for conversion. Other items are recommended for a total system status.	

Upgrading to a new Call Processor card

Contents

The following are the topics in this section:

Upgrading to a new CP card in Options 61C, 81, or 81C	260
Performing a data dump	261
Splitting the cores	261
Upgrading Core 1	263
Upgrading Core 0	267
Completing the upgrade	270
Upgrading to a new CP card in an Option 51C.	271
Performing a data dump	271
Installing the new CP card and system software	272
Completing the upgrade	275

Reference list

The following are the references in this section:

- *Capacity Engineering* (553-3001-149)



CAUTION
Damage to Equipment

Personnel performing this upgrade do so at their own risk. Personnel should have spare CP cards on hand or risk installation delay and/or system down time. Nortel Networks assumes no responsibility for any damage incurred, system down time, or loss due to damage or down time.

This section contains procedures for performing CP card upgrades on Options 51C, 61C, 81, or 81C systems running Release 25 or later software.

Note: The procedures in the section can be used for NT9D19, NT5D10, and NT5D03 CP card memory configurations.

Note: There should be an SDI TTY connection at J30, which should remain connected at all times to monitor system status.

Upgrading to a new CP card in Options 61C, 81, or 81C

Use the following instructions if you are converting a system to release 24 and are installing NT9D19, NT5D10 or NT5D03 CP cards.

Installing a new CP card in an Option 61C, 81, or 81C consists of:

- splitting the CPUs
- installing a new CP card in Core 1
- upgrading the system software and CP ROMs on Core 1
- swapping CPUs
- installing a new CP card in Core 0
- upgrading the system software and CP ROMs on Core 0
- synchronizing the hard disks

Performing a data dump

Before starting the upgrade, make a backup copy of the customer database on 2MB diskettes using the data dump routine:

- 1 Log into the system.
- 2 Load the Equipment Data Dump Program (LD 43). At the prompt, enter
LD 43 to load the program
- 3 When "EDD000" appears on the terminal, enter
EDD to begin the data dump
- 4 When "DATADUMP COMPLETE" and "DATABASE BACKUP COMPLETE" appear on the terminal, enter



CAUTION **Loss of Data**

If the data dump is not successful, do not continue; contact your technical support organization. A data dump problem must be corrected before proceeding.

**** to exit the program

Splitting the cores

- 1 Verify that the disk drives are synchronized:
LD 137 to load the program
STAT to get the status of the disk drives

If the disks are synchronized, proceed with step 2. If they are not synchronized, execute the SYNC command:

SYNC to synchronize the drives
**** to exit the program

- 2 Verify that clock controller 0 is active. If it is not, switch to clock controller 0:

LD 60 to load the program
SSCK 0 to get the status of clock controller 0
SWCK to switch to clock controller 0 (if necessary)
******** to exit the program

- 3 Verify that Core 0 is the active Core:

LD 135 to load the program
STAT CPU to check CPU status
TEST CPU to test the CPU

If Core 0 is active, proceed with step 5. If Core 0 is not the active CPU, swap Cores and verify again:

SCPU to swap CPUs
STAT CPU to check CPU status

- 4 Verify that CMDU 0 is active. You may need to switch CMDUs.

LD 137
STAT Get the status of IODU/C
SWAP Switch IODU/Cs (if necessary).

- 5 Set the MAINT/NORM switch on the CP card in Core 0 to MAINT.

- 6 Set the ENB/DIS switch on all CNI cards in Core 1 to DIS.

- 7 Perform the following three steps in uninterrupted sequence:

- press and hold the MAN RST button on the CP card in Core 1
- set the MAINT/NORM switch on the CP card in Core 1 to MAINT
- release the MAN RST button

Upgrading Core 1

At this time you will install the new CP card and system software on Core 1 if it is not already installed on the hard drive.

- 1** Connect a terminal to the CPSI port in Core 1 to J25 of the I/O panel at the back of the core. Be sure it is configured as follows. The recommended baud rate is 9600, to be the same as the CPSI port.
 - 7 data bits
 - 1 stop bit
 - Space parity
 - Full duplex
 - XON protocol
- 2** Disengage the lock latches and remove the CP card from Core 1.
- 3** Insert the CP Install Program diskette which corresponds to the CP card to which you are upgrading into IODU/C 1 (68030, 68040, 68060 or 68060E).
- 4** Install the CD-ROM disk into the CD-ROM drive on the IODU/C in Core 1. To install the CD-ROM:
 - press the button on the CD-ROM drive to open the CD-ROM disk holder
 - place the CD-ROM disk into the holder with the disk label showing
 - press the button again to close the CD-ROM disk holder (don't push the holder in by hand)
- 5** Verify that the MAINT/NORM switch on the new NT9D19, NT5D10 or NT5D03 CP card is set to MAINT.
- 6** Insert the new CP card in the same slot in Core 1 and secure the lock latches.

A sysload will begin (cold start). Wait for the Main Menu to appear on the terminal before proceeding.
- 7** Press <CR> to continue.
- 8** Log into the system and enter the time and date, when prompted.

- 9 Initiate the database installation by selecting the following command from the menu:
 - <u> to Install menu

- 10 Remove the CP Install Program diskette and insert the Keycode diskette, when prompted.
 - <a> to continue with keycode validation
 - <y> to confirm that the keycode matches the CD-ROM release

- 11 When the Install Menu is displayed, select the following options in sequence when you are prompted to do so

<a> to install software, CP-BOOTROM, and IOP-ROM

<a> to verify that the CD-ROM is now in drive

The Installation Status Summary screen appears that lists the options to be installed.

<y> Yes, start the installation

<a> continue with upgrade

When the ROM installation screen appears, select the following prompts in sequence:

<a> to install CP-ROM from hard disk

<a> to continue with ROM upgrade

When all files are copied from the CD-ROM to hard disk, press <CR> to continue.

<a> to install the IOP-ROM from hard disk

<y> Yes, start installation

<a> to continue with ROM upgrade

The Installation Status Summary screen appears. Verify that CD to disk, disk to ROM, CP-BOOTROM, and IOP-ROM were installed.

<cr> press return to return to the Install Menu.

<q> to quit (remove any diskettes from the floppy drive)

<y> Yes, to confirm quit

<a> to reboot the system

The system will automatically perform a sysload during which several messages will appear on the system terminal. Wait for "DONE" and then "INI" messages to be displayed before continuing.

Note: SYS4695 is not an error message. This message is cleared when you perform a data dump.

- 12 Set the ENB/DIS switches on all CNI cards in Core 1 to ENB.



CAUTION
Service Interruption

Disabling CNI cards in Core 0 will momentarily interrupt call processing. Calls established or in process will be dropped. Call processing will resume after the “SYSTEM INI” messages appear on the system terminal (approximately 1 minute).

- 13 Perform the following three steps in uninterrupted sequence:
- set the DIS/ENB faceplate switch on the IODU/C card in Core 0 to DIS
 - set the ENB/DIS switch on all CNI cards in Core 0 to DIS
 - press and release the MAN INT button on the CP card in Core 1

After the system initialization has finished (INI messages are no longer displayed on the system terminal), check for dial tone on a telephone set.

- 14 Following a successful dial tone test, perform the following basic sanity tests:
- Make sure calls can be placed.
 - Check for error messages, line noise, chatter, or other problems. Track sources and resolve problems as necessary.

Upgrading Core 0

Once the CP card in Core 1 is upgraded, upgrade the CP card in Core 0 and install system software:

- 1 Connect a terminal to the CPSI port in Core 0 to J25 of the I/O panel at the back of the core. Be sure it is configured as follows. The recommended baud rate is 9600, to be the same as the CPSI port.
 - 7 data bits
 - 1 stop bit
 - Space parity
 - Full duplex
 - XON protocol
- 2 Verify that the MAINT/NORM switch on the CP card in Core 0 is set to MAINT.
- 3 Verify that the ENB/DIS switches on all CNI cards in Core 0 are set to DIS.
- 4 Disengage the lock latches and remove the CP card from Core 0.
- 5 Insert the Install diskette that corresponds with the CP card you will be installing into IODU/C 0.
- 6 Verify that the MAINT/NORM switch on the new NT9D19, NT5D10 or NT5D03 CP card is set to MAINT.
- 7 Insert the new CP card in the same slot in Core 0 and secure the lock latches.

The system will perform a sysload and load the IODU/C Software Installation Tool.
- 8 When the NT Logo Screen appears on the terminal, the Software Installation Tool has loaded. Press **<CR>** to go to the Install Main Menu.

- 9 Set the system date and time. When prompted to enter the time and date, enter it in the following format. A space or dash can be used to separate the items.

dd mm yyyy
hh mm ss
or
dd-mm-yyyy
hh-mm-ss
- 10 At the Main menu select **<u>** to go to the Install menu.
- 11 Insert the Keycode diskette when prompted and select **<a>** to continue with the keycode validation.

Once the keycode is validated against the Security Device, the Install menu is displayed.
- 12 When the Install menu appears, select the following options in sequence when you are prompted to do so:

<o> to copy system software from Core 1 to Core 0.
<y> to start installation
<a> to continue with upgrade
- 13 At the Install menu, select the following options to install CP-BOOTROM:

<e> to install CP-BOOTROM
<y> to start the upgrade
<a> to upgrade CP-BOOTROM from the hard disk drive
- 14 At the Install menu, select the following options to install IOP-ROM:

<f> to install IOP-ROM
<y> to start the upgrade
<a> to upgrade IOP-ROM from the hard disk drive
- 15 Remove the diskette from IODU/C 0.

16 Select the following options to quit and reload the system:

- <q> to quit
- <y> to confirm quit
- <a> to reboot the system

The system will automatically perform a sysload and system initialization during which several messages will appear on the system terminal. Wait until initialization has finished (INI messages are no longer displayed on the system terminal) before continuing.

17 In Core 0, enable the NT6D65 CNI cards by setting the ENB/DIS faceplate switches to ENB.

18 Connect a terminal to the CPSI port in Core 1 to J25 of the I/O panel in the back of the core.

19 In Core 0, perform the following steps in uninterrupted sequence:

- press and release the MAN RST button
- when SYS700 messages appear on CP 0 LCD display, set the MAINT/NORM switch to NORM.

Within 60 seconds, the LCD will display the following messages, confirming the process.

**RUNNING ROM OS
ENTERING CP VOTE**

An "HWI534" message from the CPSI or SDI port indicates the start of memory synchronization. Within 10 minutes, an HWI533 message on Core 1 CPSI or SDI TTY indicates the memory synchronization is taking place. Wait until the memory synchronization is complete before continuing.

20 Set the MAINT/NORM switch on the CP card in Core 1 to NORM.

21 Synchronize the disk drives:

- LD 137** to load the overlay
- STAT** to get the status of both CMDUs, IOPs and redundancy
- SYNC** to synchronize the disk drives
- TEST CMDU** Performs hard and floppy disk test.
- ****** to exit the program

Completing the upgrade

To complete the upgrade, verify CPU and CNI status and perform a data dump.

- 1 Verify CPU redundancy and CNI function:

LD 135	to load the overlay
STAT CPU	to check the status of the CPU
STAT CNI	to verify function of the CNIs
TEST CPU	to test the CPU
SCPU	switch CPUs
STAT CPU	to check the status of the CPU
STAT CNI	to verify function of the CNIs
TEST CPU	to test the CPU
SCPU	switch to CPUs
****	to exit the program

Backup the customer database on 2MB diskettes.

- 2 Load the Equipment Data Dump Program (LD 43). At the prompt, enter

LD 43	to load the program
--------------	---------------------

- 3 When "EDD000" appears on the terminal, enter

EDD	to begin the data dump
------------	------------------------

- 4 When "DATADUMP COMPLETE" and "DATABASE BACKUP COMPLETE" appear on the terminal, enter



CAUTION **Loss of Data**

If the data dump is not successful, do not continue; contact your technical support organization. A data dump problem must be corrected before proceeding.

****	to exit the program
-------------	---------------------

- 5 Evaluate the number of call registers and telephone buffers that are configured for the system. Refer to *Capacity Engineering* (553-3001-149).

The CP card upgrade is complete.

Upgrading to a new CP card in an Option 51C



CAUTION **Service Interruption**

Installing the NT9D19, NT5D10 or NT5D03CP card in the Option 51C will require system downtime. Schedule for this when planning the system upgrade.

Power to the entire column must be shut off to perform this upgrade. This will cause loss of service to the whole telephone system. Plan the upgrade for a time when the impact to the telephone users will be minimal.

Installing an NT9D19, NT5D10 or NT5D03 CP card in an Option 51C system consists of:

- installing a new CP card in the Core module
- upgrading the system software and CP ROMs

Performing a data dump

Before starting the upgrade procedure, make a backup copy of the customer database using the data dump routine:

- 1 Log into the system.
- 2 Load the Equipment Data Dump Program (LD 43). At the prompt, enter **LD 43** to load the program
- 3 When "EDD000" appears on the terminal, enter **EDD** to begin the data dump

- 4 When "DATADUMP COMPLETE" and "DATABASE BACKUP COMPLETE" appear on the terminal, enter



CAUTION
Loss of Data

If the data dump is not successful, do not continue; contact your technical support organization. A data dump problem must be corrected before proceeding

**** to exit the program

Installing the new CP card and system software

At this time you will install the new CP card and system software if it is not already installed on the hard drive.

- 1 Connect a terminal to the CPSI port in the Core module to J25 of the I/O panel at the back of the core. Be sure it is configured as follows. The recommended baud rate is 9600, to be the same as the CPSI port.
 - 7 data bits
 - 1 stop bit
 - Space parity
 - Full duplex
 - XON protocol
- 2 Set the NORM/MAINT switch to MAINT, disengage the lock latches and remove the CP card from the Core module.
- 3 Insert the Install diskette that corresponds to the CP card you will be installing into the IODU/C.

- 4 Install the CD-ROM disk into the CD-ROM drive. To install the CD-ROM:
 - press the button on the CD-ROM drive to open the CD-ROM disk holder
 - place the CD-ROM disk into the holder with the disk label showing
 - press the button again to close the CD-ROM disk holder (don't push the holder in by hand)

- 5 Verify that the MAINT/NORM switch on the new NT9D19, NT5D10 or NT5D03 CP card is set to NORM.

- 6 Verify that the ENB/DIS switch on the CNI card is set to ENB.

- 7 Insert the new CP card in the same slot in the Core module and secure the lock latches.
 The system will automatically load the software install program.

- 8 When the NT Logo Screen appears on the terminal, the Software Installation Tool has loaded. Press **<CR>** to go to the Install Main Menu.

- 9 Set the system date and time. When prompted to enter the time and date, enter it in the following format. A space or dash can be used to separate the items.
 dd mm yyyy
 hh mm ss
 or
 dd-mm-yyyy
 hh-mm-ss

- 10 At the Main menu select **<u>** to go to the Install menu.

- 11 Insert the Keycode diskette when prompted and select **<a>** to continue with the keycode validation.
 Once the keycode is validated against the Security Device, the Install menu is displayed.

- 12 When the Install menu appears, select the following options in sequence when you are prompted to do so:
<a> to install software, CP-BOOT ROM and IOP-ROM

- <y> to start installation
 - <a> to continue with the upgrade
- 13 Following the software installation, install the CP-BOOT and IOP-ROMs. From the menu select the following:
- <a> to continue with ROM upgrade
 - <a> to continue with ROM upgrade (CP-BOOT ROM)
 - <y> to start installation
 - <a> to continue with ROM upgrade (IOP-ROM)
- 14 Remove the diskette from the IODU/C.
- 15 Select the following options to quit and reload the system:
- <q> to quit
 - <yes> to confirm quit
 - <a> to reboot the system

The system will automatically perform a sysload and system initialization during which several messages will appear on the system terminal. Wait until initialization has finished (INI messages are no longer displayed on the system terminal) before continuing.

Note 1: SYS4695 is not an error message. This message is cleared when you perform a data dump.

Note 2: If you are converting from a software release prior to release 24, the following message appears on the system terminal:

DATA CONVERSION

RELEASE XX.xx TO RELEASE YY.yy

- 16 Verify that the “DONE” message appears on the system terminal.
- Note:** The SYSTEM INI message may take 70 seconds or more to appear.

Completing the upgrade

To complete the CP card upgrade, verify CPU and CNI status.

- 1 Verify CPU and CNI functionality:

LD 135 to load the overlay
STAT CPU to check the CPU status
STAT CNI to verify CNI functionality
******** to exit the program

Backup the customer database to 2MB diskettes:

- 2 Load the Equipment Data Dump Program (LD 43). At the prompt, enter

LD 43 to load the program

- 3 When "EDD000" appears on the terminal, enter

EDD to begin the data dump

- 4 When "DATADUMP COMPLETE" and "DATABASE BACKUP COMPLETE" appear on the terminal, enter



CAUTION
Loss of Data

If the data dump is not successful, do not continue; contact your technical support organization. A data dump problem must be corrected before proceeding.

******** to exit the program

- 5 Evaluate the number of call registers and telephone buffers that are configured for the system. Refer to *Capacity Engineering* (553-3001-149).

The CP card upgrade is complete.

CD-ROM Software Installation Tool

Contents

The following are the topics in this section:

Status Summary Charts	280
Messages	282
Introductory Screen	283
Install Menu	284
Installing Software, CP-BOOTROM, and IOP-ROM	286
Installing Software, Database, CP-BOOTROM, and IOP-ROM ...	286
Installing Software only	286
Installing Database only	287
Install CP-BOOTROM	288
Install CP-ROM (NT6D66 CP cards only)	288
Install IOP-ROM	289
Reinstalling CP-Software	289
To copy system software from the other Core	290
To go to the Tools Menu	290
To Install Keycode only	290
To quit	290
Tools Menu	292
Setting the system date and time	294
Partitioning the hard disk	295
Displaying the hard disk partition size	295
Regenerate the PDT password	295
To install CP-software at a specified slot	295
To print the CD-ROM content	295
To print the Keycode content	297

To print the Security Device content	298
To check the customer-specific part of the CD-ROM	298
To manually create a Keycode diskette	298
To archive the existing database	299
To go back to the Main Menu	299

Reference list

The following are the references in this section:

- *Administration* (553-3001-311)
- *Hardware Replacement* (553-3001-520)

This chapter details the screen displays and options of the CD-ROM Software Installation Tool (hereafter referred to as “Software Installation Tool”) that is compatible on Option 51C, 61C, 81, and 81C systems equipped with the NT5D61 Input/Output Disk Unit with CD-ROM (IODU/C).

This tool is based on the existing Software Installation Tool, but has notable differences in menus as well as new functionality to support installation of software from CD-ROM, copying of system software from Core to Core, copying of database from Core to Core, and Keycode installation.

The IODU/C card no longer uses a Security Cartridge, but instead uses both a Security Device and an electronic keycode file. This keycode file is stored on a 2MB diskette and must be inserted into the IODU/C floppy drive and authenticated each time the Software Installation Tool is loaded and the Install Menu is accessed.

On systems equipped with an IODU/C, the database is stored on 2MB diskettes, not 4MB diskettes. A Database Transfer Utility diskette, specific to Call Processor type, is available to convert a 4MB database to a 2MB database. Refer to *NT5D61 IODU/C Reference Guide* or *Hardware Replacement* (553-3001-520) for procedures on replacing CMDU or IOP/CMDU cards with IODU/C.

The Tools Menu has new options for finding the CD-ROM status (option <g>), printing the Keycode (option <h>), printing information about the Security Device (option <i>), checking the customer-specific CD-ROM data (<j>), manually creating a Keycode diskette (<k>), and archiving the database (<s>).

Do not turn off the system during the installation process. If you need to quit the installation process, do so from within the Software Installation Tool before powering off the system.

Read the entire procedure before attempting to perform an installation.

Before the Software Installation Tool is activated, verify that the system is in split mode (not applicable for Option 51C) and that a terminal is connected to CPSI port J25 on the I/O panel (in the inactive Core for dual CPU systems). Option 51C systems will be taken out of service.

To activate the Software Installation Tool, insert the Install diskette specific to your Call Processor type and the CD-ROM containing system software (if you will be installing that component). Press the MAN RST button on the CP card in the same Core.

The IODU/C Software Installation Tool requires the following items:

- 2MB diskettes (used to store, backup, and restore the database)
- an Install diskette specific to the system's Call Processor card
- a Keycode diskette
- a CD-ROM containing system software

Note: If you will be installing system software from CD-ROM (options <a>, , or <c> from the Install Menu), then insert the CD into the CD-ROM drive before loading the Software Installation Tool.



CAUTION
Loss of Data

The screens shown in this procedure are examples. They are not intended to exactly represent the displays that will appear for your system, nor do the choices entered represent those you should necessarily choose. Be sure to watch the terminal display, and follow the on-screen instructions.

Pay close attention to the menus when they appear; they display the options available at any given stage.

Status Summary Charts

Status Summary Charts are displayed for the purpose of informing the user about what items will be installed or have been installed. This example is shown when option (all components) is chosen from the Install Menu.

Note: Your screen may differ from the below example.

INSTALLATION STATUS SUMMARY

Option	Choice	Status	Comment
SW: CD to disk	yes		from xxxx to xxxx
SW: disk to ROM	yes		
Database	yes		
CP-BOOTROM	yes		
IOP-ROM	yes		

Please enter:

<CR> -> <y> - Yes, start Installation.

<n> - No, stop Installation. Return to the Main Menu.

Enter Choice> **y**

553-7731

The possible values and meanings for each column are defined below.

— Choice

- **yes** indicates the item will be installed
- **no** indicates the item was not selected, and will not be updated.

— Status

- **quit** indicates the quit option was used, and the process was exited.
- **ok** indicates the choice was installed successfully.
- **error** indicates the installation was not successful. A system message is given when the Software Installation Tool encounters a problem. Follow the actions required by the message.
- **ignore** applies to the CP ROM and IOP-ROM upgrade only. This appears when the process was exited when asked to replace a release and issue with the same release and issue.
- **blank** indicates the status is not yet determined if Choice = Yes. If Choice = No, the field remains blank.

— Comment

- **from rel <number> to rel <number>** gives the Source and Target release and issue numbers.

Messages

When the Software Installation Tool encounters a problem, a system message appears on the terminal display. These messages fall into two categories: warning and non-warning.

Warning messages are not critical errors. The Software Installation Tool proceeds with the installation following the appearance of this message. Refer to *Administration* (553-3001-311) for details regarding these messages.

Non-warning messages appear when a critical problem is encountered. The Software Installation Tool stops the process, and an action is recommended. When the action is complete, the Software Installation Tool can be restarted. In some cases, the tool allows you to restart by pressing the carriage return <CR>.

Installation messages (INST) are defined fully in *Administration* (553-3001-311). Refer to that document for more details.

Introductory Screen

The first screen that appears after loading the NT5D61 Software Installation Tool is the NT Logo Screen.

This screen is displayed after the user presses <CR> from the NT Logo Screen. From this screen, the user may select option <u> to go to the Install Menu, or <t> to go to the Tools Menu. Alternately, option <q> to quit is available at this screen.

```
Nortel Meridian - 1 Software/Database/PEROM CDROM INSTALL Tool (x11)
=====
                M A I N   M E N U

The Software Installation Tool will install or upgrade Meridian-1
System Software, Database and the PE-ROM (both CP and IOP ROM).
You will be prompted throughout the installation and given the
opportunity to quit at any time.

Please enter:
<CR>--> <u> - To Install menu.
         <t> - To Tools menu.
         <q> - Quit.

Enter choice > u
```

553-7780

Install Menu

Note: A Keycode diskette is required before accessing the Install Menu.

Before the Install Menu screen is displayed, an intermediary screen shown below prompts the user to insert their Keycode diskette for validation against the Security Device.

```
Nortel Meridian - 1 Software/Database/PEROM CDROM INSTALL Tool (x11)
-----

Please insert the diskette with the keycode file into the floppy
drive.

Please enter:
<CR>--> <a> - Continue with the keycode validation
        (the keycode diskette is in the floppy drive).
        <q> - Quit.

Enter Choice > a
```

553-7729

Following successful Keycode validation, the Install Menu screen is displayed, as shown below.

Note: If the Software Installation Tool is loaded on a Core equipped with an NT5D61BA IODU/C (which lacks a CD-ROM drive), options <a>, , and <c> will not appear.

Nortel Meridian - 1 Software/Database/PEROM CDROM INSTALL Tool (x11)

INSTALL MENU

The Software Installation Tool will install or upgrade Meridian-1 System Software, Database and the PE-ROM (both CP and IOP ROM). You will be prompted throughout the installation and given the opportunity to quit at any time.

Please enter:

- <CR>--> <a> - To install Software, CP-BOOTROM, IOP-ROM.
 - To install Software, Database, CP-BOOTROM, IOP-ROM.
<c> - To install Software only.
<d> - To install Database only.
<e> - To install CP-BOOTROM only.
<f> - To install IOP-ROM only.
<g> - To reinstall CP-Software.
<o> - To copy System Software from the other Core.
<t> - To go to the Tools menu.
<k> - To install Keycode only.
For Feature Expansion, use OVL143.
<q> - Quit.

Enter Choice >

553-7789

Each option from the Install Menu is described in the following pages.

Installing Software, CP-BOOTROM, and IOP-ROM

Note: For dual-CPU systems, verify that the system is operating in split mode before activating the Software Installation Tool.

This option is selected for the sequential installation of software, CP-BOOTROM, and IOP-ROM. This option differs from option in that the database is not installed. Use option <a> when going to a later software release or for a software upissue.

Installing Software, Database, CP-BOOTROM, and IOP-ROM

Note: For dual-CPU systems, verify that the system is operating in split mode before activating the Software Installation Tool.

This option is selected when you wish to sequentially install all components - software, database, CP-BOOTROM, and IOP-ROM.

Option is used during the upgrade procedures from NT5D20 IOP/CMDU, NT6D63 IOP and NT6D64 CMDU, NT9D33 SMDU, NTND16 FDU, NT8D69 MDU, and NTND16 MDU cards to NT5D61 IODU/C cards.

Installing Software only

Note: For dual-CPU systems, verify that the system is operating in split mode before activating the Software Installation Tool.

This option is selected when you wish to install system software from the CD-ROM to the hard drive. When selecting option <c>, IOP-ROM and CP-BOOTROM are not installed.

Installing Database only

Note: For dual-CPU systems, verify that the system is operating in split mode before activating the Software Installation Tool.

The Database Menu of the Software Installation Tool is accessed by the <d> option on the Install Menu. The following options are available for installing a database:

```
Nortel Meridian - 1 Software/Database/PEROM CDROM INSTALL Tool (x11)
```

You will now perform the database installation.

Note: If you are installing the Database from a floppy disk, please insert the correct disk now.

Please enter:

```
<CR>--> <a> - Install CUSTOMER Database
          (the customer database diskette must be in the Core 1 disk drive).
          <b> - Install DEFAULT Database
          (the installation CDROM must be in the Core 1 disk drive).
          <d> - Copy Database from the redundant disk.
          <e> - Check the Database that exists on the hard disk.
          <q> - Quit.
```

Enter Choice > a

553-7779

- Option <a> is to install the backup customer database from one or more 2MB diskettes.
- Option allows installation from the CD-ROM containing the default database. This option is used on new systems which have no existing database.
- Option <d> copies the existing database from the redundant Core. This option is used when the database has already been installed on one Core. This option is used when upgrading from IOP/CMDU to IODU/C cards.

- Option <e> displays the version and issue of the current database residing on the Core. If database files are missing, error messages will be printed.



CAUTION
Loss of Data

Before upgrading the system database, be sure a backup of the previous (source) database is on hand. Should any problems arise, it may be necessary to return to the previous database.

Install CP-BOOTROM

Note: Installation of CP-BOOTROM is available on systems with NT9D19, NT5D10 or NT5D03 Call Processor cards only. For systems with the NT6D66 Call Processor card, CP-ROM is installed instead of CP-BOOTROM. See page 288 for installing CP-ROM on a system equipped with an NT6D66.

Note: For dual-CPU systems, verify that the system is operating in split mode before activating the Software Installation Tool.

Option <e> is for installing new CP-BOOTROM. This option is used to install CP-BOOTROM while on Core 0 in a software upgrade, when software has already been installed using options <a> or on Core 1, and software has already been copied onto Core 0 using option <o>.

The next screen displayed after selecting option <e> will show the version of CP-BOOTROM being replaced and version being installed, and the card slot where the CP-BOOTROM is being installed. The user is prompted to select <a> to continue with the CP-BOOTROM upgrade.

Install CP-ROM (NT6D66 CP cards only)

Note: Installation of CP-ROM is available on systems with NT6D66 Call Processor cards only. For systems with the NT9D19, NT5D10 or NT5D03 Call Processor cards, CP-BOOTROM is installed instead of CP-ROM. See page 288 for installing CP-ROM on a system equipped with an NT6D66.

Note: For dual-CPU systems, verify that the system is operating in split mode before activating the Software Installation Tool.

Option <e> is for installing new CP-ROM. This option is used to install CP-ROM while on Core 0 in a software upgrade, when software has already been installed using options <a> or on Core 1, and software has already been copied onto Core 0 using option <o>.

The next screen displayed after selecting option <e> will prompt the user to choose whether to install the CP-ROM from the hard disk (option <a>), or from CD-ROM (option). If software has just been installed successfully, then option <a> should be used. However, if software was not installed, select option to install from CD-ROM.

Install IOP-ROM

Note: For dual-CPU systems, verify that the system is operating in split mode before activating the Software Installation Tool.

Option <f> is for installing new IOP-ROM. This option is used to install IOP-ROM while on Core 0 in a software upgrade, when software has already been installed using options <a> or on Core 1, and software has already been copied onto Core 0 using option <o>, and CP-BOOTROM has been installed using option <e>.

The next screen displayed after selecting option <f> will show the version of IOP-ROM being replaced and version being installed, and the card slot where the IOP-ROM is being installed. The user is prompted to select <a> to continue with the IOP-ROM upgrade.

Reinstalling CP-Software

Note: For dual-CPU systems, verify that the system is operating in split mode before activating the Software Installation Tool.

This option is used if a flash programming error occurs during software installation through options <a>, , or <c>. Option <g>, which assumes that software files have already been installed on the hard disk, copies these files from the hard disk to the Flash EEPROM.

To copy system software from the other Core

Note: For dual-CPU systems, verify that the system is operating in split mode before activating the Software Installation Tool.

Option <o> is used during a software upgrade when software has already been installed on Core 1, and the Software Installation Tool has been loaded on Core 0.

Note: This option does not perform the installation of CP-BOOTROM (option <e>) or IOP-ROM (option <f>).

To go to the Tools Menu

Option <t> displays the Tools Menu and its options, which are described beginning on page 292.

To Install Keycode only

Option <k> is used when you wish to replace an existing Keycode.

To quit

Note: For dual-CPU systems, verify that the system is operating in split mode before activating the Software Installation Tool.

Throughout the installation process, the option to quit is always available. Quitting with the Software Installation Tool quit commands is preferable to pressing the MAN RST button on the CP card, since quitting from the tool will erase unneeded temporary files.

When you are done using the NT5D61 Software Install Tool remove the diskette from the IODU/C and select option <q> to quit from the Main Menu. The terminal displays a confirmation to quit. Pressing <y> confirms the quit.

```
Nortel Meridian - 1 Software/Database/PEROM CDROM INSTALL Tool (x11)
=====
You selected to Quit. Please confirm.

Please enter:
<CR>--> <y> - Yes, Quit.
        <n> - No, DO NOT Quit.

Enter choice > y
```

553-7751

The final screen displayed before quitting reminds the user that the Install diskette should be removed from the IODU/C floppy drive before pressing <a> to reboot the system.

```
Nortel Meridian - 1 Software/Database/PEROM CDROM INSTALL Tool (x11)
=====
You have selected to Quit the Software Installation Tool
You may reboot the system or return to the Main Menu.
Before rebooting the system, remove Install diskette from the floppy drive.

-----
DO NOT REBOOT USING BUTTON!!
-----

Please enter:
<a> - Reboot the system.
<CR>--> <m> - Return to the Main menu.

Enter Choice > a
```

553-7752

Tools Menu

To load the Software Installation Tool which contains the Tools Menu, insert the Install diskette which is compatible with your Call Processor card. Press the MAN RST button on the CP card to load the tool.

The first screen that appears after loading the NT5D61 Software Installation Tool is the NT Logo Screen.

This screen is displayed after the user presses <CR> from the NT Logo Screen. From this screen, selecting option <t> brings the user to the Tools Menu.

```
Nortel Meridian - 1 Software/Database/PEROM CDROM INSTALL Tool (x11)
=====
                               M A I N  M E N U

The Software Installation Tool will install or upgrade Meridian-1
System Software, Database and the PE-ROM (both CP and IOP ROM).
You will be prompted throughout the installation and given the
opportunity to quit at any time.

Please enter:
<CR>--> <u> - To Install menu.
         <t> - To Tools menu.
         <q> - Quit.

Enter choice > t
```

553-7797

Note: Insertion of the Keycode diskette is not required for accessing the Tools Menu.

The Tools Menu has new options for finding the CD-ROM status (option <g>), printing the Keycode (option <h>), printing information about the Security Device (option <i>), checking the customer-specific CD-ROM data (<j>), manually creating a Keycode diskette (<k>), and archiving the database (<s>).

The Tools Menu is displayed below.

```
Nortel Meridian - 1 Software/Database/PEROM CDROM INSTALL Tool (x11)
-----
                T O O L S   M E N U

This is the Tools Menu for Install. You can select the tool that
is appropriate. Please select one of the options below.

Please enter:
<CR>--> <a> - To set the system date and time.
        <b> - To partition the hard disk.
        <c> - To display the partition size of hard disk.
        <d> - To regenerate PDT Password.
        <g> - To print CDROM content.
        <h> - To print Keycode content.
        <i> - To print Security Device content.
        <j> - To Check the customer specific part of CDROM.
        <k> - To manually create Keycode floppy diskette.
        <r> - To install Keycode only.
        <s> - To archive existing database.
        <z> - To check MDU connection.
        <m> - To return to the Main Menu

                    553-7796

Enter choice >
```

Each option from the Tools Menu is described in the following pages.

Setting the system date and time

This option is used to change the system date and time for the system's internal clock. The correct date and time will ensure that files are time-stamped accurately.

Nortel Meridian - 1 Software/Database/PEROM CDRom INSTALL Tool (x11)

You have selected the option to set the system date and time.
This will change the internal clock of your system to a new data and time.

The system date and time are also used by Install to time-stamp the new files created.

Pressing the carriage return at the prompt below will leave the system date or time unchanged.

Please enter the new date or time.

Current date is: Tuesday 04-29-1997
Enter new date (dd mm yyyy) ? 30 4 1997
Date is set to: Wednesday 04-30-1997

Current time is: 15:52:00
Enter new time (hh mm ss) ? 15 05 45
Time is set to: 15 05 45

System Date and Time now is:
Wednesday 04-30-1997, 15:05:46

553-7743

Partitioning the hard disk

Note: Option requires a password, and should only be performed by Nortel Networks support personnel.



CAUTION **Loss of Data**

Partitioning a disk erases all files from it.

Displaying the hard disk partition size

Option <c> displays the partition sizes of the hard disk. The manufacturer and model number of the hard disk are also displayed.

```

IODU 0
Hard Disk from: MAXTOR:7120SCS, Size:124MB,Sectors:248502
Unprotected   Part Size:30MB, Sectors: 60000
Spare         Part Size:30MB, Sectors: 60000
CardId        Part Size:1MB, Sectors: 2000
Protected     Part Size:60MB, Sectors: 120000
  
```

553-7742

Regenerate the PDT password

Note: Option <d> requires a password, and should only be performed by Nortel Networks support personnel.

To install CP-software at a specified slot

Note: Option <e> requires a password, and should only be performed by Nortel Networks support personnel.

To print the CD-ROM content

Option <g> is used to find whether a CD-ROM exists on each IODU/C, and whether its sectors are readable. After selecting <g>, three options are available:

- **Fast** readability test, which takes about 17 seconds for each CD-ROM and reads 1/30th of the CD-ROM sectors.

- **Extensive** readability test, which takes about 3 minutes for each CD-ROM and reads 1/4th of the CD-ROM sectors.
- **Total** readability test, which takes about 6 minutes for each CD-ROM and reads all sectors of the CD-ROMs.

Note: The failure of a CD-ROM drive to read a known good CD-ROM may indicate a problem with the CD-ROM drive.

To print the Keycode content

Option <h> is used when you wish to display the information contained in the current Keycode. The information displayed includes machine type, software version, ISM limits, and which feature packages are enabled.

```

System Serial Number      : 46379
Software Version         : 1811
System Type              : Option 61C
Call Processor           : CP68030
Release                  : 23
Issue                    : 30G
NTI Order Number         : 000000000000
NT SDID - 1              : 00000000
NT SDID - 2              : 00000000
Date and Time of Manufacture : 06/03/1998 - 14:53:38

```

Note: () indicates that information is not available

ISM Limits:

```

Loop Limit               : 32
Sys TNs Limit            : 32767
ACD Agt Limit            : 32767
ACD DNs Limit            : 24000
AST Limit                 : 32767
DSL Limit                 : 100
LTID Limit                : 100
DCH Limit                 : 64
AML Limit                 : 16
MPH DSL Limit            : 100
RAN CON Limit            : 32767
RAN RTE Limit            : 512
MUS CON Limit            : 1000
Brand Index              : 1

```

Options Packages:

```

0-2 4-5 7-25 28-29 232-55 57-65
67 70-77 79-81 84 86 88-93
95 98-105 107-109 111 113-121 125
127 129 132-134 136 139-140 145-151
153-155 157-160 162 164 170 172-175
178-181 186 191-192 196 202-212 214-216
218-219 222-225 227-229 231 233-235 240
242-243 245-248 250-251 253-256 258-259 262-263
286 290-293 296-297 301-303 305-310 313-316
321 323-324 327-335

```

553-7745

To print the Security Device content

Option <i> shows specific information about the Security Device, such as Serial Number. This enables the user to find information about the Security Device without removing the NT5D61 IODU/C card.

Engineering Code (Side x)	:NT5D61AA	
Card Serial Number	:06NNTM1831RRC3 IOP	
NT SDID	:20000080	
Security Device Type	:NT_TCH	
System Serial Number	:46379	553-7746

To check the customer-specific part of the CD-ROM

Option <j> is used to check the readability of the Keycode-specified system software on the CD-ROM drive. Once all files have been checked successfully, the message “Checking directory /cdx/xxx_DMR.Nxx ended successfully” is displayed to indicate completion.

To manually create a Keycode diskette

Option <k> is used to manually type in a keycode and save it to a 2MB diskette. Upon selecting this option, you may enter the characters into 21 Keycode entry lines of 16 characters each, which will compose the Keycode file to be saved on a 2MB diskette in the floppy drive.

Characters may be entered on the Keycode entry lines in one of two ways:

- manually entering each 16-character line followed by a <CR> or
- “pasting” each individual 16-character line, then pressing <CR> (available on a PC running Windows 95®, using the Copy command (Control-C) to copy a line of characters from a keycode file, positioning the cursor on the current Keycode entry line, and using the Paste command (Control-V) to paste the line).

If a line is entered which does not have 16 characters, a message will be displayed informing the user to reenter the line correctly.

To archive the existing database

This option is one of the methods (the ABKO and BKO commands from overlay 143 are other methods) that is available to backup the customer database to 2MB diskettes. The size of the backup files and the estimated number of 2MB diskettes required to store the database will be displayed.

To go back to the Main Menu

Option <m> is selected to return the user from the Tools Menu to the Main Menu, where the user may select to quit (<q>) or go to the Install Menu (<u>).

Index

A

- AST sets
 - Incremental Software Management, 18
- Automatic Inline Conversion
 - X11 releases supporting, 12
- Auxiliary Processors, post-conversion power up of, 15

C

- call processing, effect of software upgrades on, 10
- CCED system messages
 - CP Card replacement, 167
- CDR Expansion, 15
- CD-ROM, upgrading disk drives to, 15
- conversion media
 - defined, 10
- converting software
 - Automatic Inline Conversion, 12
 - ISDN systems, 16
 - post-conversion procedure, 251
 - pre-conversion procedure, 25
 - systems supported in documentation, 14
- country code, 176
- CP (Call Processor) Cards
 - installing, 165
- CP card upgrade, 260, 271
- CPU (central processor unit), 14
- creating keycode diskettes, 199
- creating shortcuts, 174

D

- data cartridges
 - installing new, 107

- data dumps
 - between software versions, upissues, release, 15
 - pre-conversion procedure, 27
- data, preventing corruption of, 15, 26
- databases
 - verifying required updates, 251
- D-channel monitors, 18
- D-channel parameters, 17
- DCHI ports configured as TTY ports, 18
- Dial-Up Networking®, 175
- Dial-Up Server, 177
- Distributor Keycode Application, 169, 189
- DKA, 169, 189
 - Dial-Up Networking®, 175
 - hardware and software requirements, 170
 - installation, 170
 - Manual entry, 186
 - modem requirements, 170
 - Reading from a File, 185
- DN Expansion, 15
- downloading keycodes, 178

E

- error messages, 86

F

- file names, 181

H

- hardware requirements
 - converting software, 25
- HWI0533 messages in CP Card replacement, 167

- I**
 - INI messages, truncated, 18
 - initialization, system, 14
 - installation of DKA, 170
 - installing
 - data cartridges, 107
 - ISDN (Integrated Services Digital Network) systems
 - converting, 16
 - ISM (Incremental Software Management), 18
- K**
 - Keycode Delivery System (KDS), 178
 - keycode download, 178
 - keycodes, 14
 - creating keycode diskettes, 199
 - downloading, 178
 - file name, 181
 - manual entry, 186
 - troubleshooting, 184
- L**
 - LD 135 program
 - CP Card replacement, 164
 - LD 17 program, 26
 - LD 43 program, 13
 - LD 66 conversion program, 13
- M**
 - machine types
 - X11 releases supported by, 22
 - manually entering a keycode, 186
 - memory
 - increasing
 - X11 release 18 and later, 153
 - X11 release 21, 153
 - X11 release 24 and earlier, 153
 - pre-conversion procedure, 26
 - required for conversions, 14
 - modem configuration, 175
 - modem requirements (DKA), 170
- N**
 - network protocols, 177
 - NT order number, 181
 - NT systems
 - parallel reloads
 - procedure, 32
 - X11 releases supported, 22
 - NT5D03 CP cards, 19
 - NT5D10 CP cards, 19, 20
 - NT5D61 IODU/C card, 13
 - CD-ROM, 13, 15
 - Database Transfer Utility, 14
 - Install diskette, 13
 - Keycode diskette, 13
 - security device, 13
 - NT6D11 International ISDN D-Channel cards, 16
 - NT8D04 Superloop Network cards, 14
 - NT9D10/03 Call Processor Cards
 - installing, 165
 - NT9D19, 260
 - NT9D19 CP cards, 19, 20
 - NTI number, 181
- O**
 - option 21E systems
 - X11 releases supported, 22
 - option 51 systems
 - X11 releases supported, 22
 - option 51C systems
 - X11 releases supported, 22
 - option 61 systems
 - parallel reloads
 - procedures, 32
 - X11 releases supported, 22
 - option 61C systems
 - ISDN site upgrades, 16
 - parallel reloads
 - backing out of, 46
 - option 71 systems
 - X11 releases
 - supported, 24

option 81 systems
 ISDN site upgrades, 16
 parallel reloads
 backing out of, 46
 X11 releases
 supported, 23

option 81C systems
 parallel reloads
 backing out of, 46
 X11 releases
 supported, 24

P

parallel reloads
 backing out of
 options 61C/81/81C, 46
 IODU/C systems, 32
 monitoring CPU during, 14
 pre-conversion procedure and, 27
 procedure
 NT/RT/61 systems, 32

patches
 pre-conversion procedure and, 26
 removal prior to conversion, 18

post-conversion procedure
 overview, 251
 steps, 252

pre-conversion procedure
 overview, 25
 steps, 26

printouts
 site data, 29, 255

PSDL (Peripheral Software Download), system
 initialization and, 14

Q

QPC742D FDI Cards, 15
QPC757 DCHI cards (vintage C), 16

R

read from a file, 185
release 23 memory requirements, 21, 152

RT systems
 parallel reloads
 procedure, 32
 X11 releases supported, 22

S

SDI (Serial Data Interface) cards
 monitoring CPUs during parallel reloads, 14
 security device, 13
 server type, 177
 server types, 177
 single CPU systems
 call processing disruptions on, 10
 site data printouts
 post-conversion procedure, 255
 pre-conversion procedure, 29

Software Installation Tool
 description of menus, 81

software packaging, 14

source software
 defined, 10

STE systems
 X11 releases supported, 22

system ID, 181

T

target software, 10
TCP/IP, 177
template audits, 26
troubleshooting, 184
TTY ports, DCHI ports configured as, 18

U

Upgrading to a new Call Processor card, 259

V

verifying software conversion process, 251

X

X11 release
 supporting Automatic Inline Conversion, 12
X11 release 15.55 (Incremental Software
 Management), 18

- X11 release 18 (and later)
 - increasing memory, 153
 - ISDN site upgrades, 16
- X11 release 19
 - ISM tracking, 18
- X11 release 21
 - increasing memory, 153
- X11 release 23, 19
- X11 release 24 (and earlier), increasing memory in,
153
- X11 releases
 - supported by machine types, 22
- XT systems
 - X11 releases
 - supported, 22

Meridian 1

Software Conversion Procedures

Copyright ©1989–2002 Nortel Networks

All Rights Reserved

Information is subject to change without notice. Nortel Networks reserves the right to make changes in design or components as progress in engineering and manufacturing may warrant. This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC rules, and the radio interference regulations of Industry Canada. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

SL-1 and Meridian 1 are trademarks of Nortel Networks. Intel and Pentium are trademarks of Intel Corporation. cPCI is a trademark of PCI Industrial Computer Manufacturers Group.

Publication number: 553-2001-320

Document release: Standard 23.00

Date: January 2002

Printed in Canada

