 


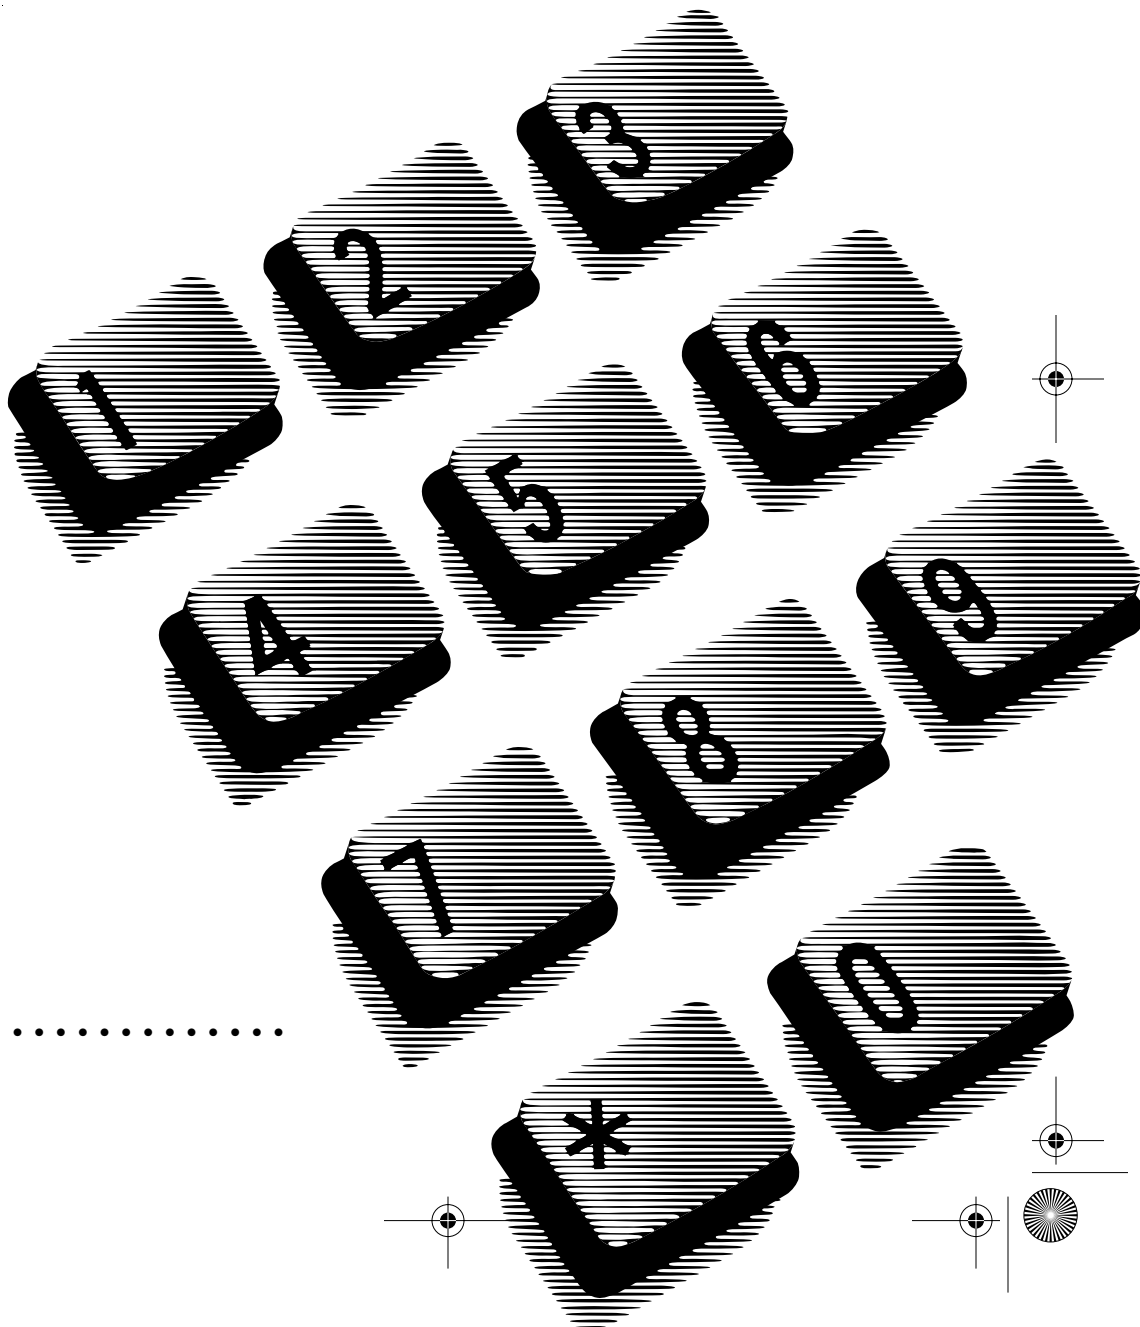

norstar

Norstar-PLUS Modular ICS
Prime Telephone User Card



Using your prime telephone

Your telephone has been programmed as a prime telephone for particular external lines on your system. This means that any external call on those lines that is not answered, or gets transferred, parked, or put on hold and is not picked up, or any call that for one reason or another is not being handled, rings at your telephone. Your system can have several prime telephones.

Understanding rings and indicators

Your telephone rings differently for different types of calls. External calls ring normally, internal calls give two short rings. Redirected external calls ring as internal calls.

The indicator beside a button tells you the status of a call on a line, line pool, answer, or intercom button.

lit	The line is active on a call.
fast flash	You have put a call on hold on that line.
medium flash	There is an incoming call.
slow flash	Somebody else has put a call on hold on that line.
unlit	The line is available.

Interpreting display messages

When an unanswered call rings at your telephone, you may see one of the following displays:

DND from 223

The person at telephone 223 forwarded a call to you using Do Not Disturb.

DND transfer

The system transferred a call to you from a telephone in Do Not Disturb mode.

DRT Line001

Nobody answered this call, so the system transferred it to you.

Held by CAROL

Carol held a call too long, so the system transferred the call to you.

**Line001 callback
CALLBACK**

A call on line 001 was camped, parked, or transferred, but no one has answered it.

Press **CALLBACK**

or the line button to connect to the call.

Line001 to prime

There is no telephone that can receive a call on line 001, so the system transferred it to you.

Line007>BRENDA

A call on line 007 was forwarded or routed to Brenda, but was not answered.

Line007 Line121

The call coming in on line 007 was routed to target line 121. Line 121 is busy so the system transferred the call to you.

Handling calls

Answering many calls

Sometimes calls come in faster than you can answer them. When you have several calls ringing, use Call Queuing to answer the next call.

1. Enter the Call Queuing feature code (**Feature** **8** **0** **1**).

If more than one call is waiting, priority is given to incoming external calls over callback, camped, or transferred calls.

Leaving a message for a co-worker

You can use Norstar's Message feature to leave someone a message to call you.

1. Enter the Message feature code (**Feature** **1**).
2. Press **ADD**. (This step is not necessary on a telephone with a one-line display.)
3. Dial the internal number of the person you want to send a message to.

That person's telephone displays **Message for you**.

Transferring a call

When you want to transfer a call to someone:

1. Press **TRANSFER**.
2. Dial the number of the person you want to transfer the call to.
3. If you want to speak to the person first, wait for them to answer.
4. Press **JOIN**.

Transferring a call when a telephone is busy

When a telephone is busy, or when transfer is denied, you can use Camp-on to transfer a call.

1. Enter the Camp-on feature code (**Feature** **8** **2**).
2. Dial the internal number of the person you want to transfer the call to.

The person is notified that they have a camped call waiting.

Transferring a call to a co-worker who is not at their desk

If a person is not at their desk, but it's important that you get a call to them, you can park the call and announce it using Page.

1. Enter the Call Park feature code (**Feature** **7** **4**). The display shows the retrieval code.
2. Press **PAGE**.
3. Select the appropriate type of page. Your system coordinator can explain the different types to you.
4. Page the person and ask them to answer the call using the retrieval code.

The person can retrieve the call from any Norstar telephone.



Interrupting a co-worker's current call

If your co-worker is on a call and a second important call comes in, you can interrupt their current call.

1. Dial the number of your co-worker. The display reads **On another call**.
2. Enter the Priority Call feature code ().

After a pause, your call goes through. Your co-worker can stop your priority call from going through by using the Do Not Disturb feature code. (Some prime telephones may not support this feature. See your system coordinator.)

Monitoring the status of someone's telephone

If you have an autodial button or an answer button with an indicator programmed for someone's telephone, you can monitor the status of their telephone by watching the indicator next to their button. You can also use Ring Again to tell you when a busy or unanswered telephone becomes available.

1. Dial the number of the person you want to speak to. You will hear either ringing, or a busy signal.
2. Press **LATER**. The display reads **Ring Again ?**.
3. Press **YES**.

When the person hangs up or next uses their telephone, your telephone rings and the display asks if you want to call the person. Press **YES** to call them.

Making sure calls are answered when you are away from your desk

When you are away from your desk, you can make sure calls get answered by forwarding your calls to someone else.

1. Enter the Call Forward feature code ().
2. Dial the number of the person who will be answering your calls.

Your calls now ring at that person's telephone.

 
To cancel Call Forward:

1. Enter the Cancel Call Forward feature code ().

A more sophisticated way to provide alternate answering while you are away is to invoke a Service Mode. Ask your system coordinator for more information on Service Modes.

Providing backup answering for internal calls

In addition to providing backup answering for external calls, you can provide backup answering for people's internal calls using Call Forward. Individuals can forward all their calls to you. Your system can also be programmed so that you answer all calls to telephones that are busy or do not answer. See your system coordinator for information on Call Forward Busy and Call Forward No Answer.





Personalizing your telephone

Programming memory buttons for frequently used features

You can program memory buttons for one-touch access to features that you use often like Transfer, Message, and Ring Again.

1. Press **Feature** ***** **3**.
2. Press the button you want to program.
3. Press **Feature** and enter the feature code you want to program.
4. Label the button.

You can now use the feature by simply pressing the programmed button. You cannot program line, incoming line group, intercom, answer, or Handsfree/Mute buttons.

Programming memory buttons for frequently called numbers

You can program memory buttons for one-touch access to numbers that you call often.

1. Press **Feature** ***** **1** to program an external number or **Feature** ***** **2** to program an internal number.
2. Press the button you want to program.
3. For external numbers, if you want this autodial button to use a particular line or line pool, select that line or line pool.
4. Dial the number you want to program.
5. For external numbers, press **Hold** or **OK** when finished.
6. Label the button.

 
You can now call the person by simply pressing the programmed button. You cannot program line, incoming line group, intercom, answer, or Handsfree/Mute buttons.

 
 
Moving line buttons

You can arrange the buttons on your telephone to suit your needs.

1. Press **Feature** ***** **8** **1**.
2. Press the line button you want to move.
3. Press the button you want to move that line to.
The buttons are exchanged.
4. Press **Rls**.
5. Exchange the button caps.

You cannot choose a button other than a line or incoming line group button as the button to move in step 2. You cannot exchange a line button with an answer, intercom or Handsfree/Mute button.





Meridian and Norstar are trademarks of Northern Telecom.
Meridian Norstar is manufactured by Northern Telecom.
This document is for use with Meridian Norstar- PLUS Modular ICS.

P0810400 Issue 03
Printed in Canada

